






## Montážní návod


### Čtvercový sprchový kout HYD-SK-ZAR














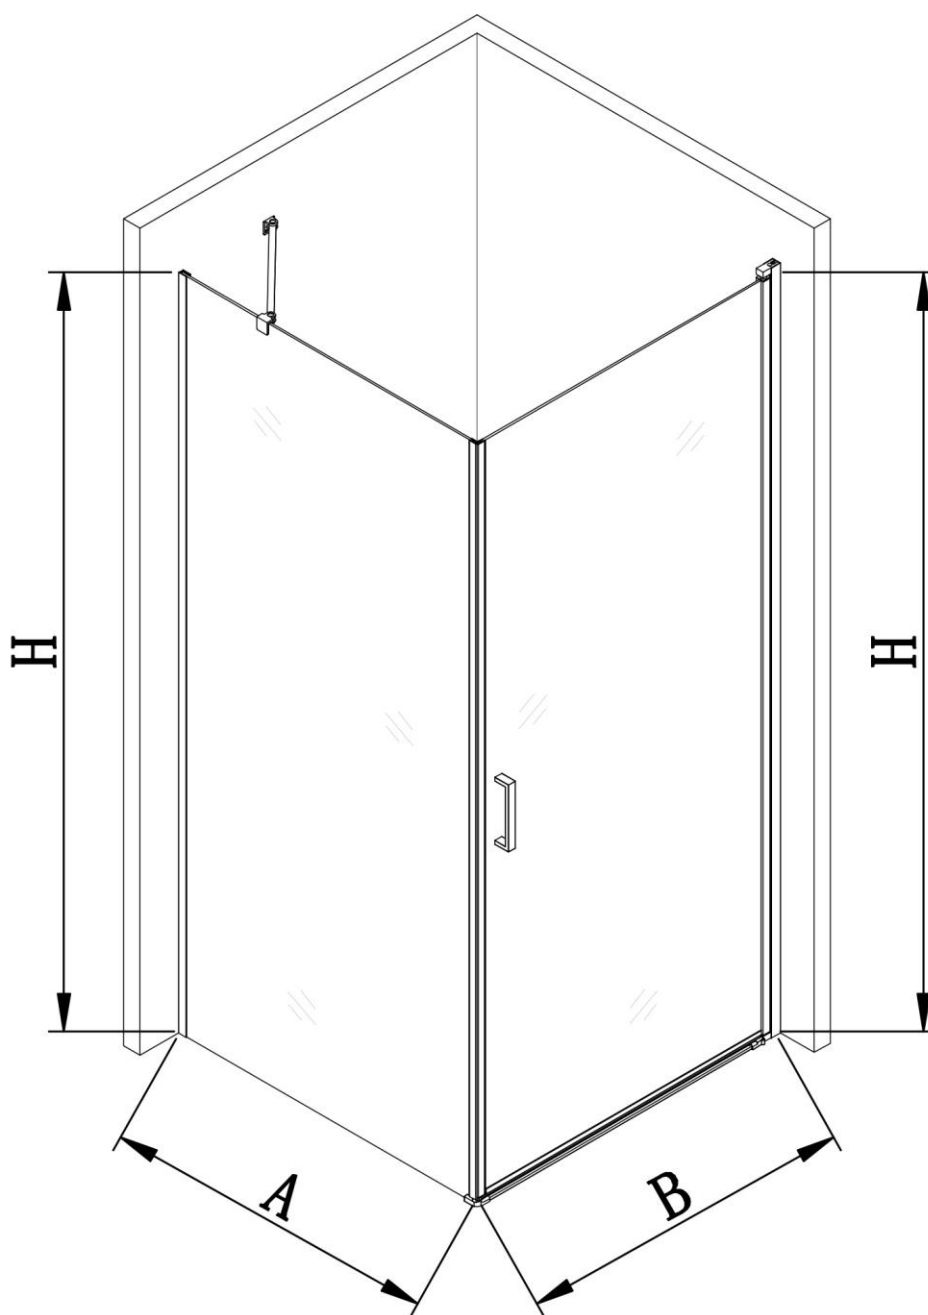


**H=195cm**









ZAR-800	A=78.5-80cm	B=78.5-80cm
ZAR-900	A=88.5-90cm	B=88.5-90cm
ZAR-1000	A=98.5-100cm	B=98.5-100cm

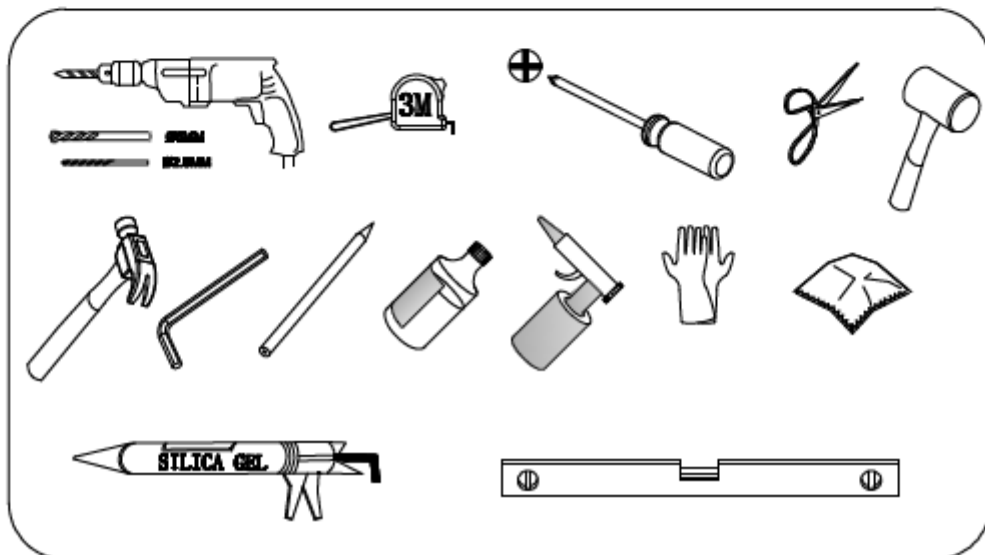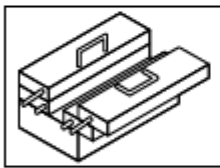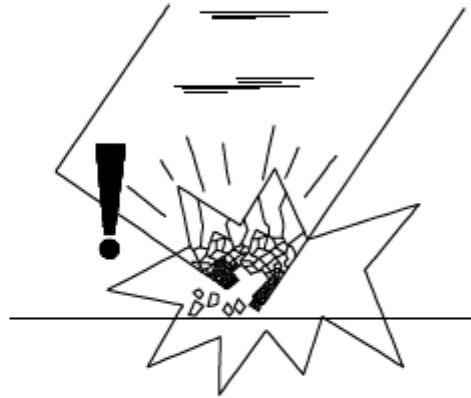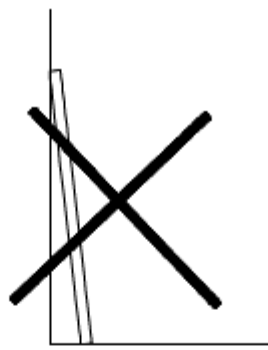



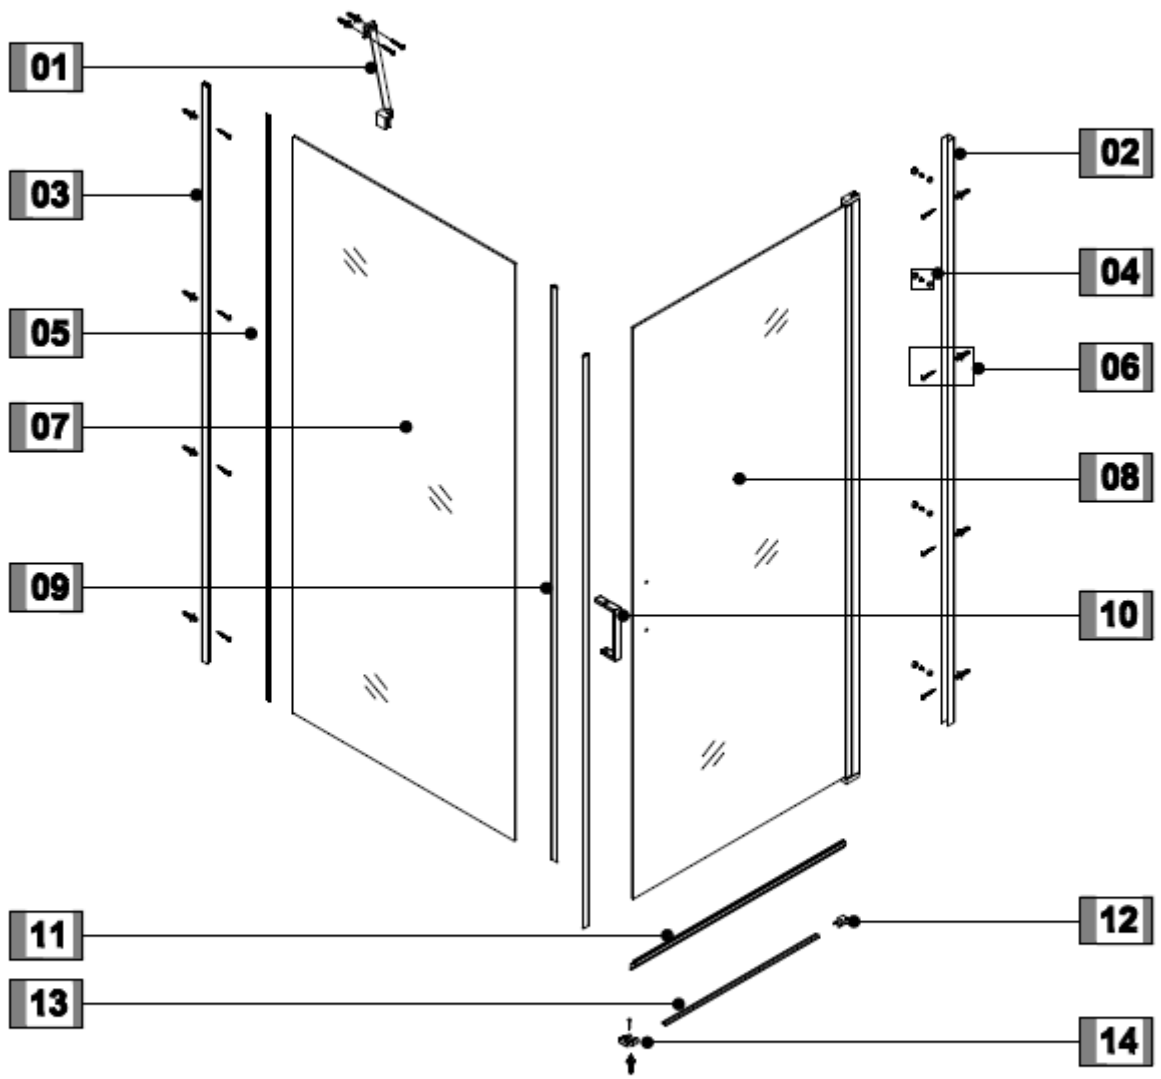


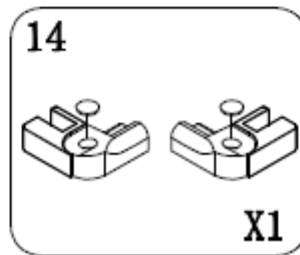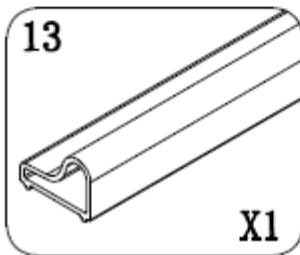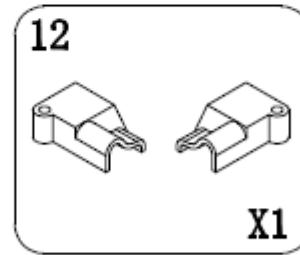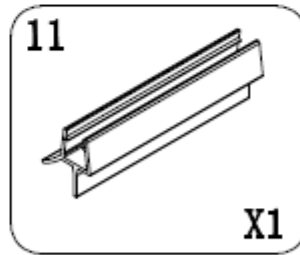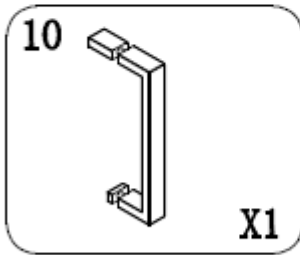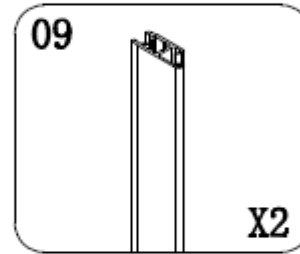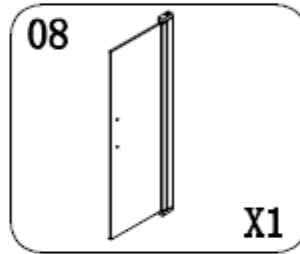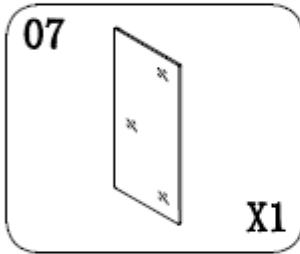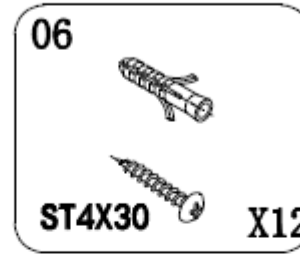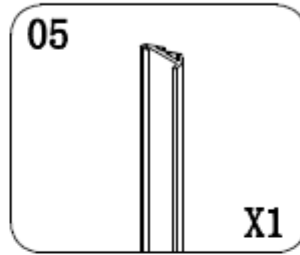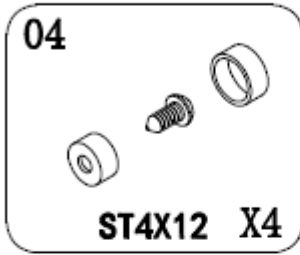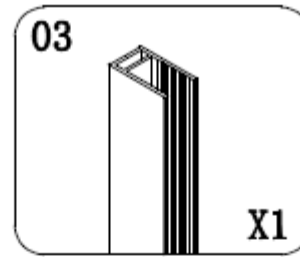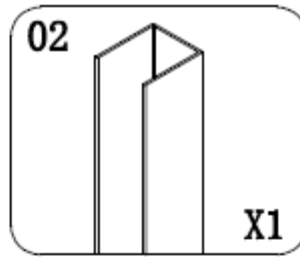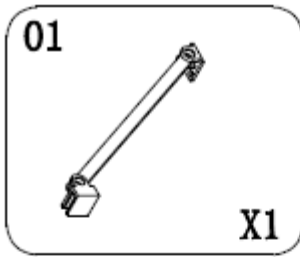





1

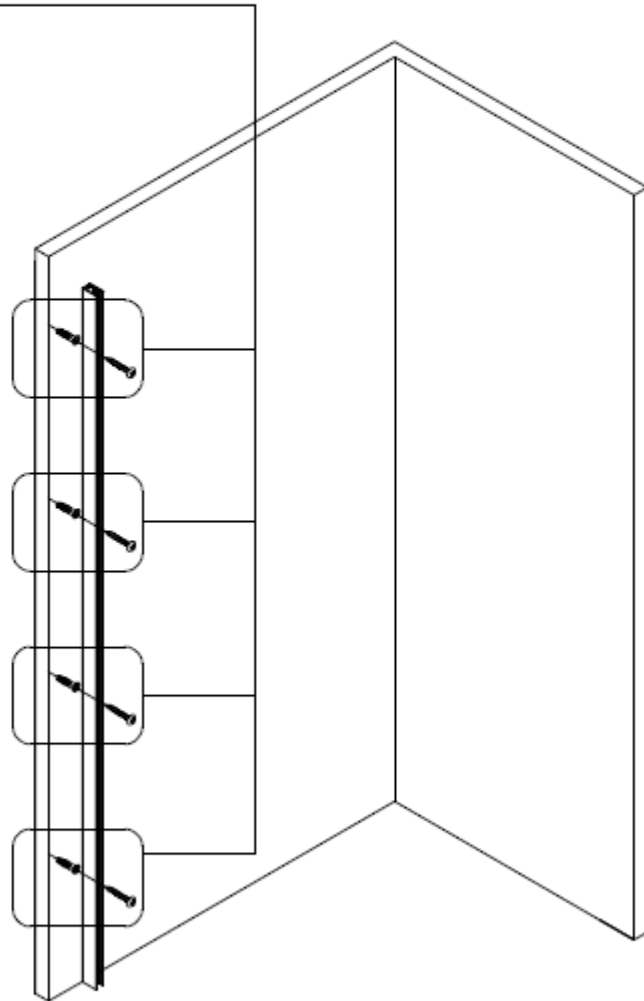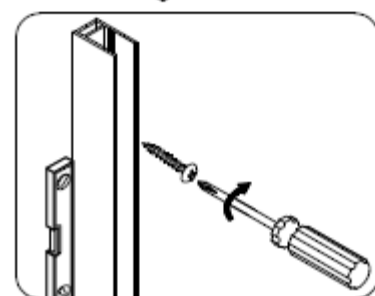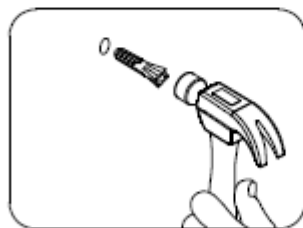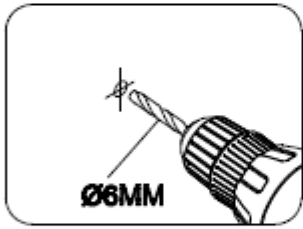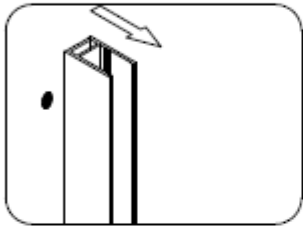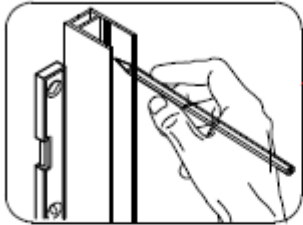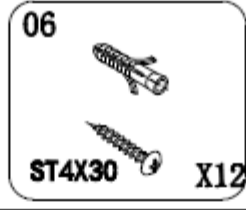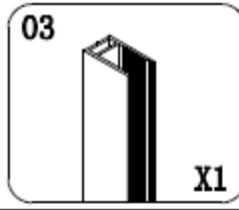



2

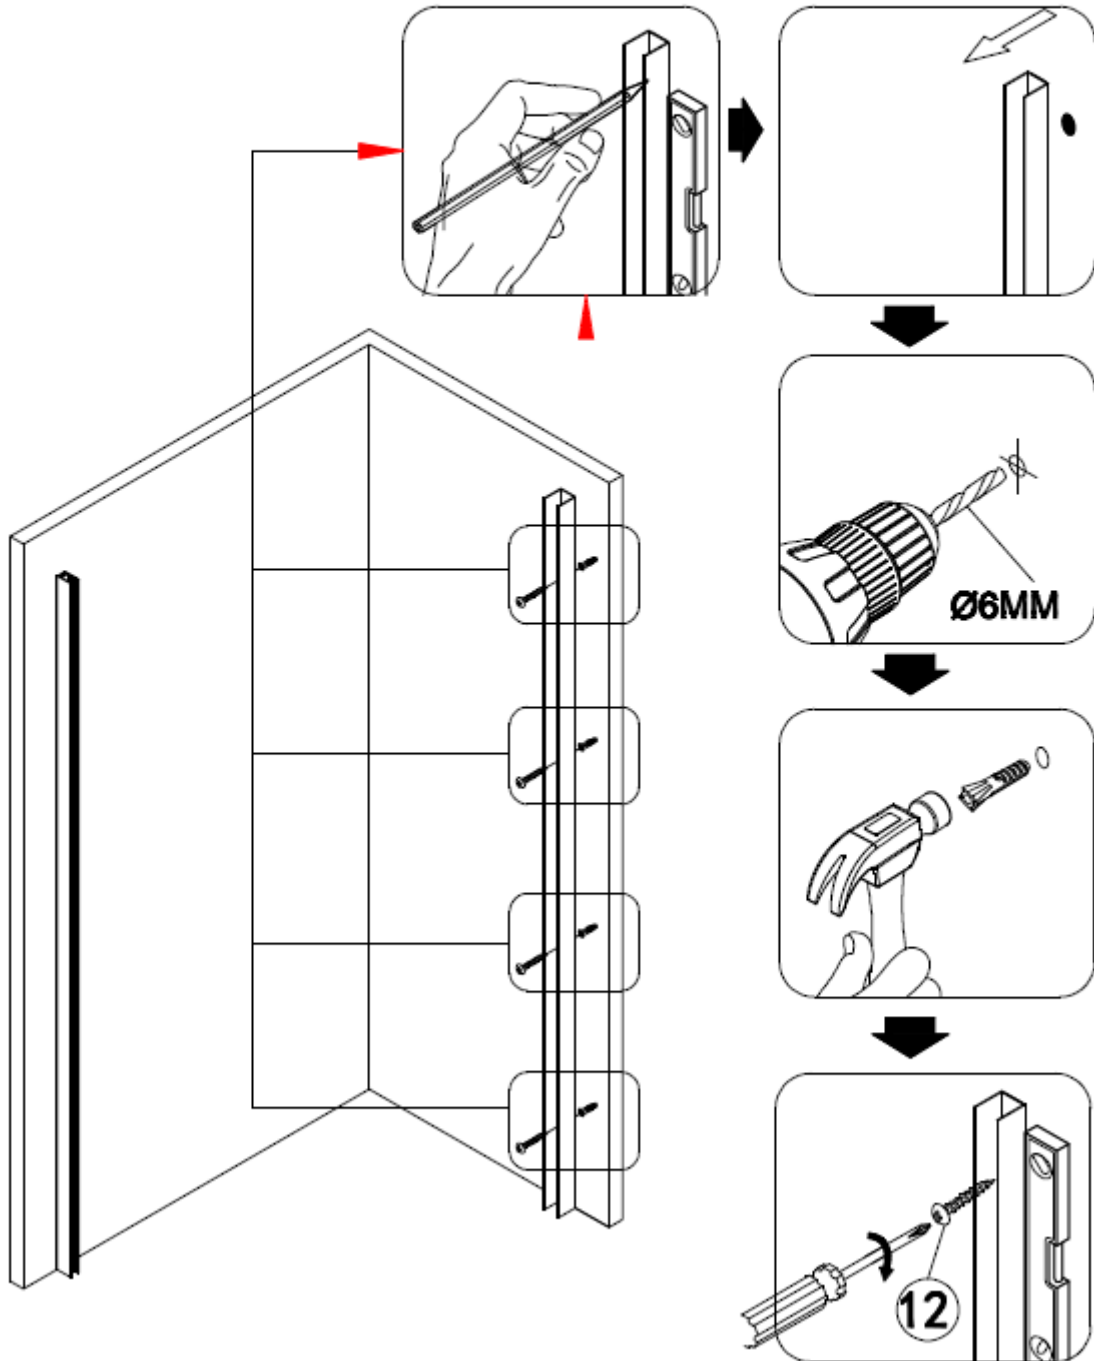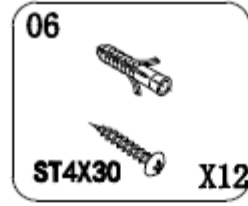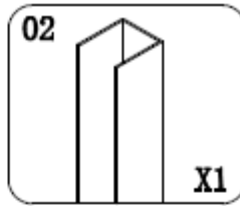

3

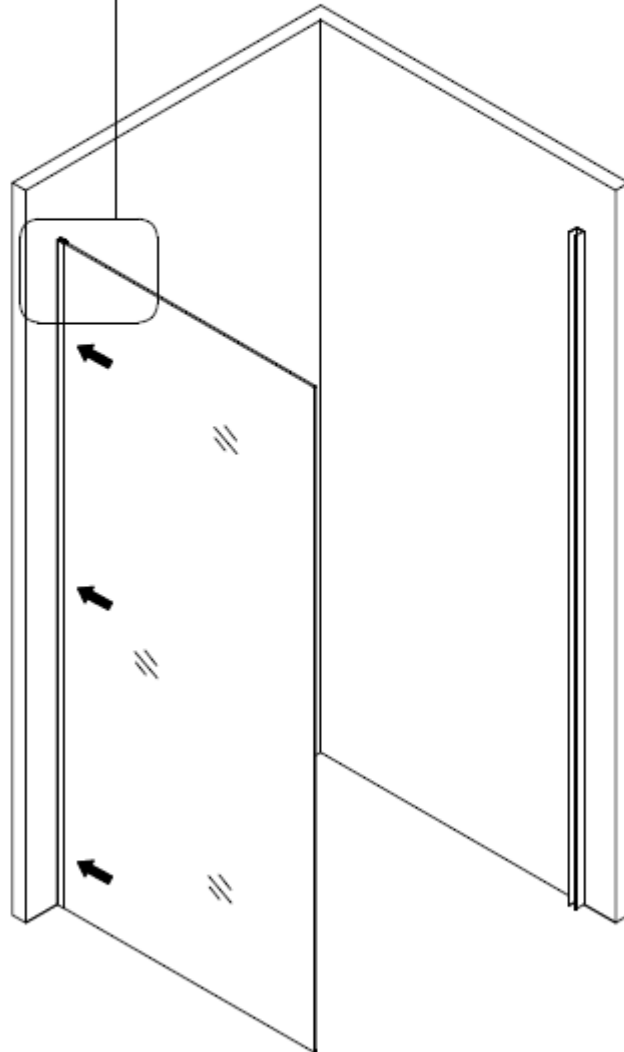
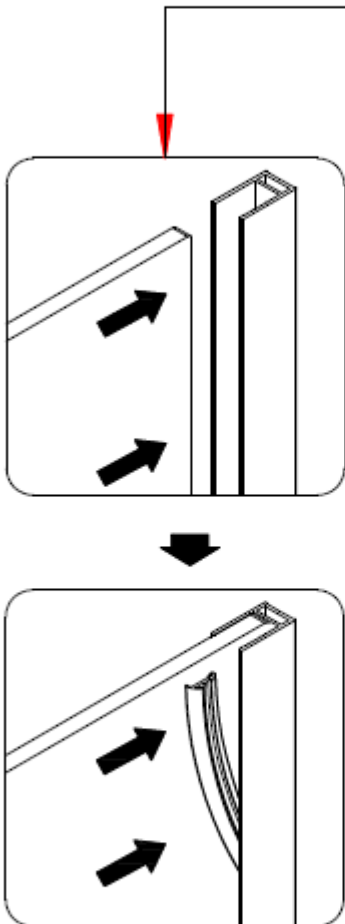
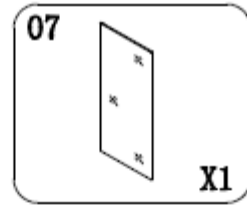
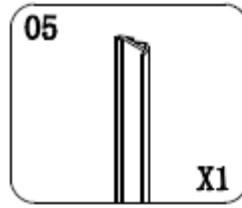


4





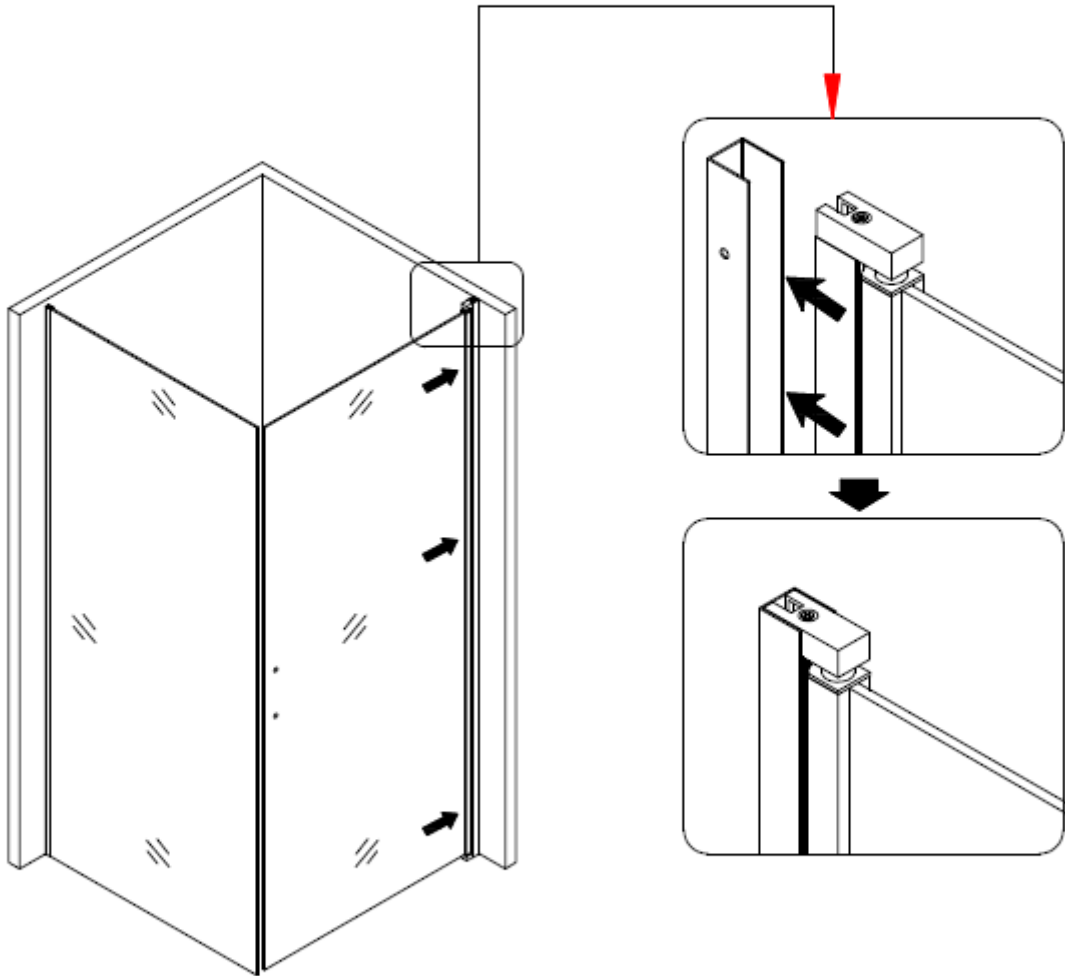
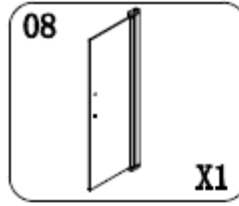







5

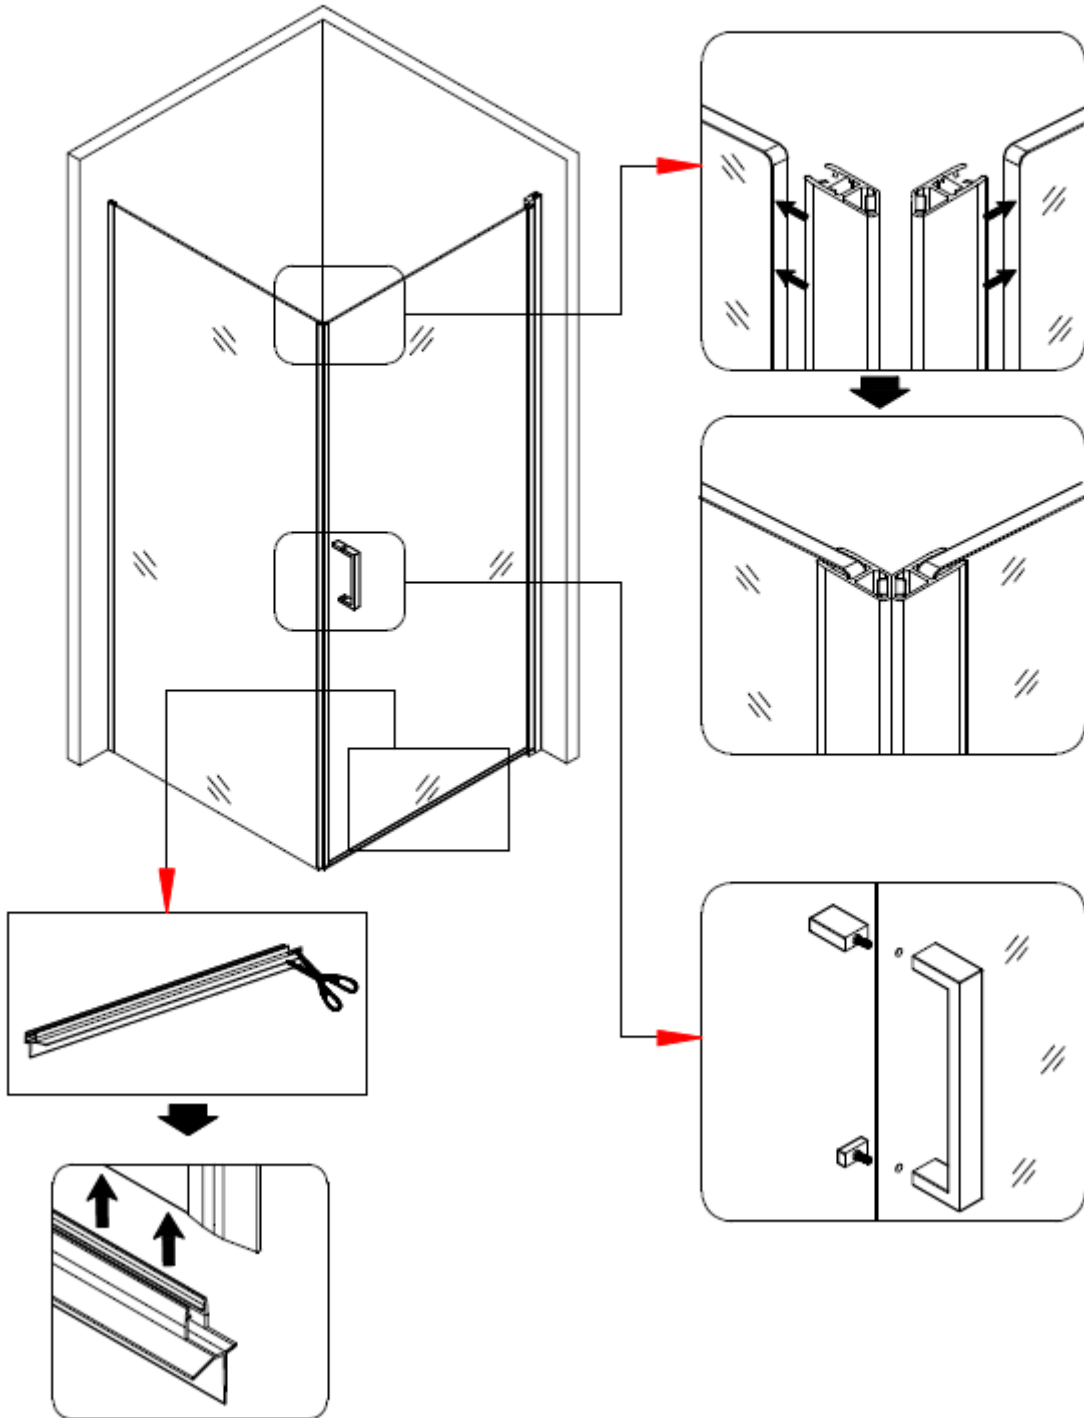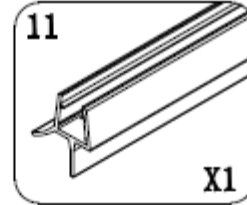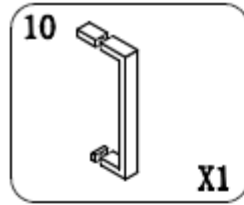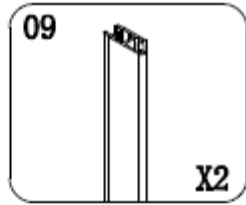

6

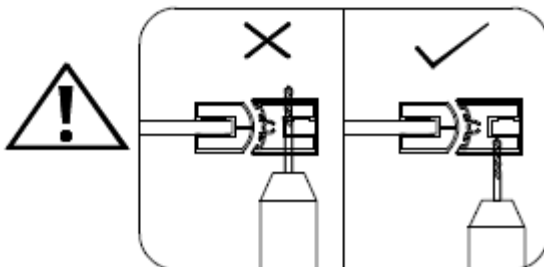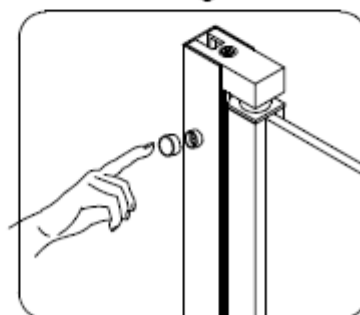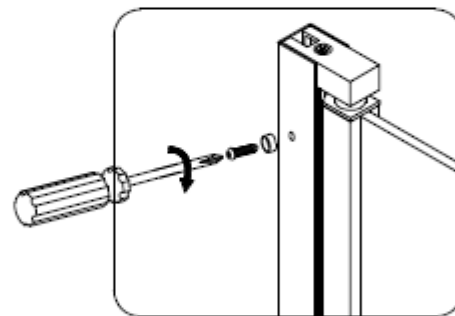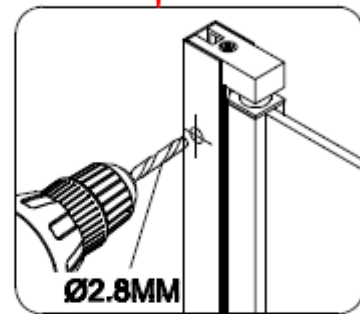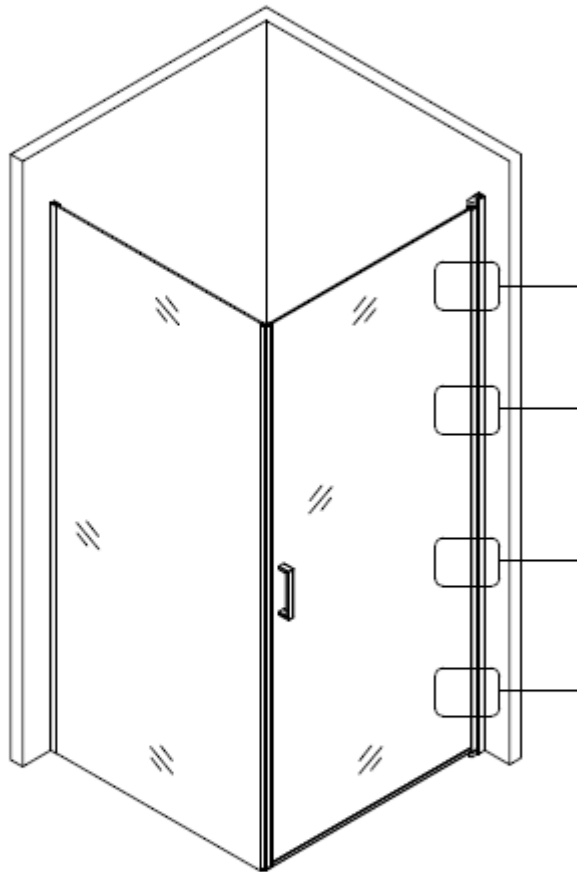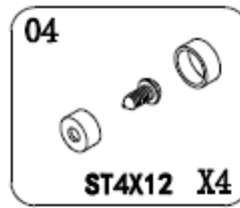

7

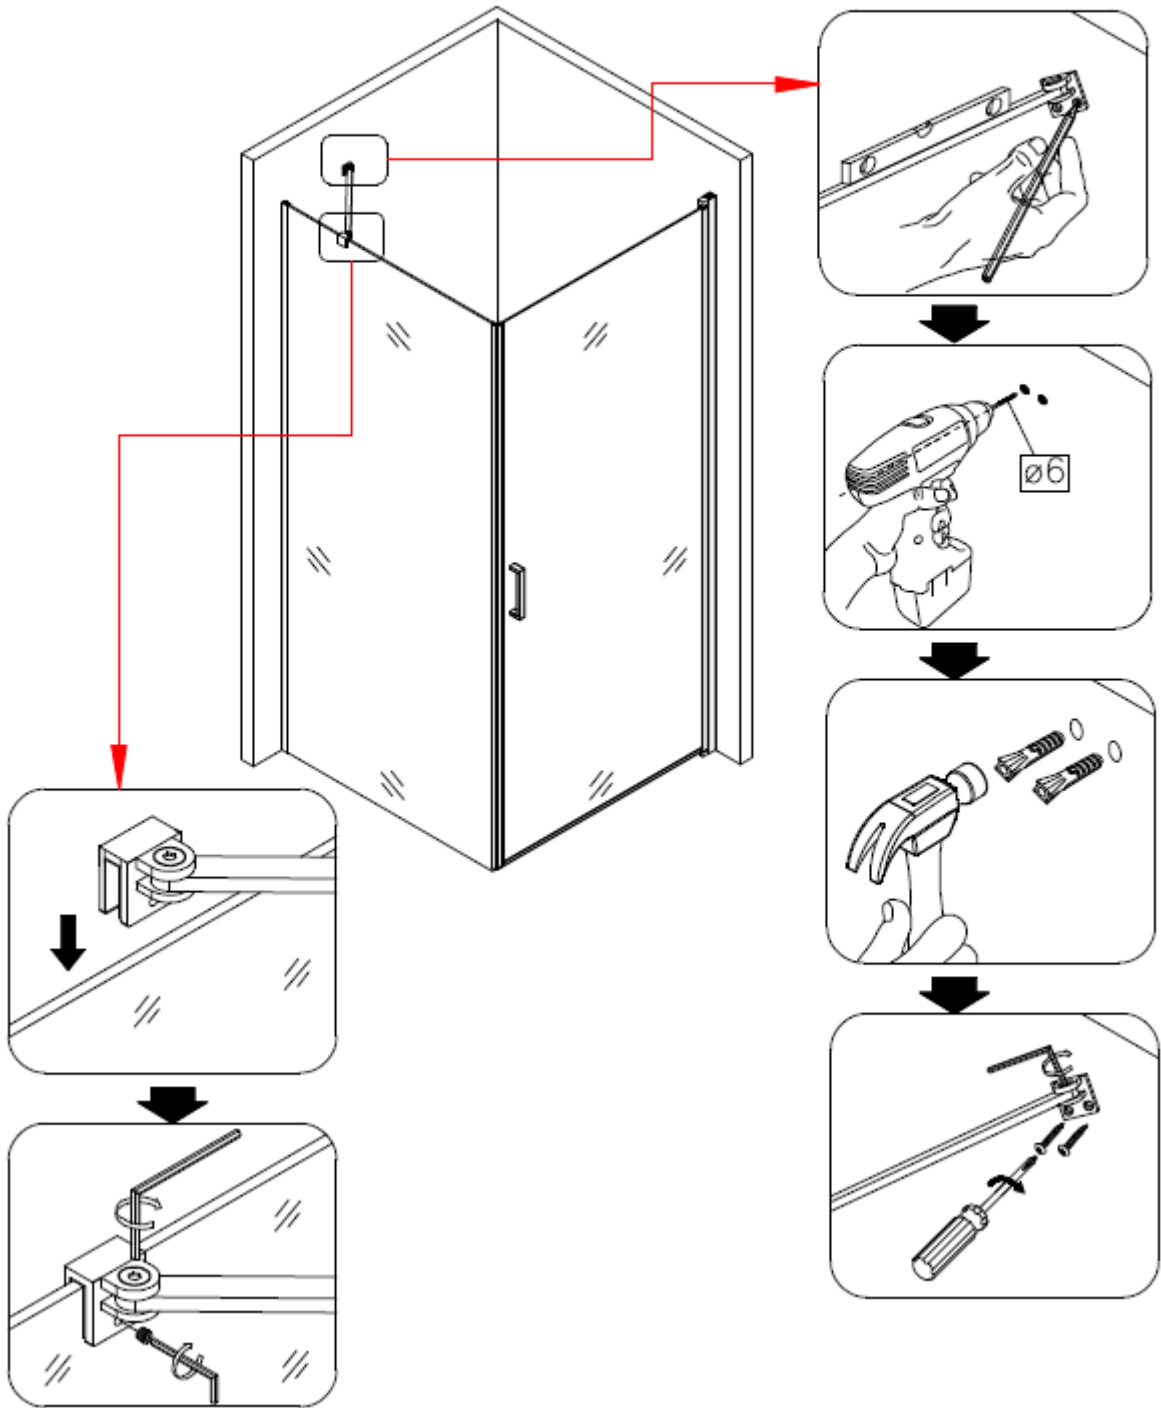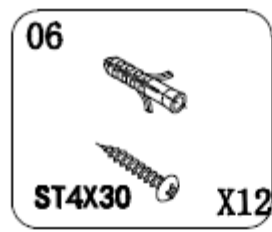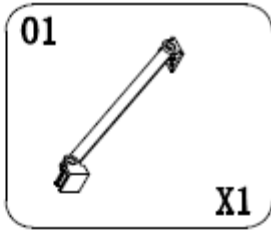

8

06



ST4X30

X12

12











X1

14



X1

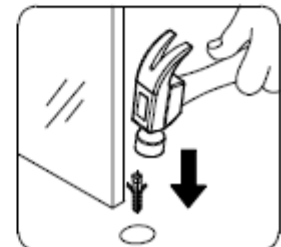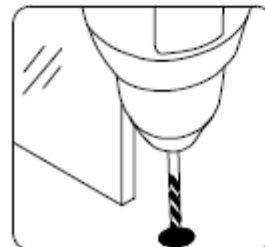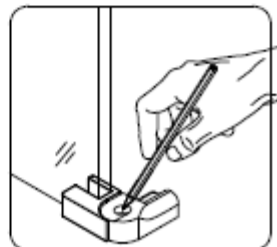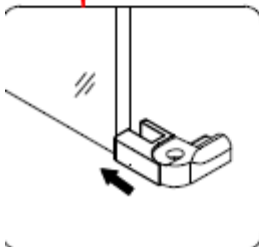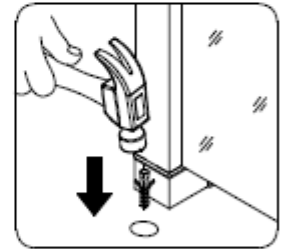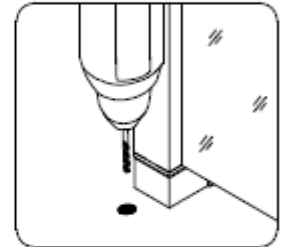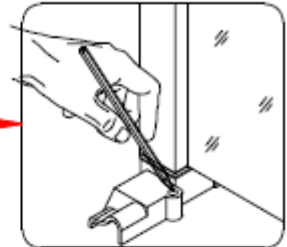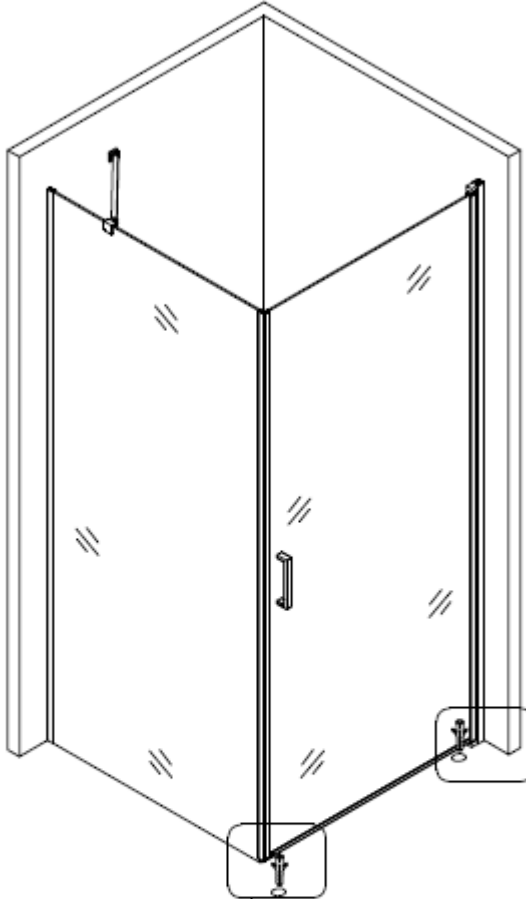

9

