

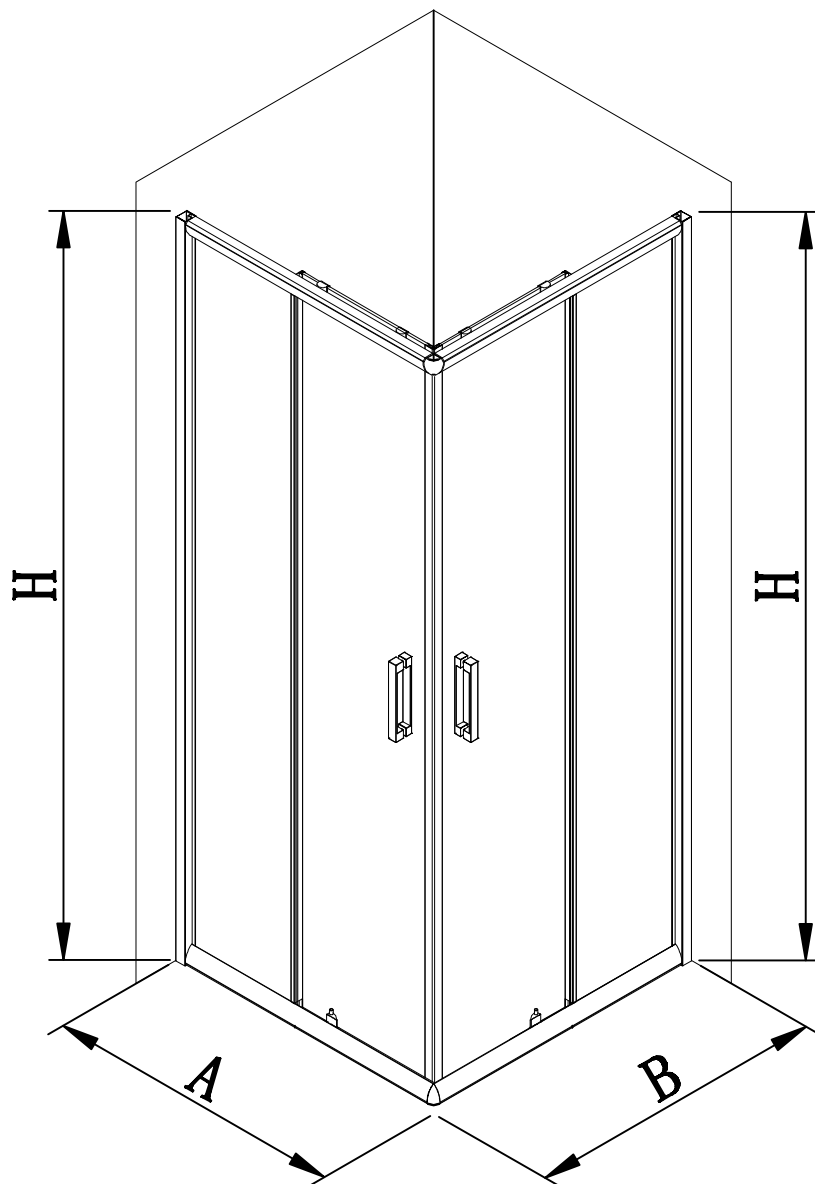
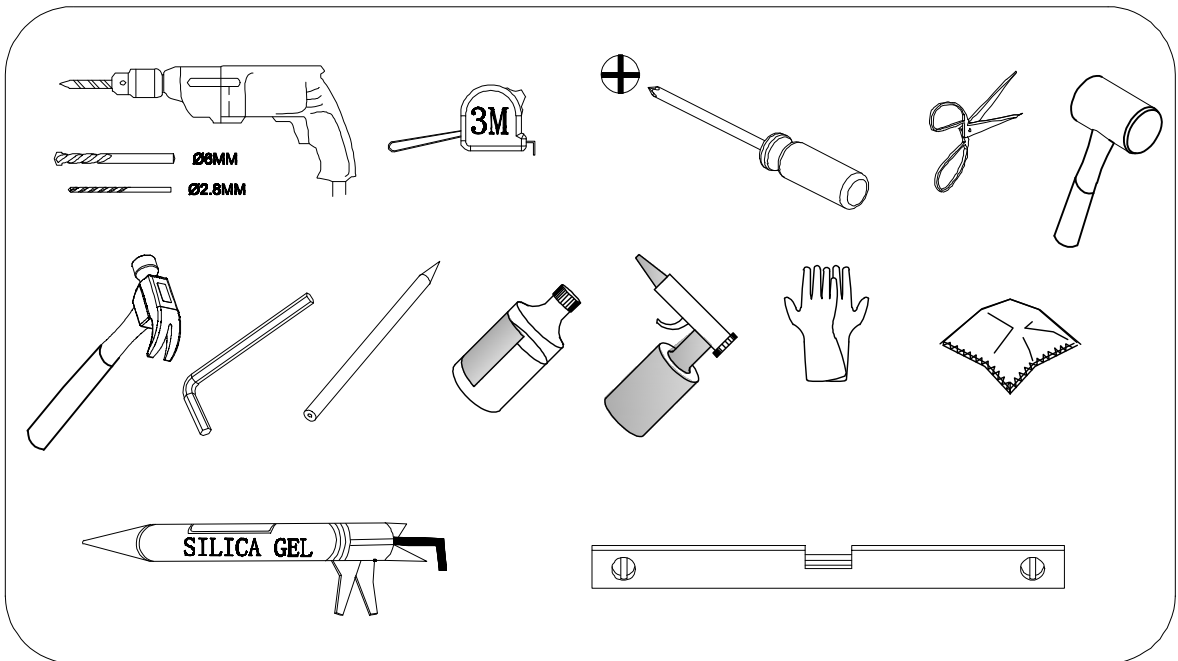
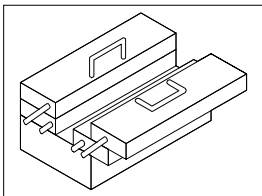
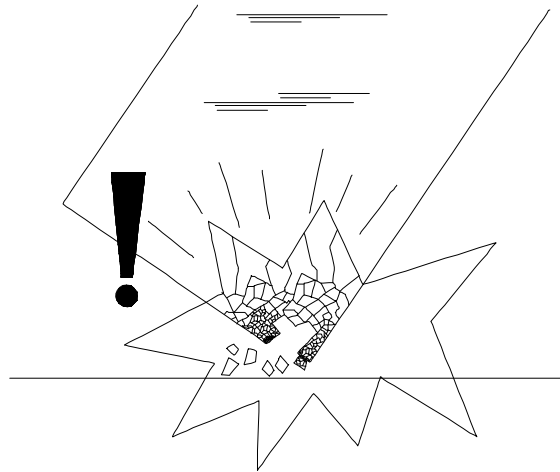


SHOWER CABIN INSTALLATION MANUA

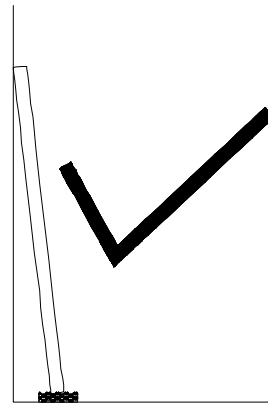




















H=190cm

ZKM-9019	A=88.5-90cm	B=88.5-90cm







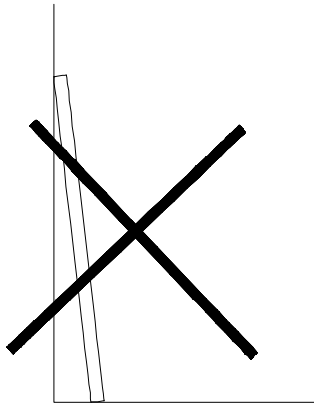


Product Breakdown

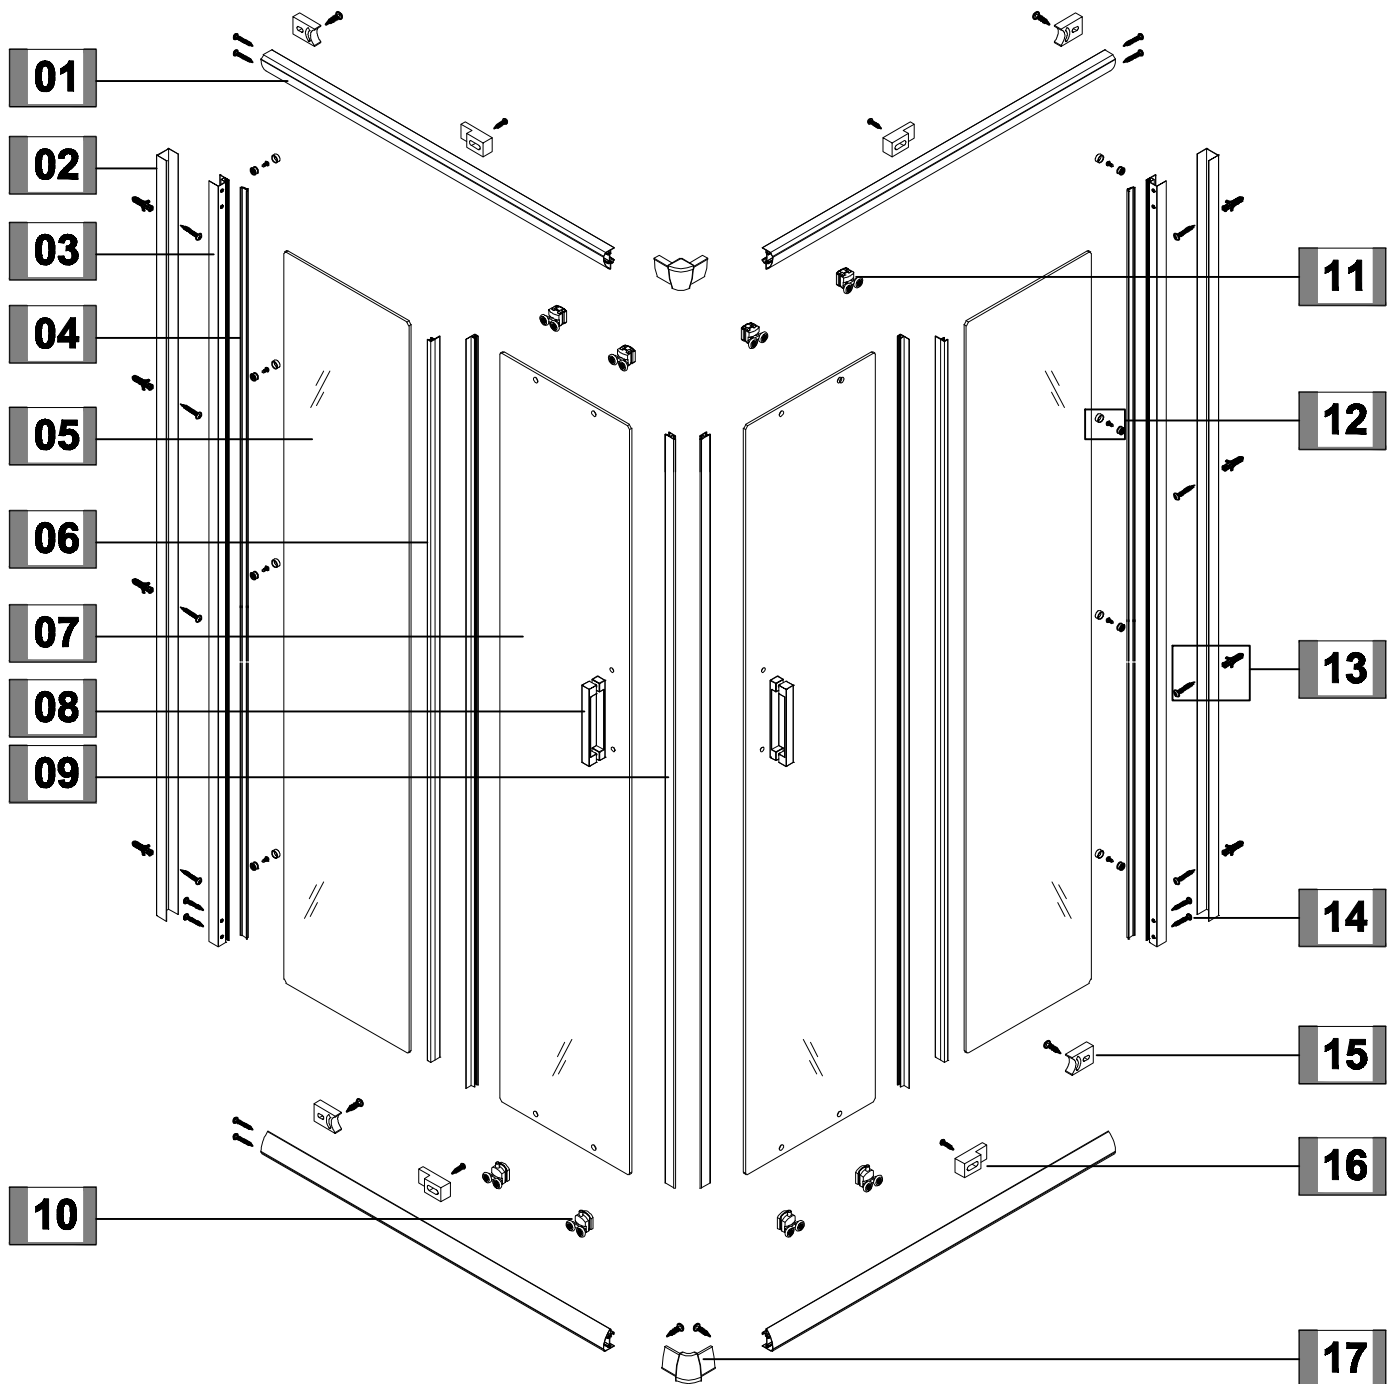

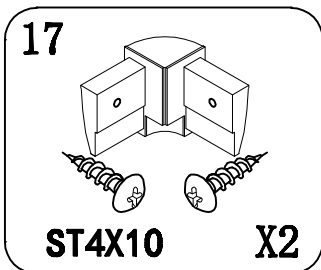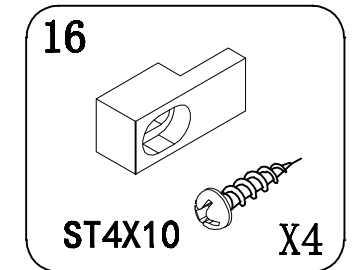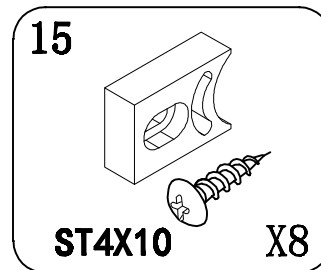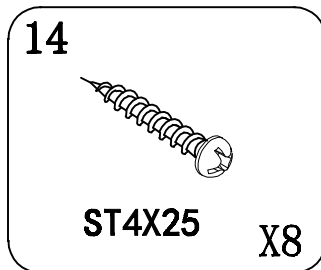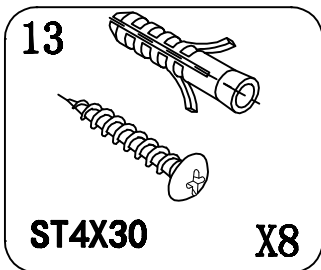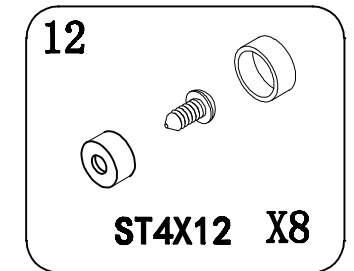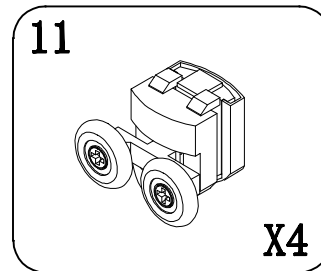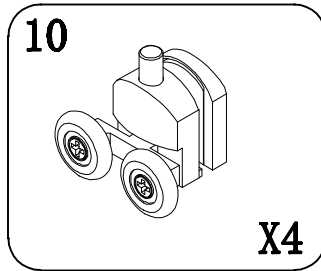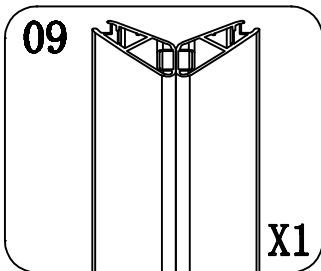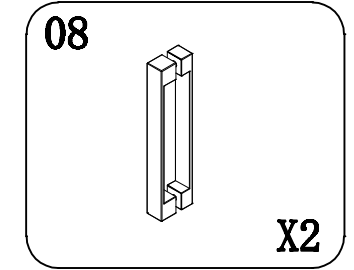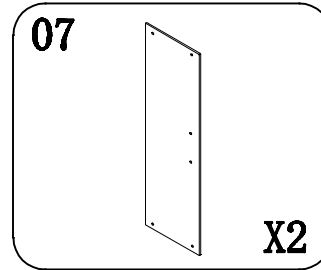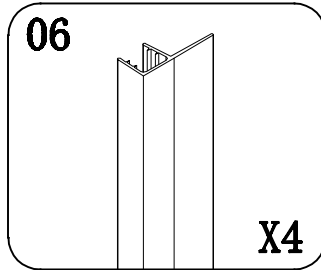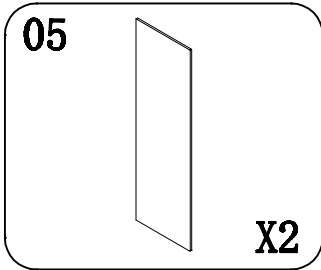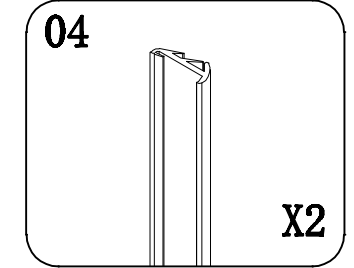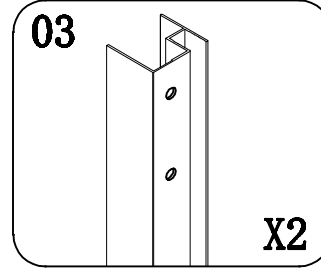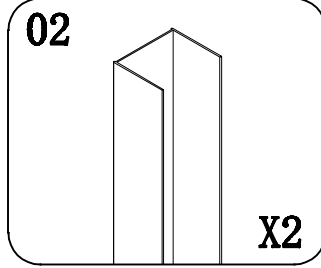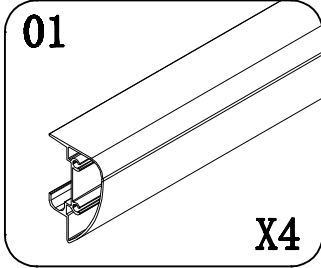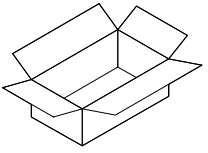


1

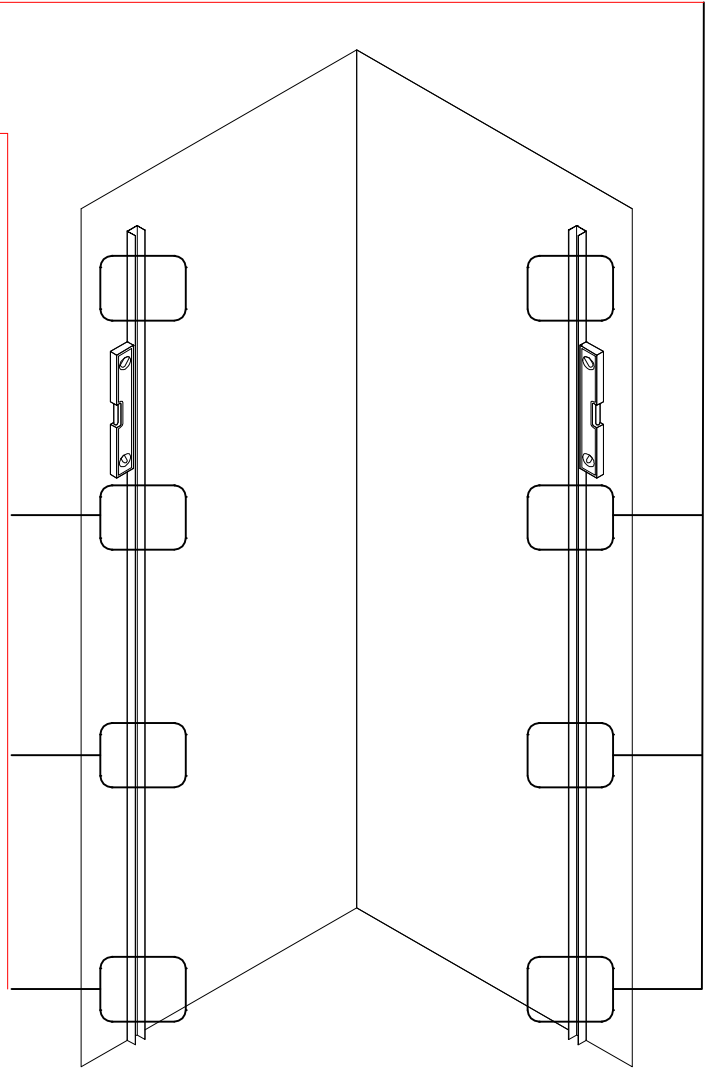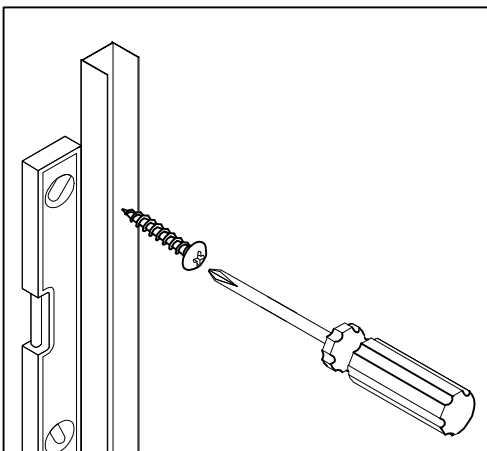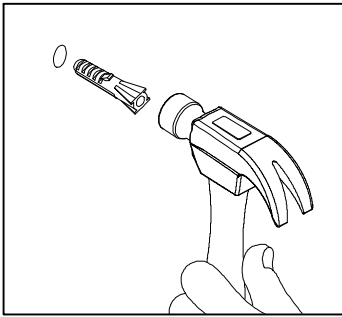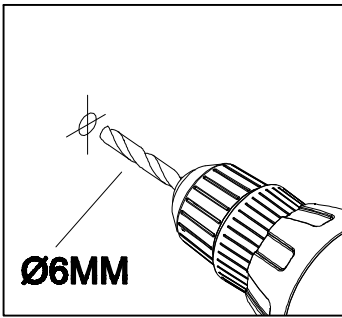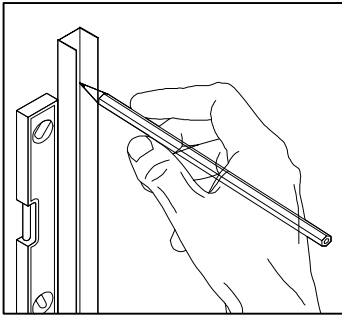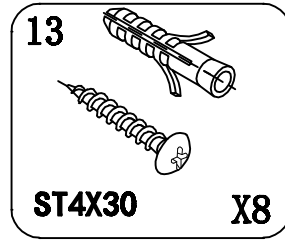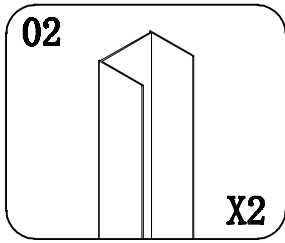


2



14
ST4X25 X8

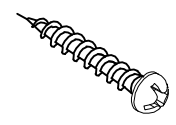




15
ST4X10 X8

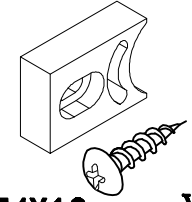

17
ST4X10 X2

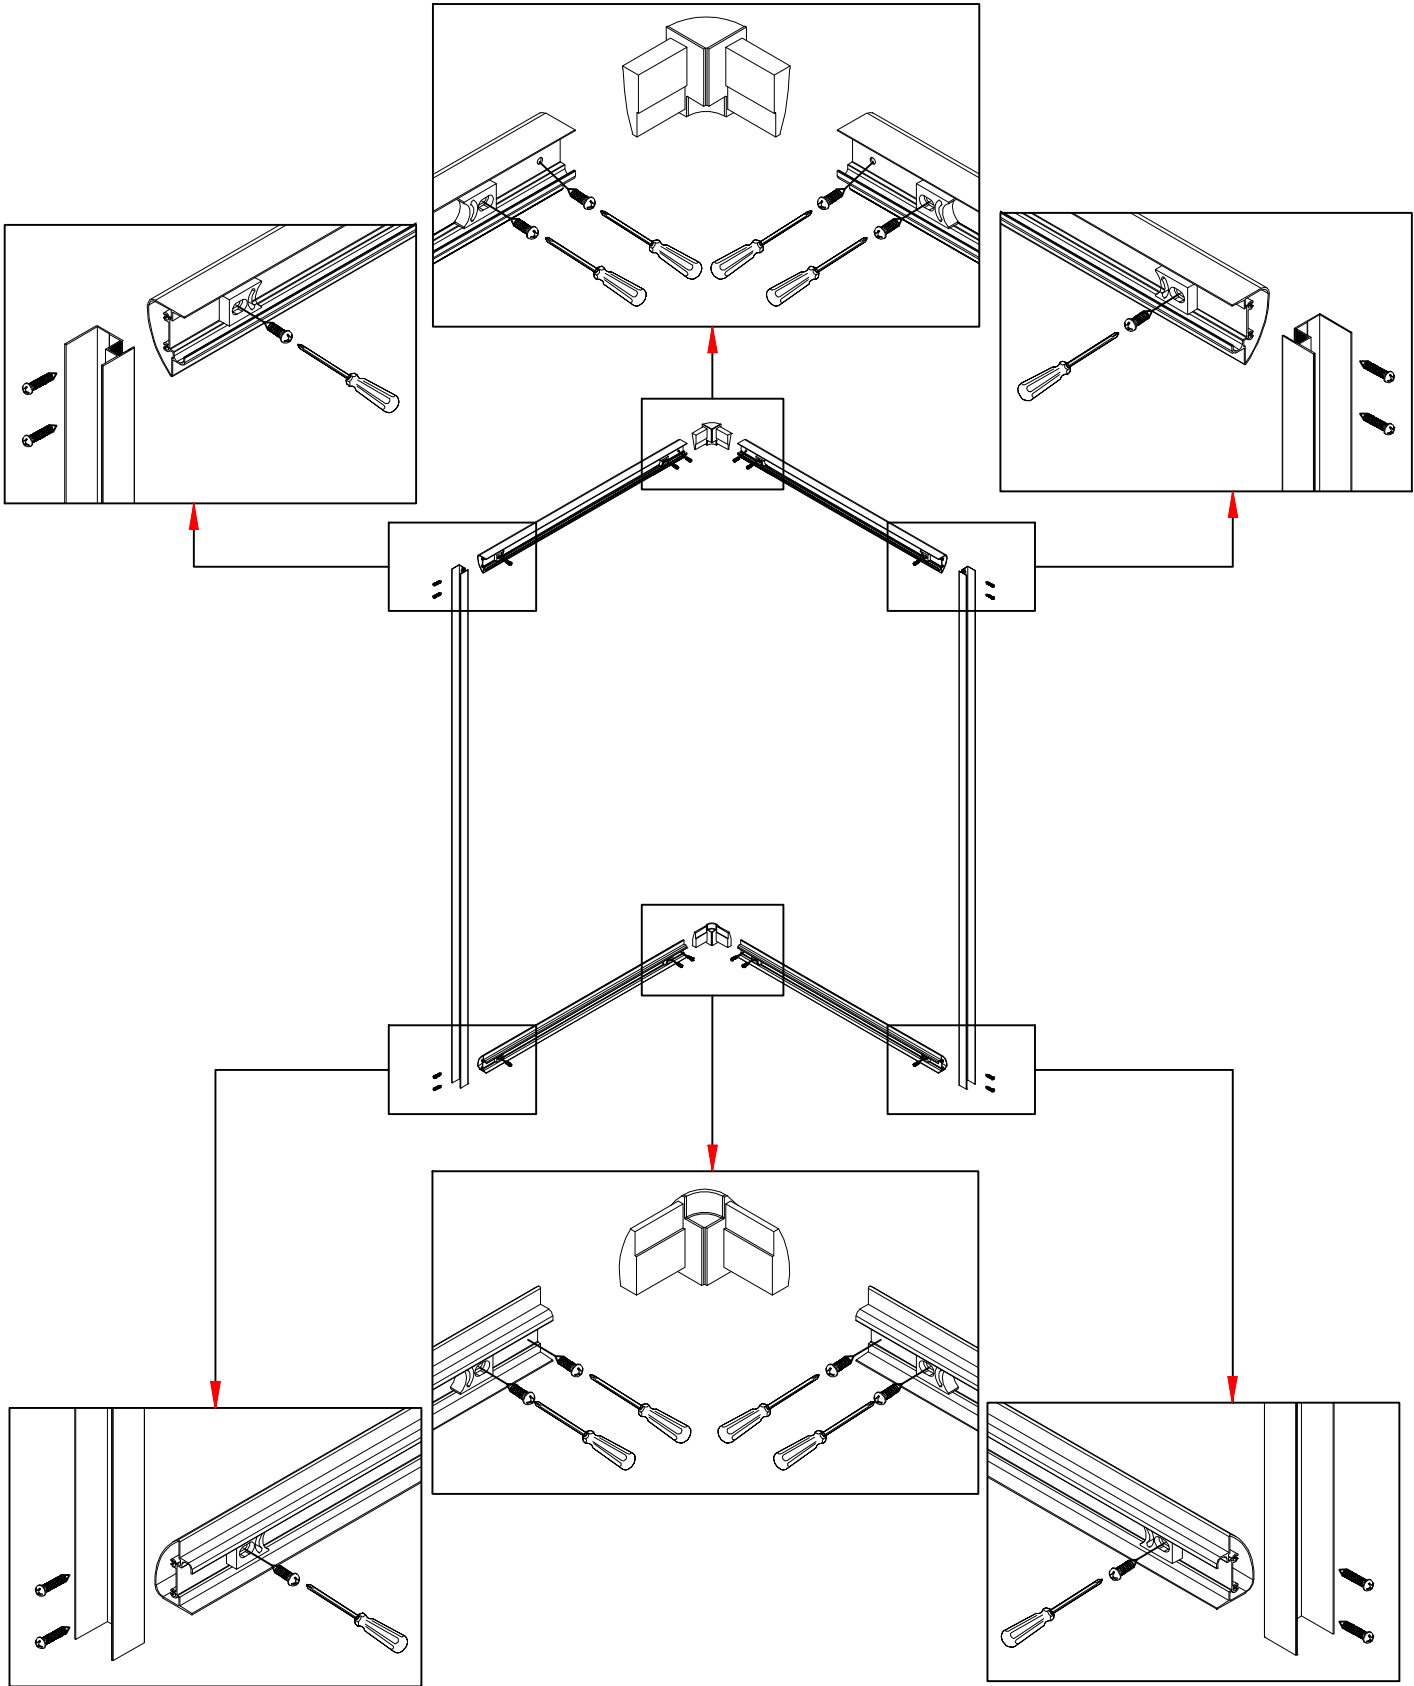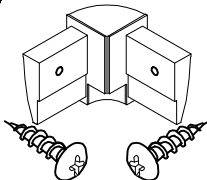


3


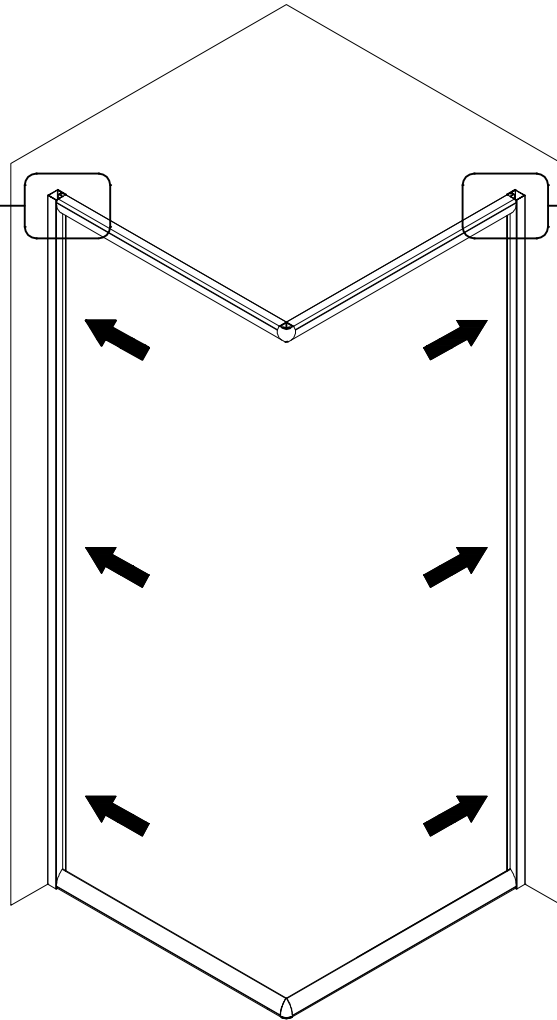
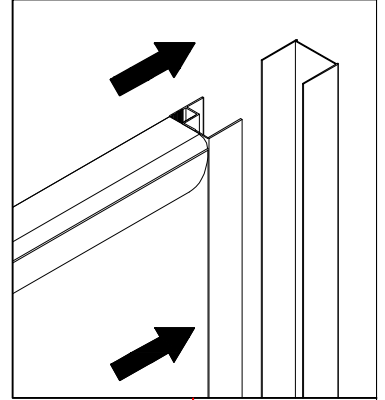
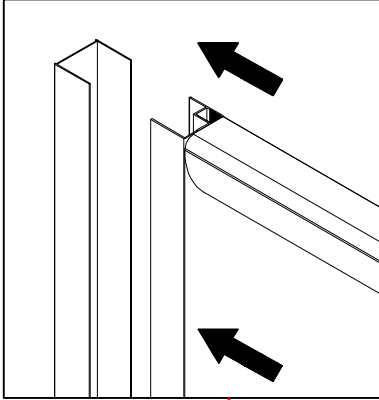


4

05




X2


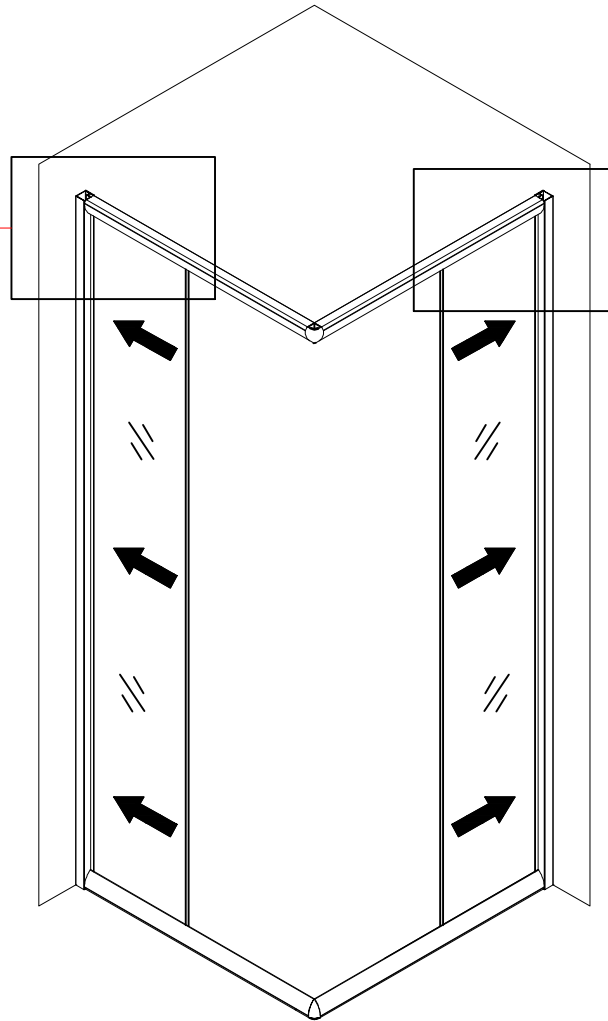
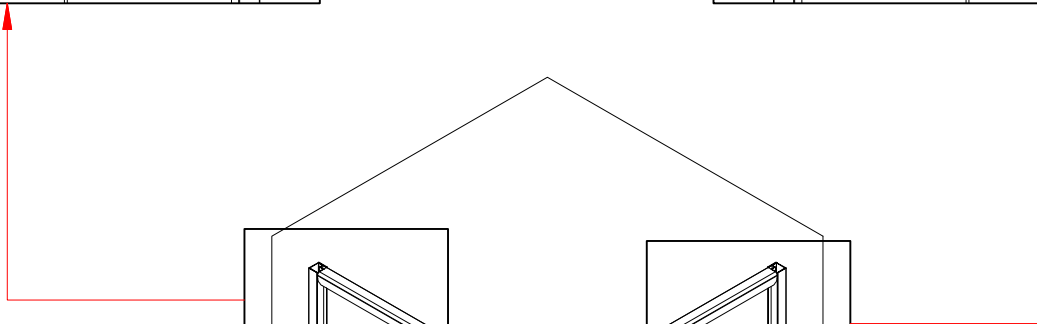
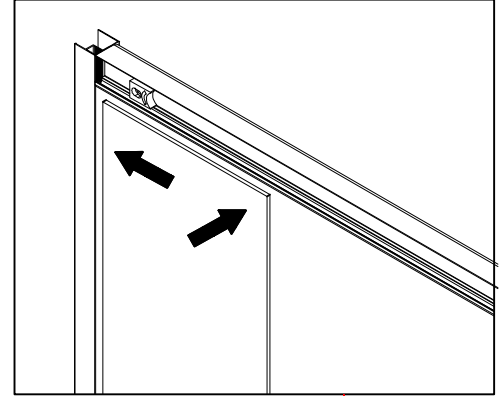
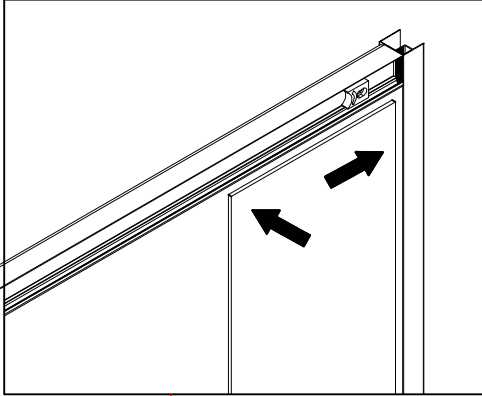



5







16

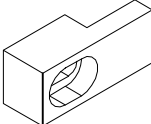

ST4X10 X4

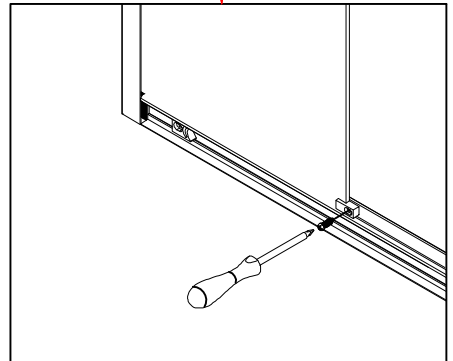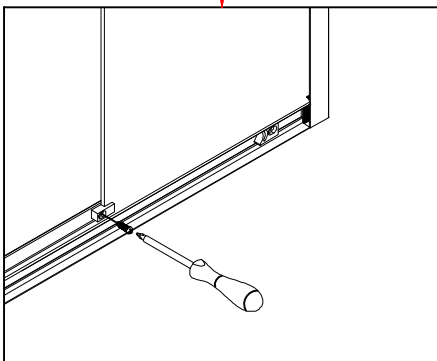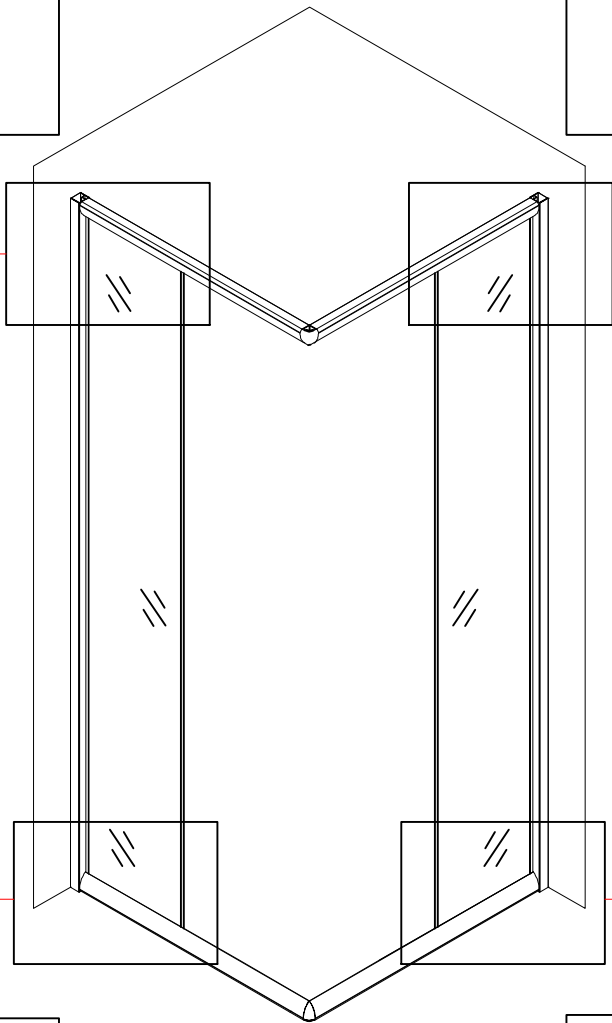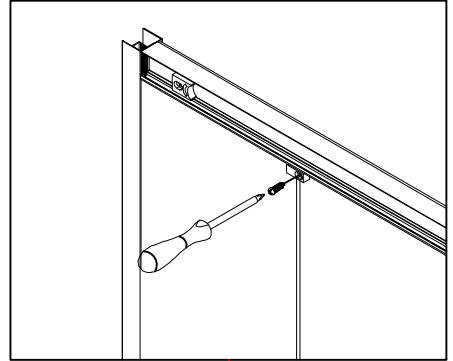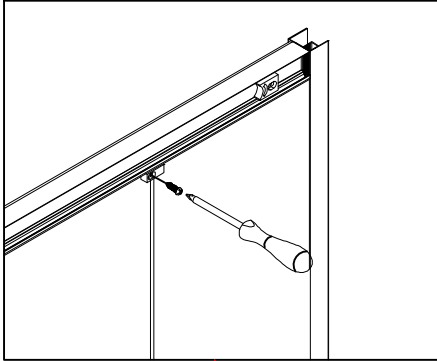


6

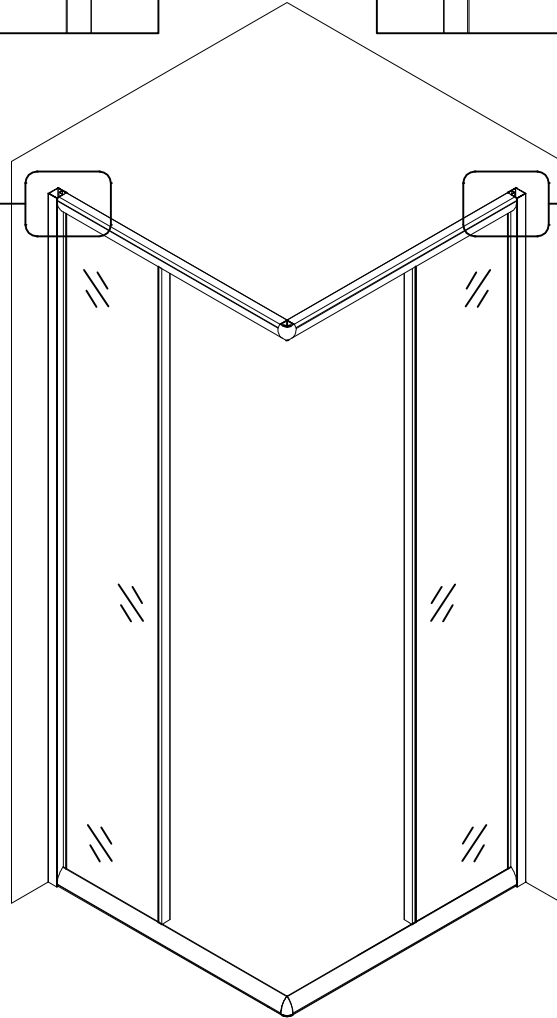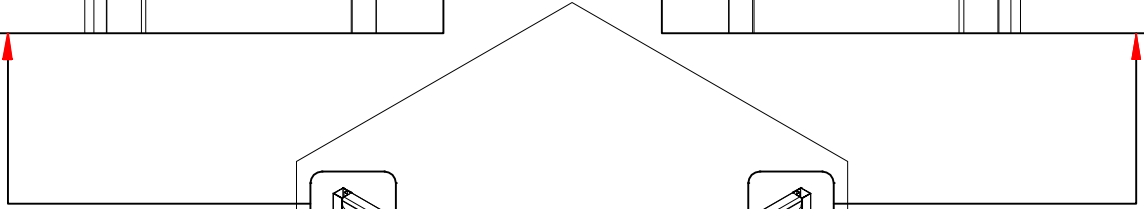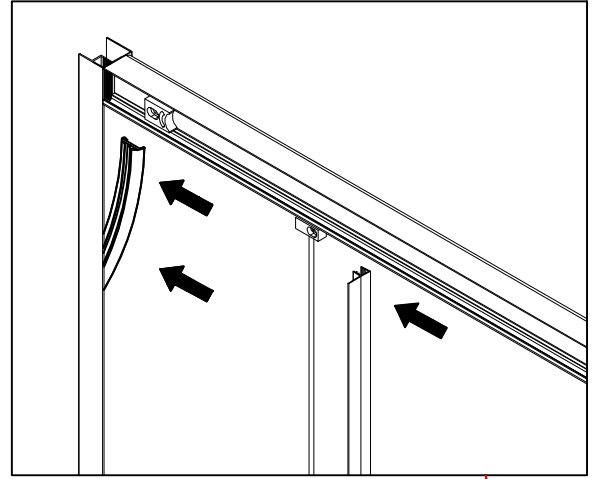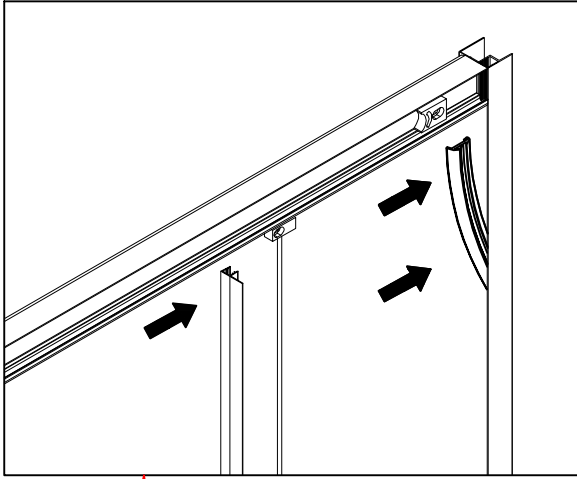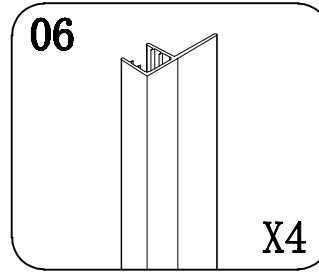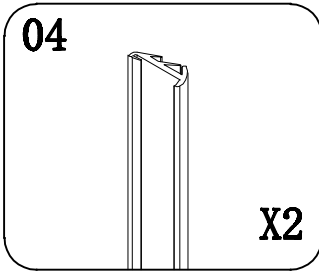


7

06




X4

09

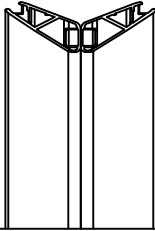


X1

10

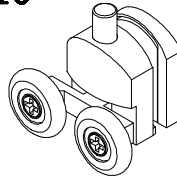


X4




11

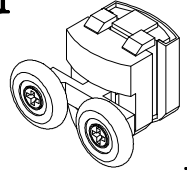

X4

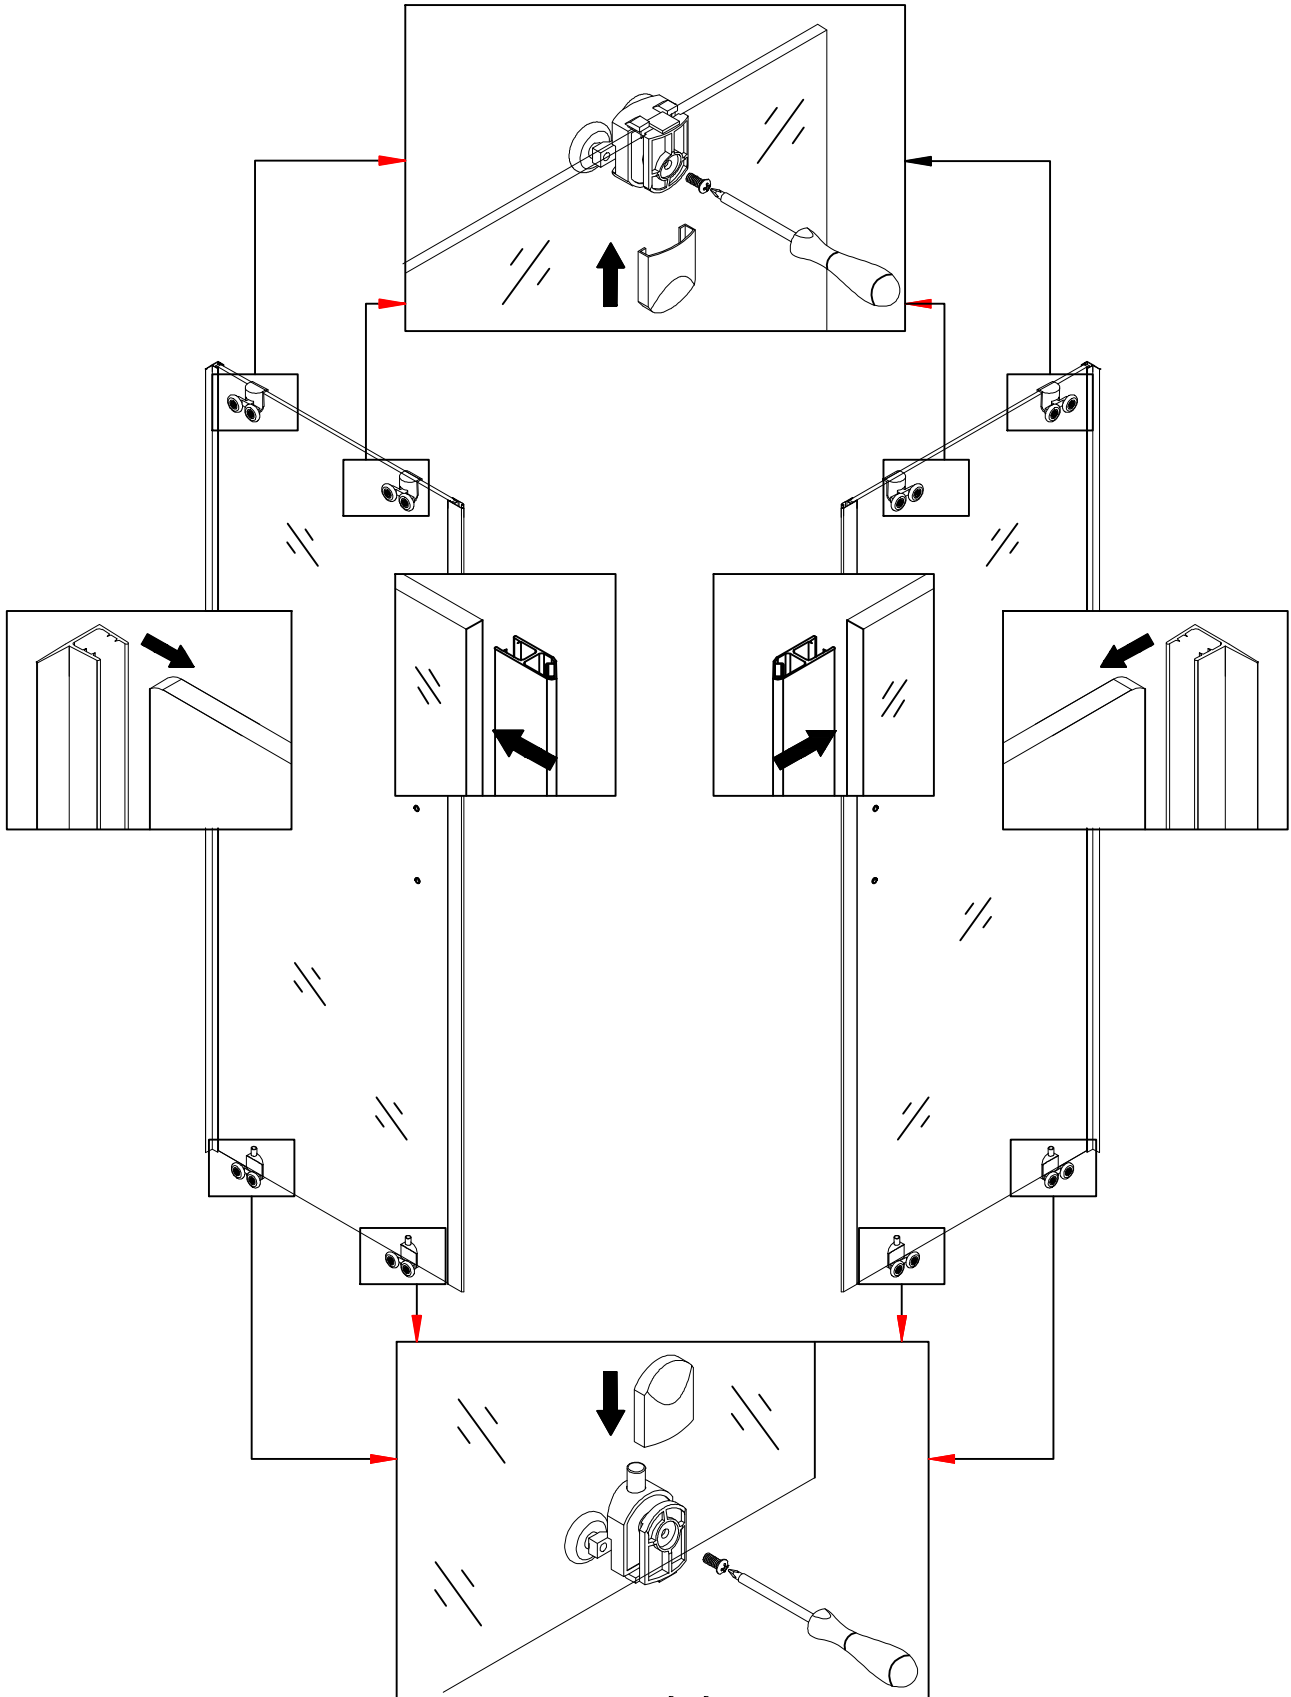

8


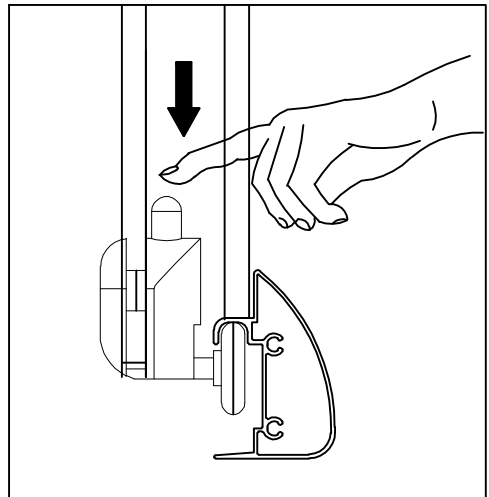
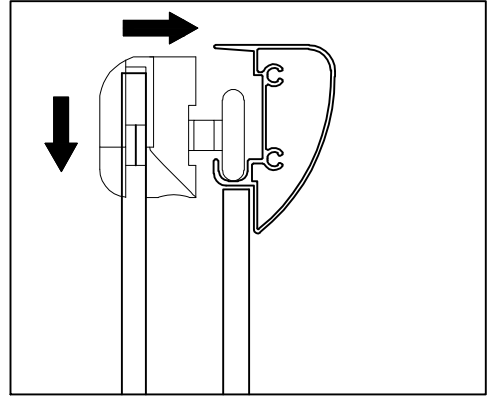
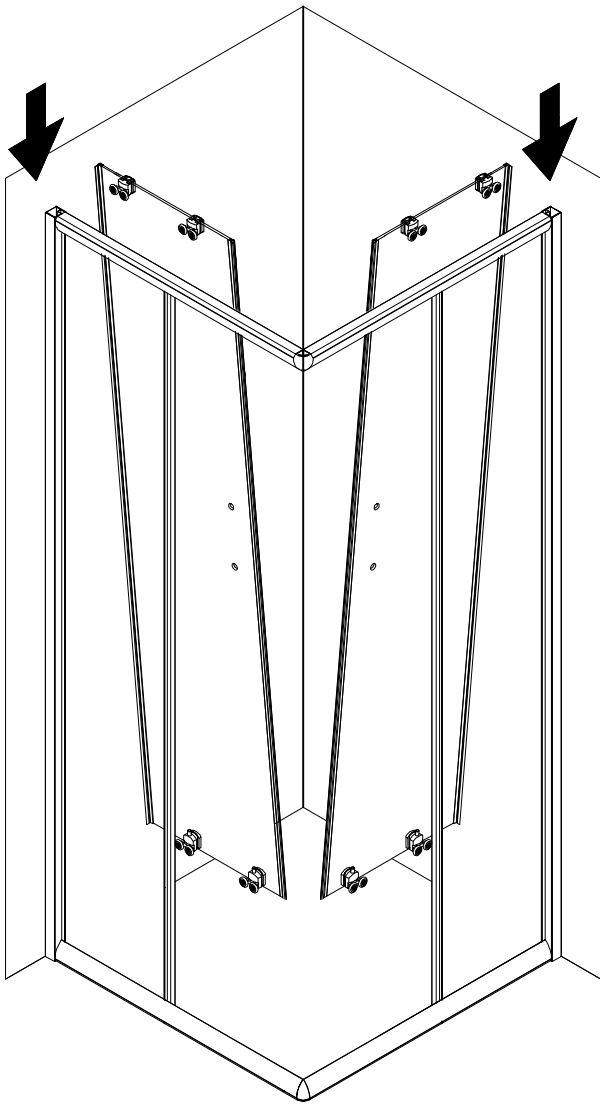


9

08




X2




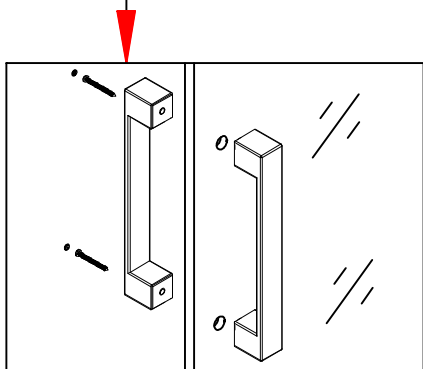
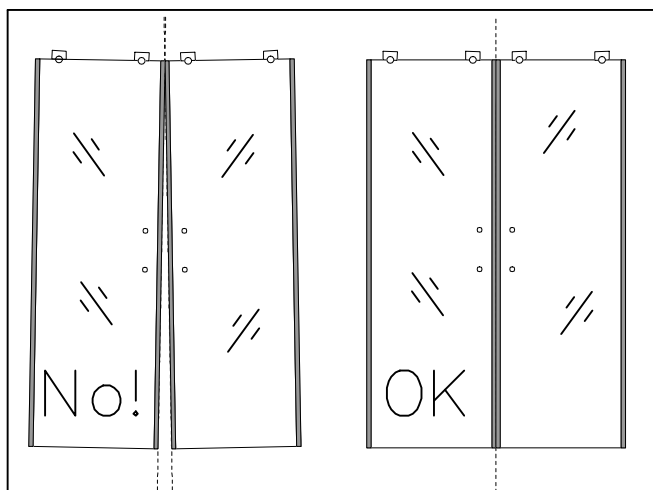
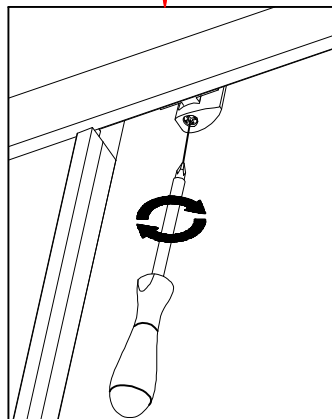
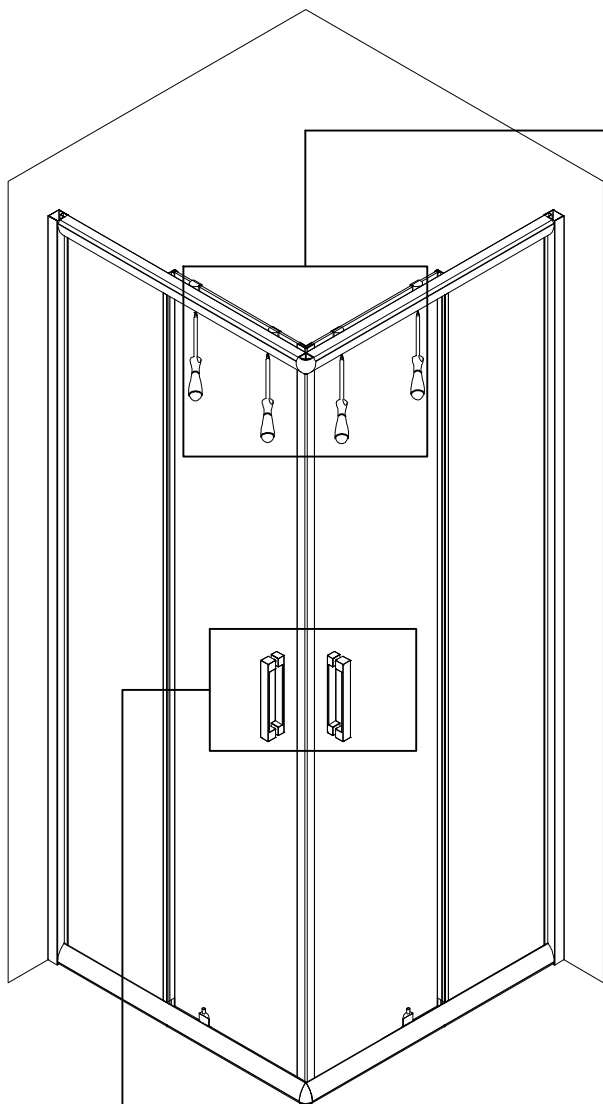


10

12

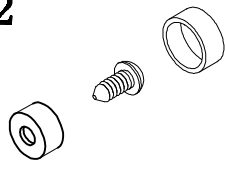

ST4X12 X8

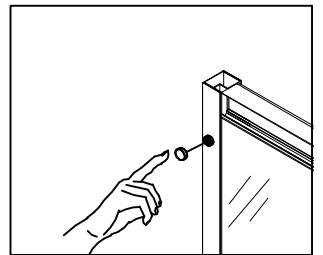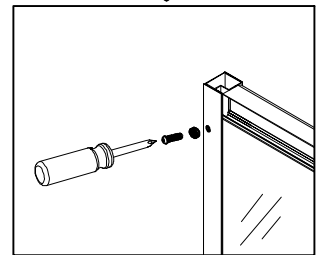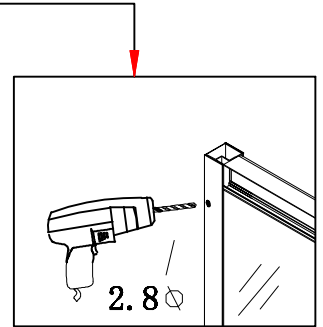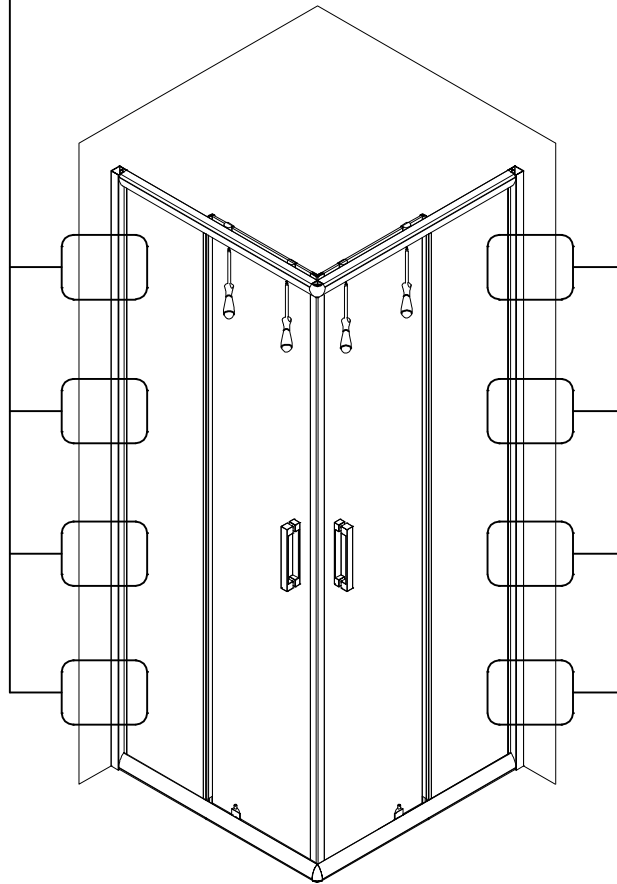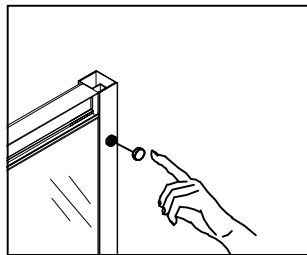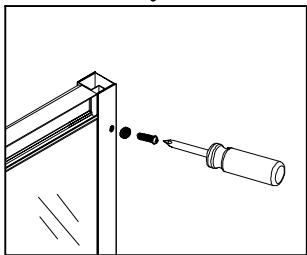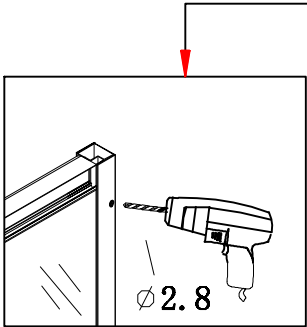

11

