

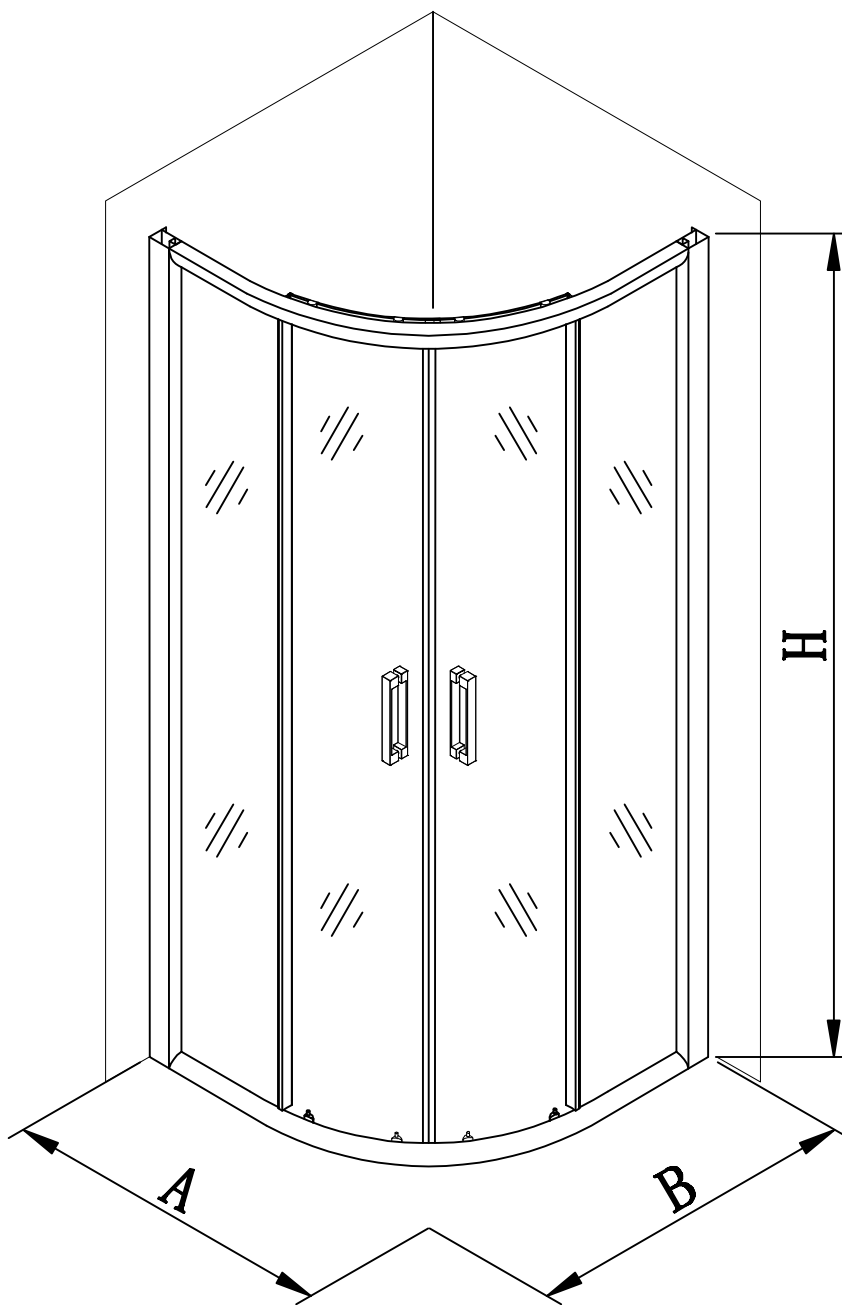
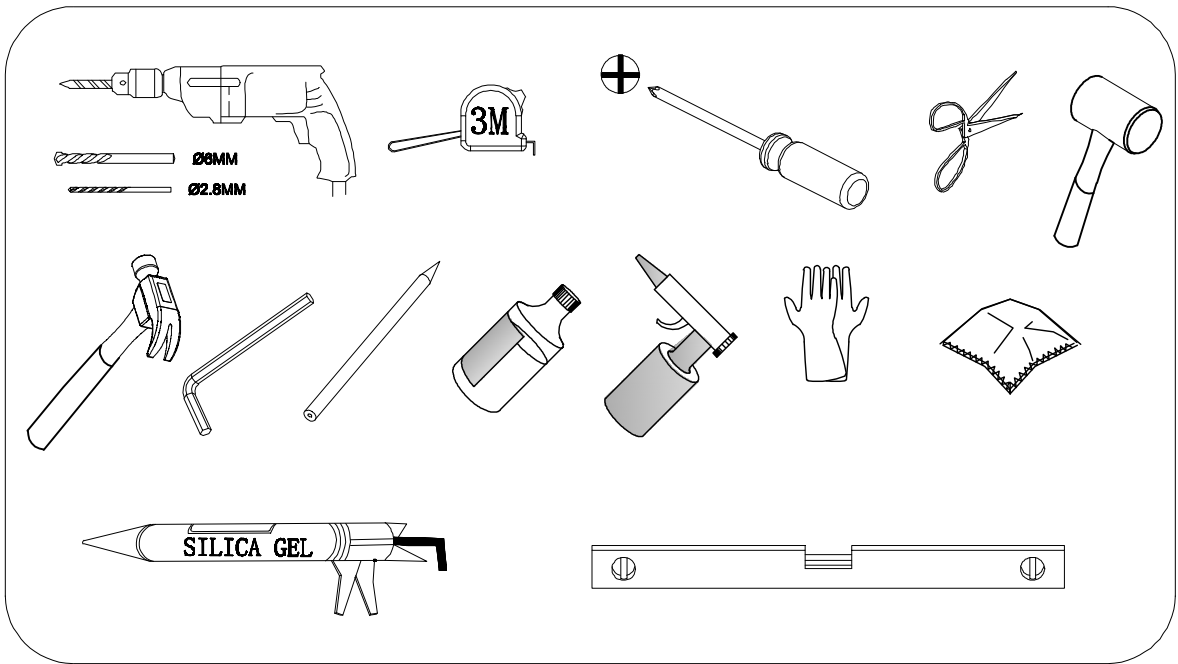
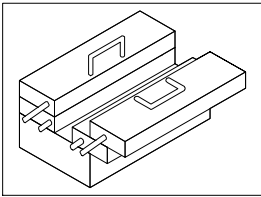
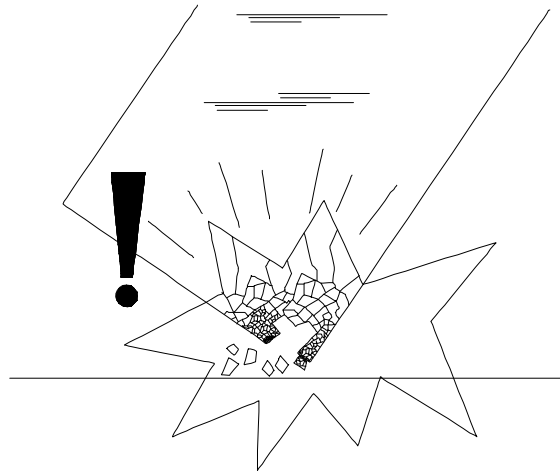


SHOWER CABIN INSTALLATION MANUA

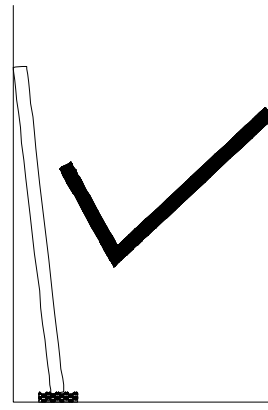



















H=190cm

ZKM-819	A=78.5-80cm	B=78.5-80cm
ZKM-919	A=88.5-90cm	B=88.5-90cm







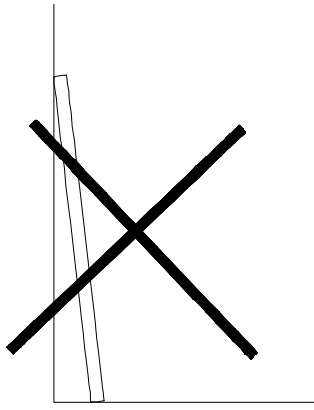


Product Breakdown



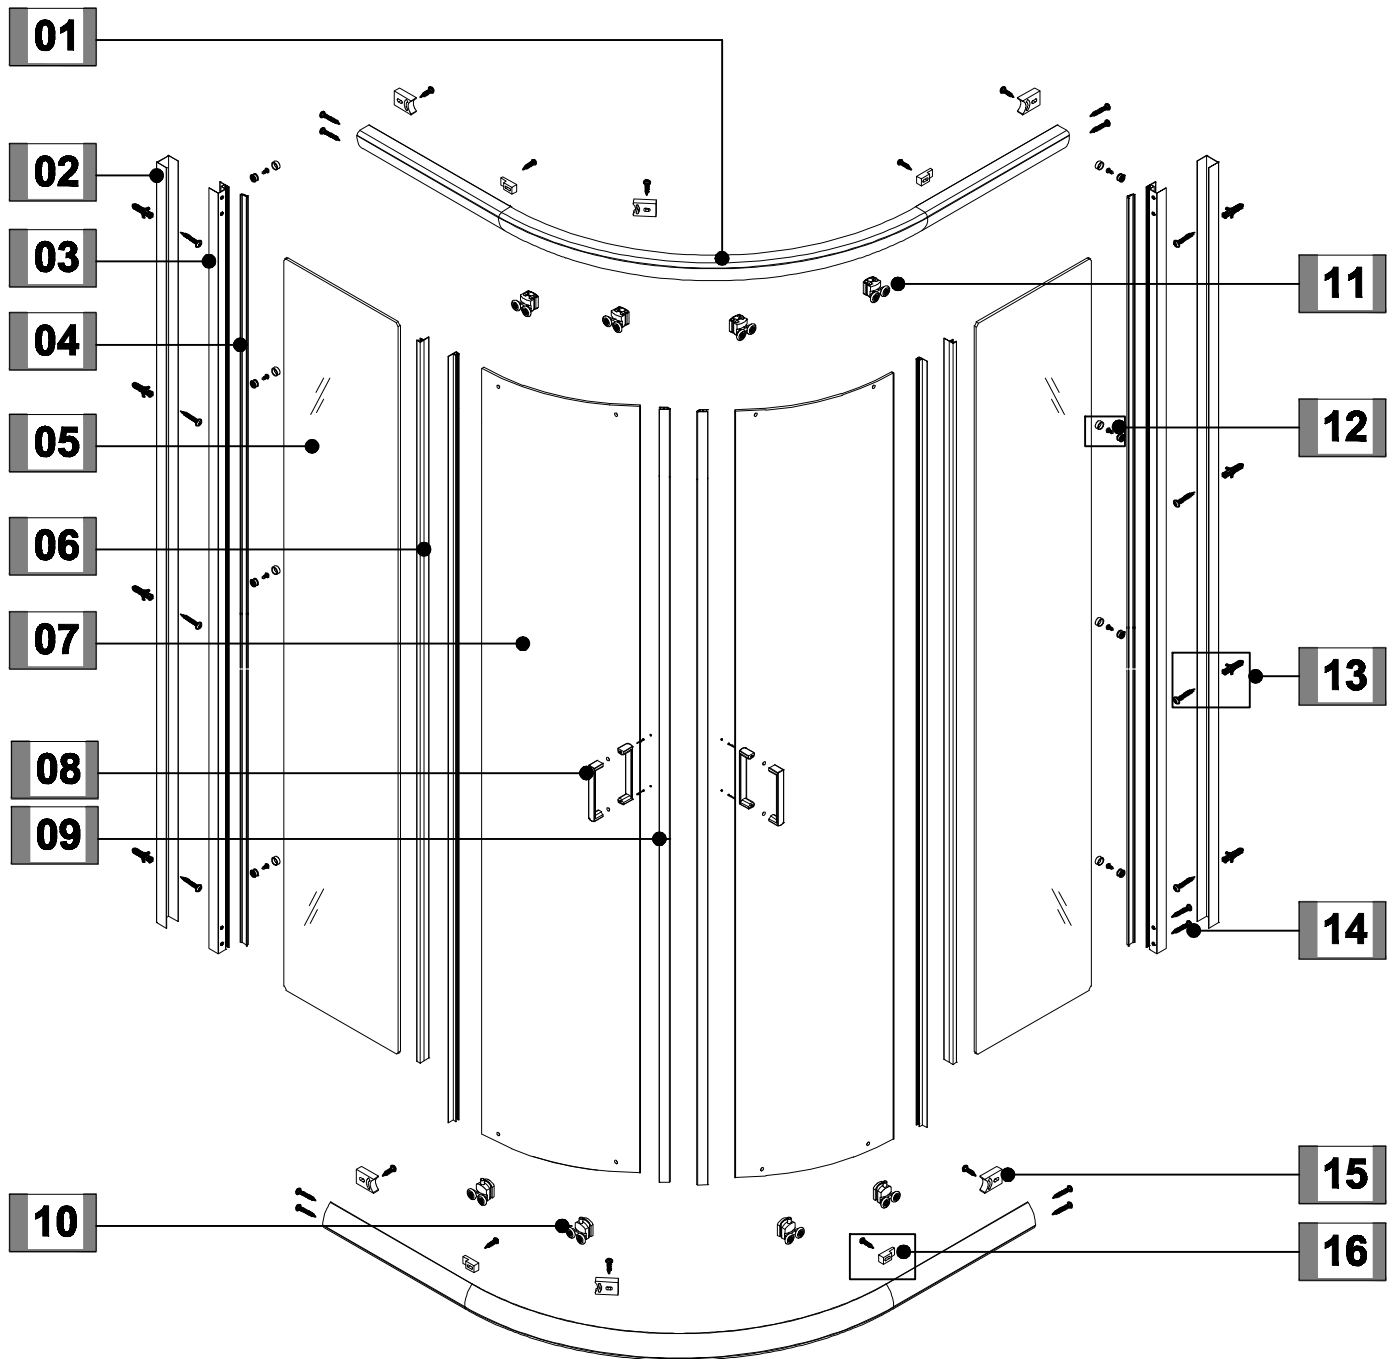


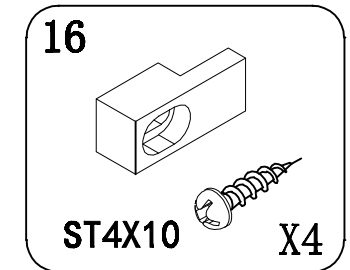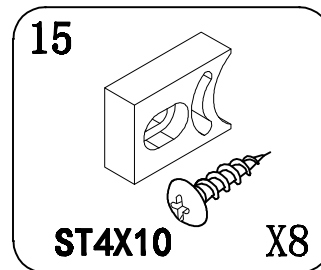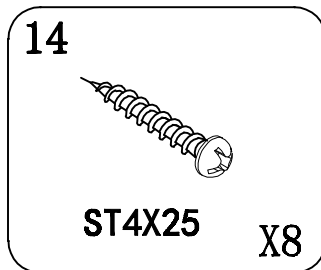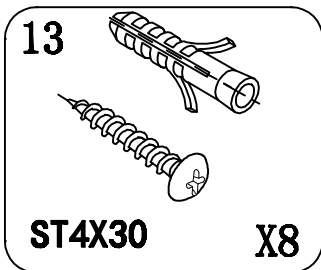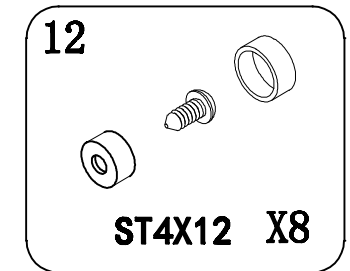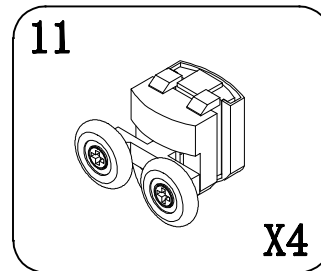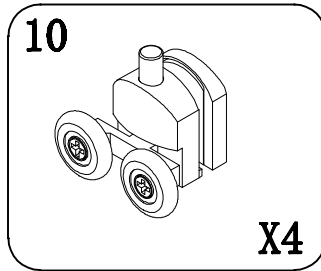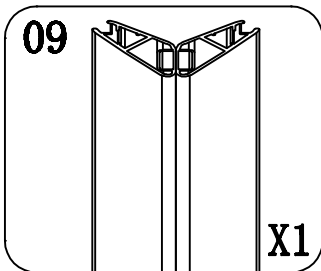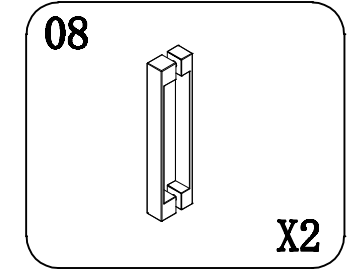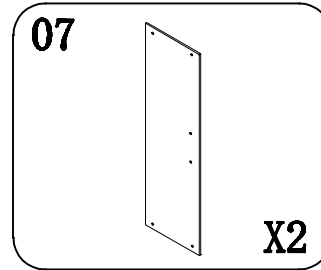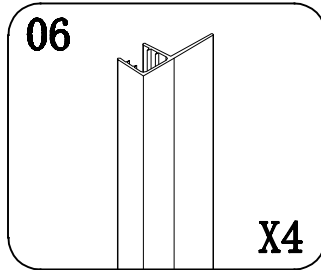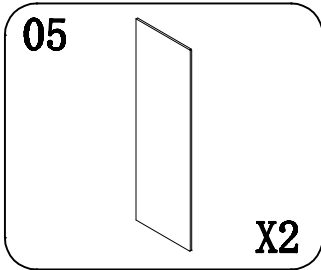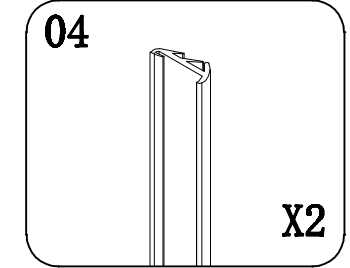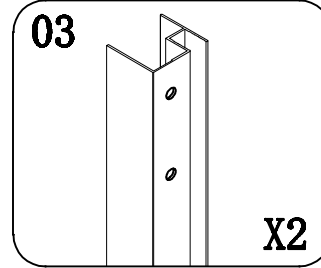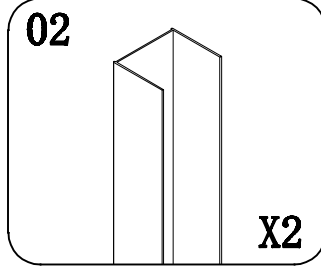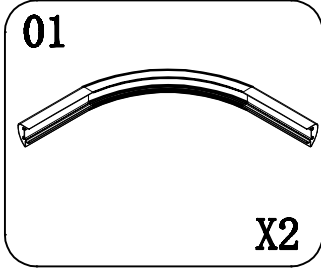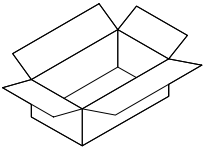




1

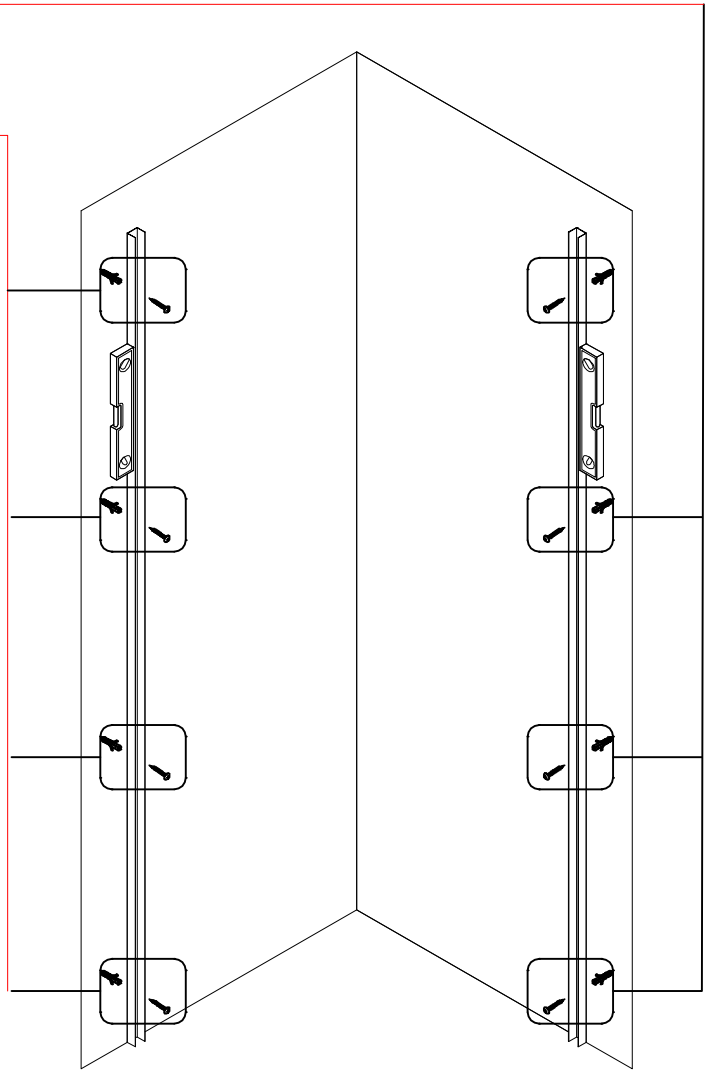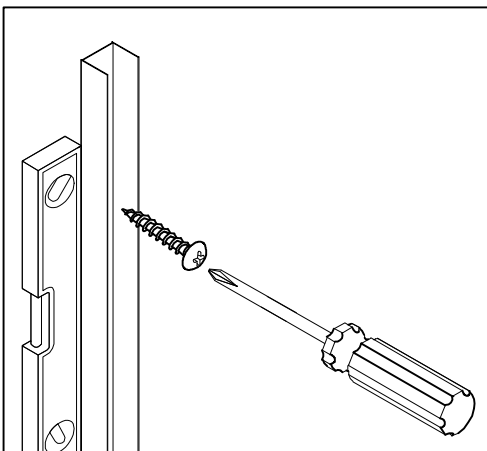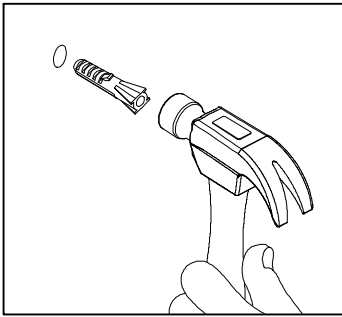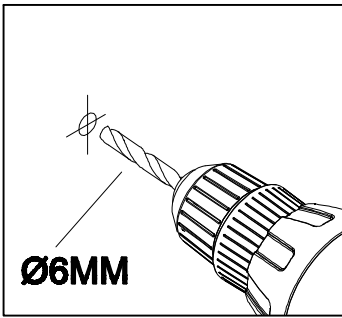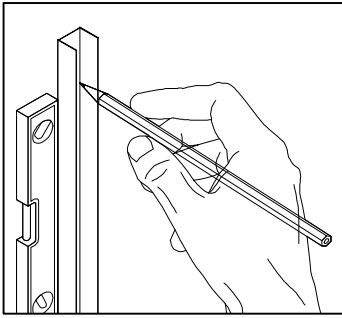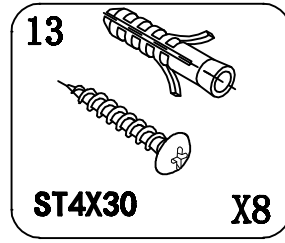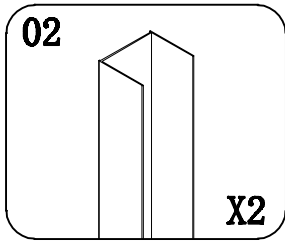

2

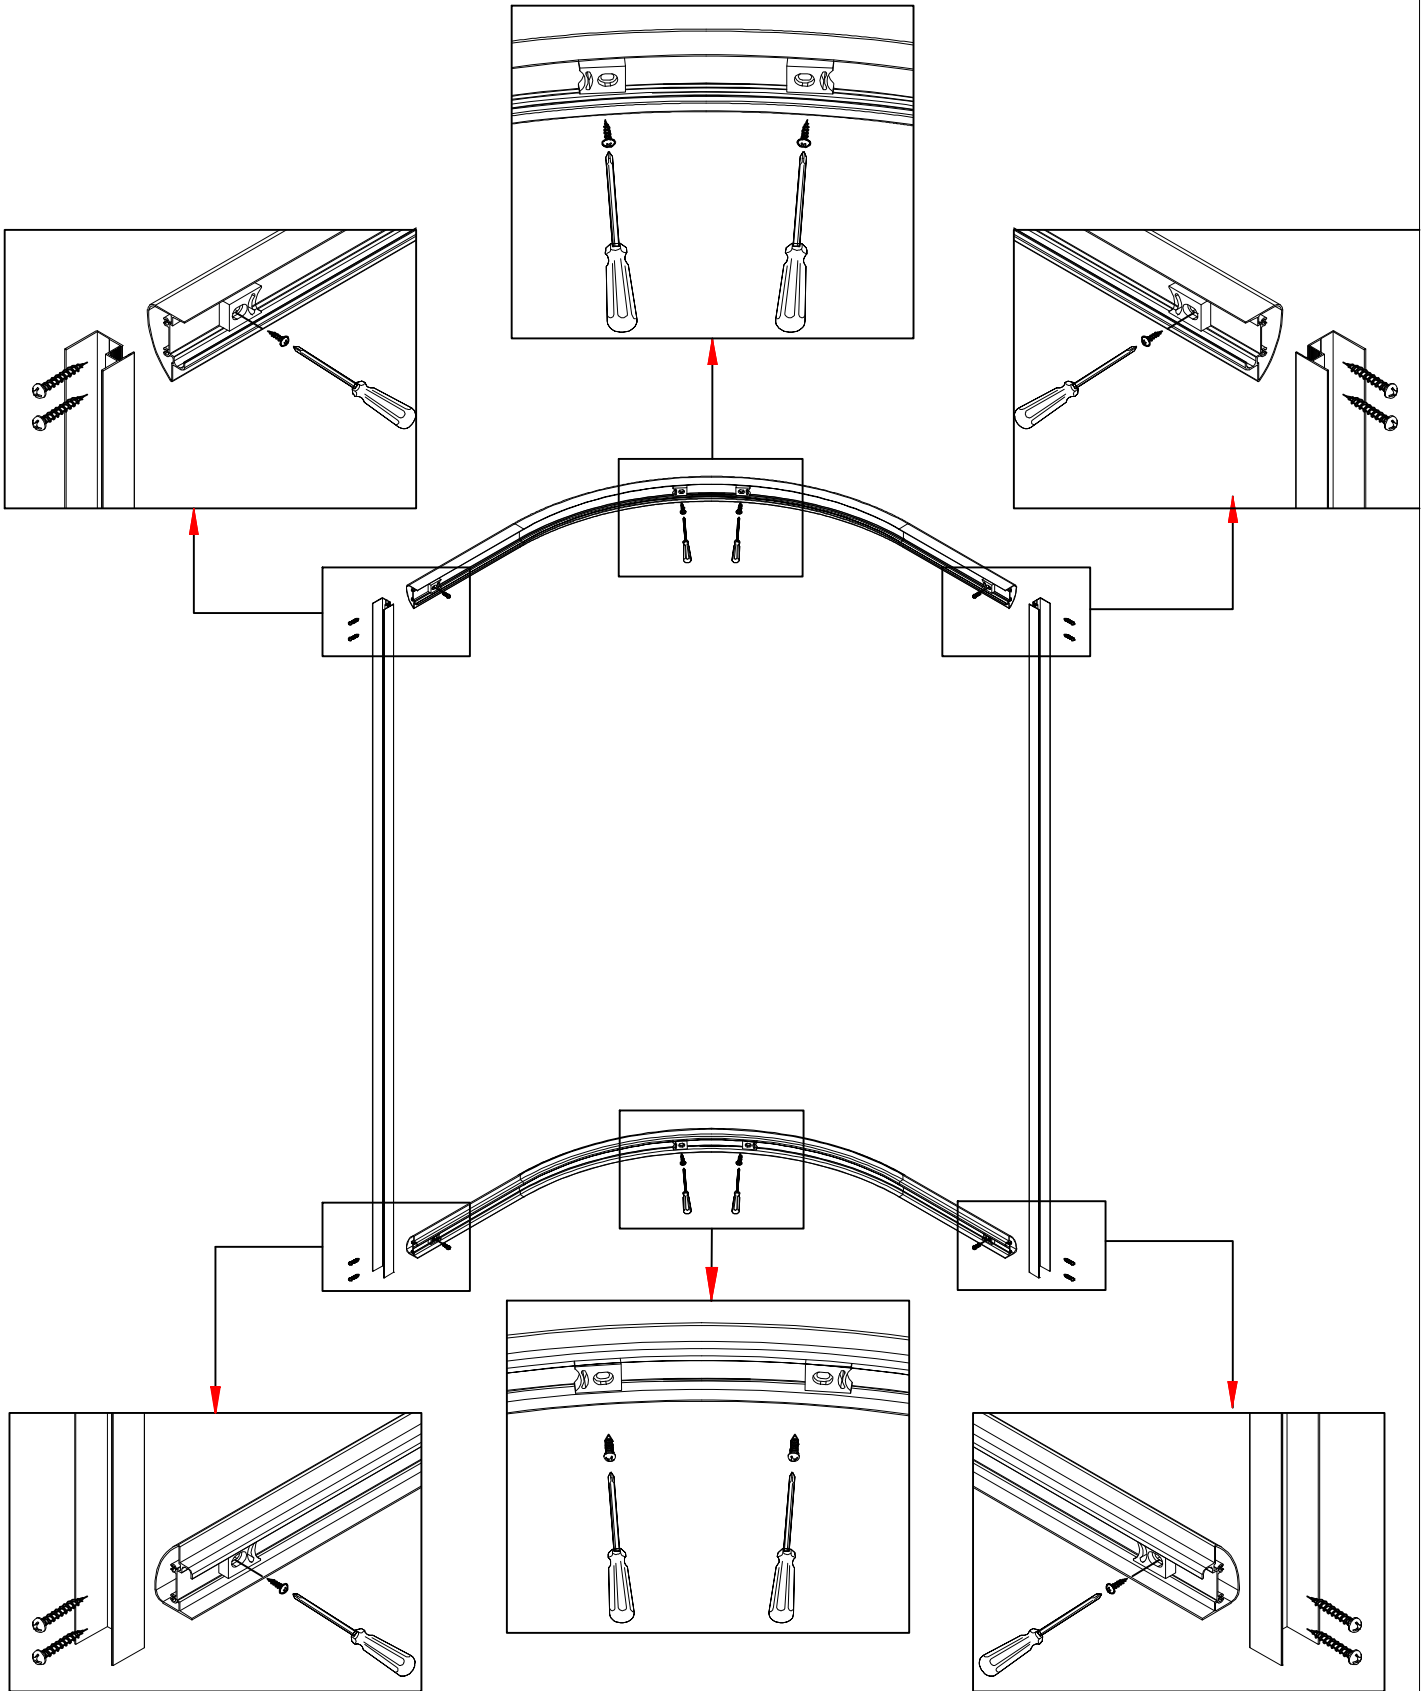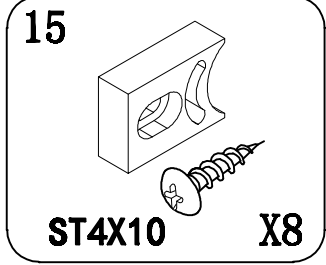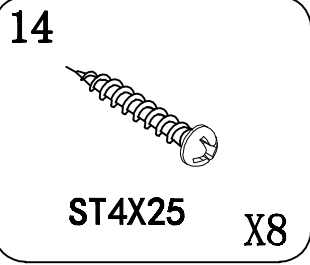


3


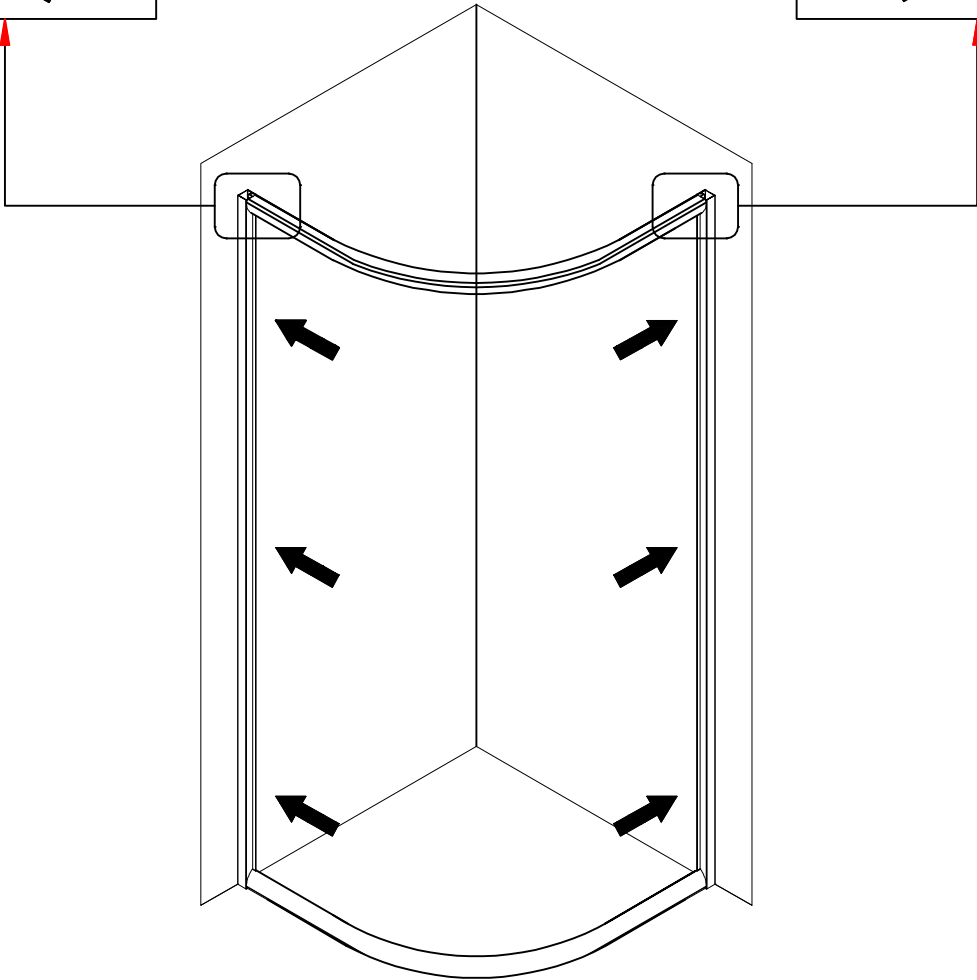
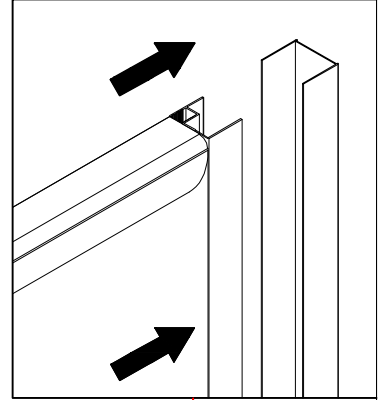
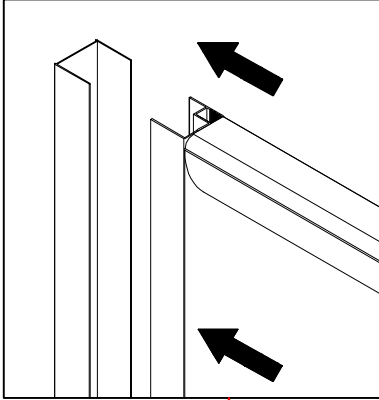


4

05




X2


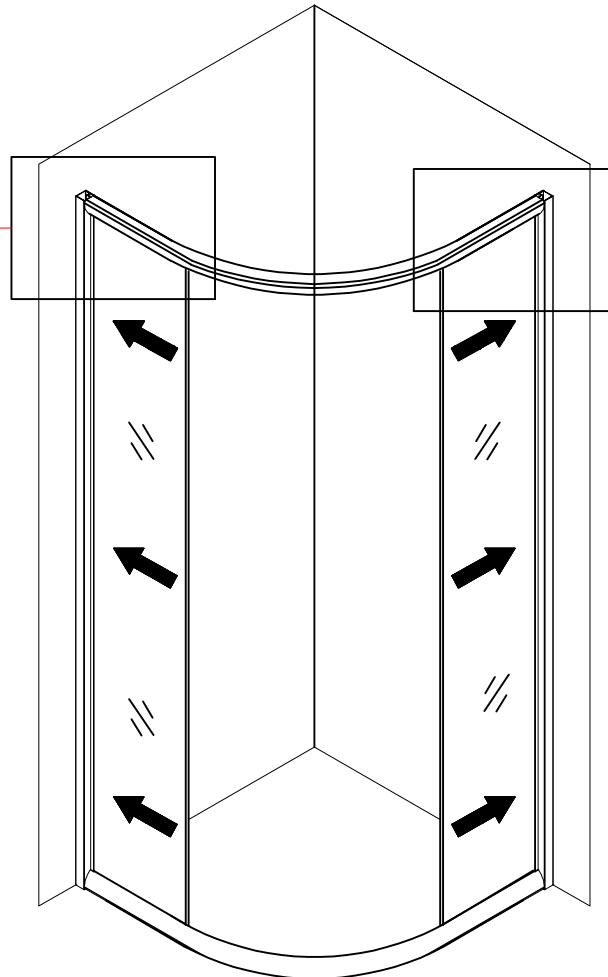
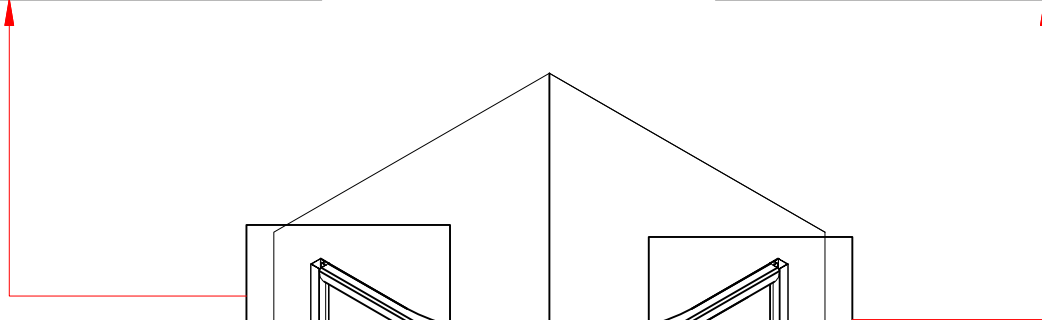
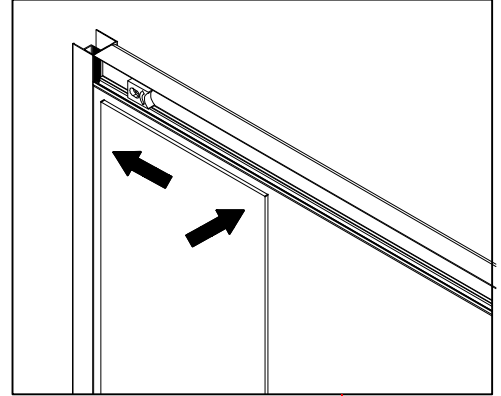
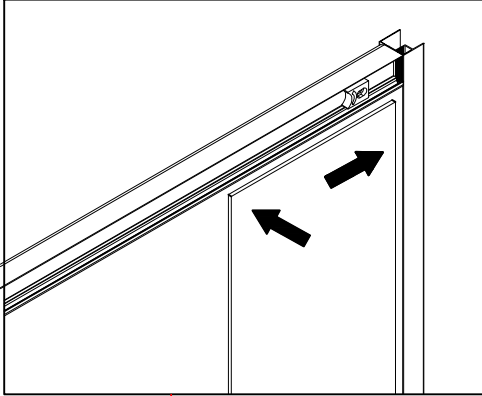



5






16

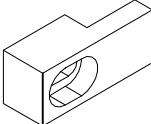

ST4X10 X4

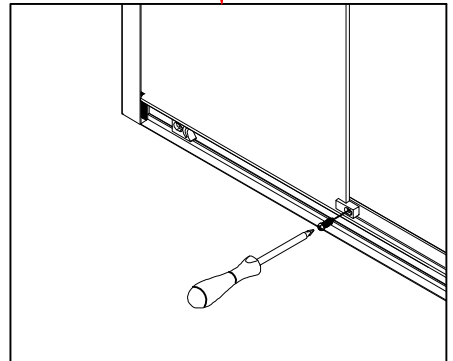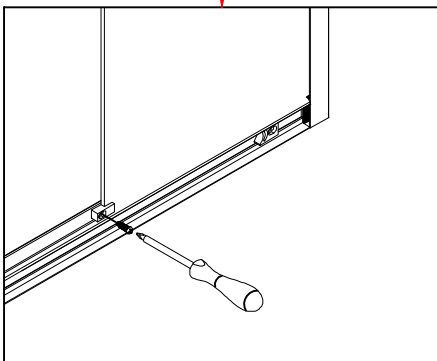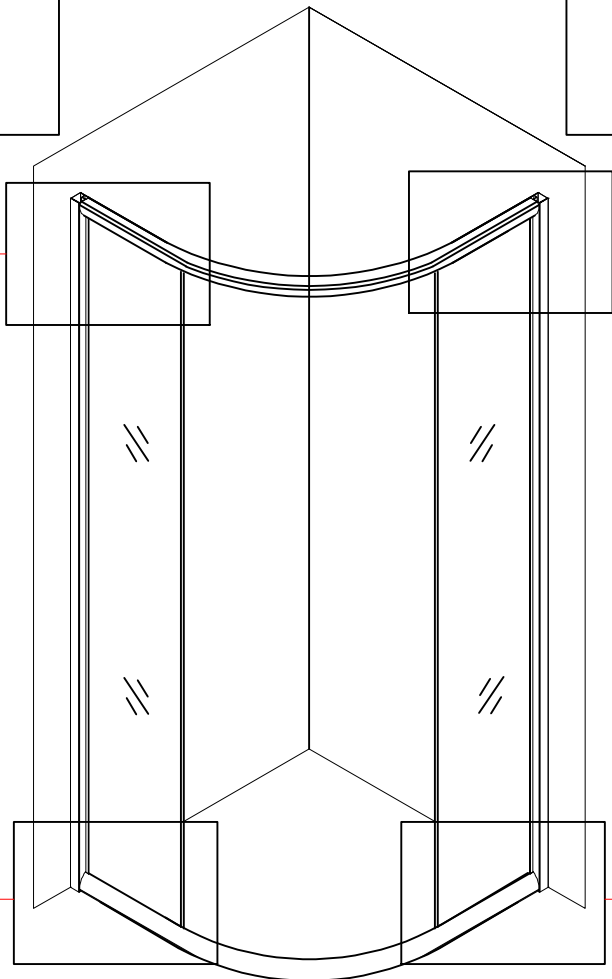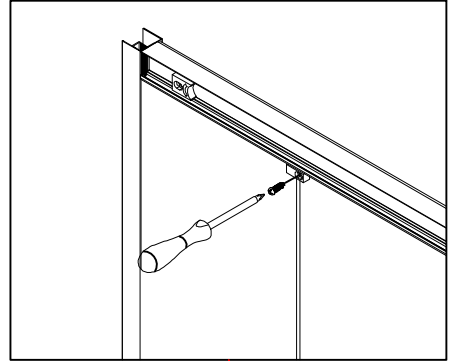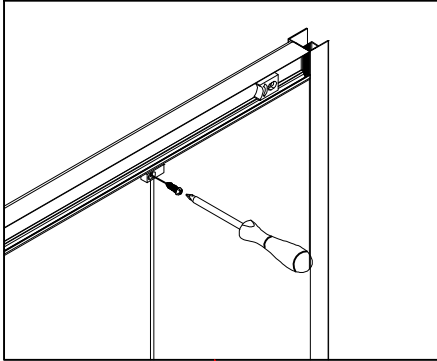


6

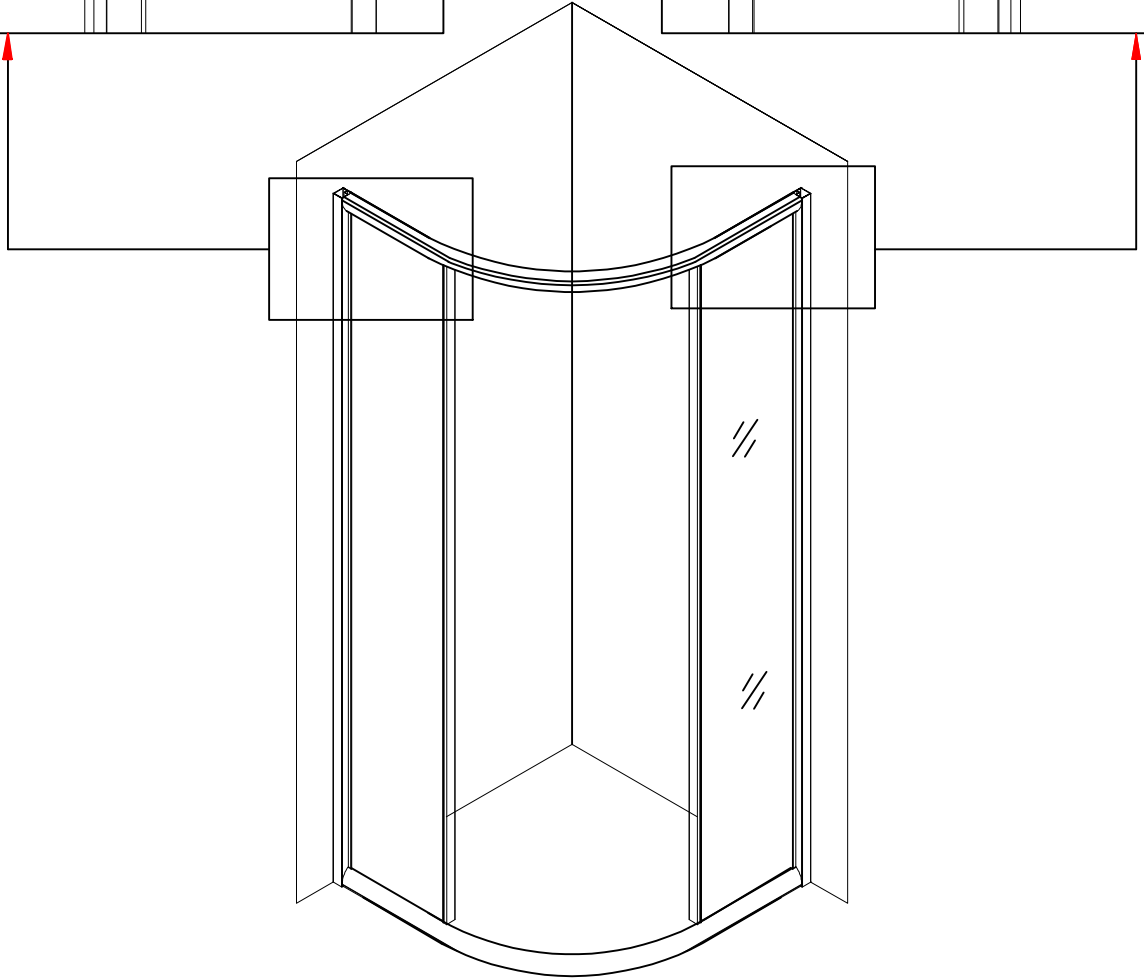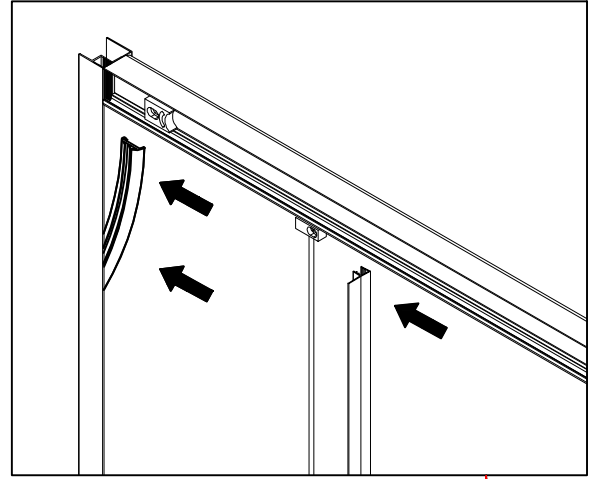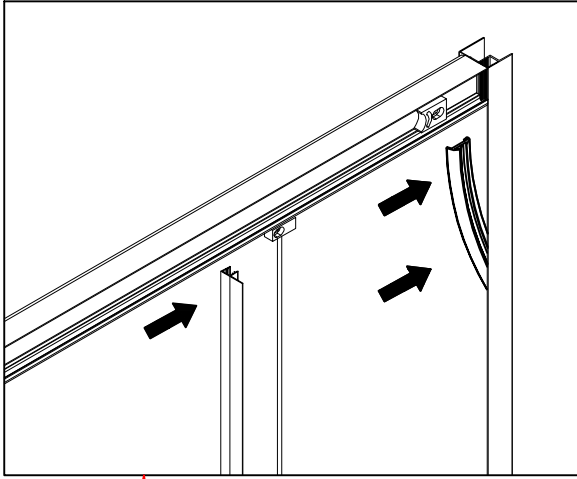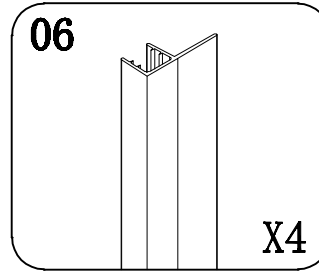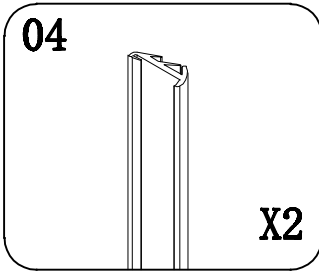


7

06




X4

09

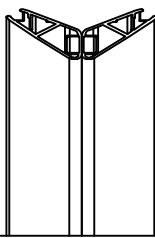


X1

10

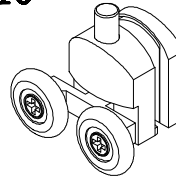





X4

11

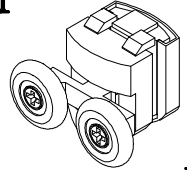

X4

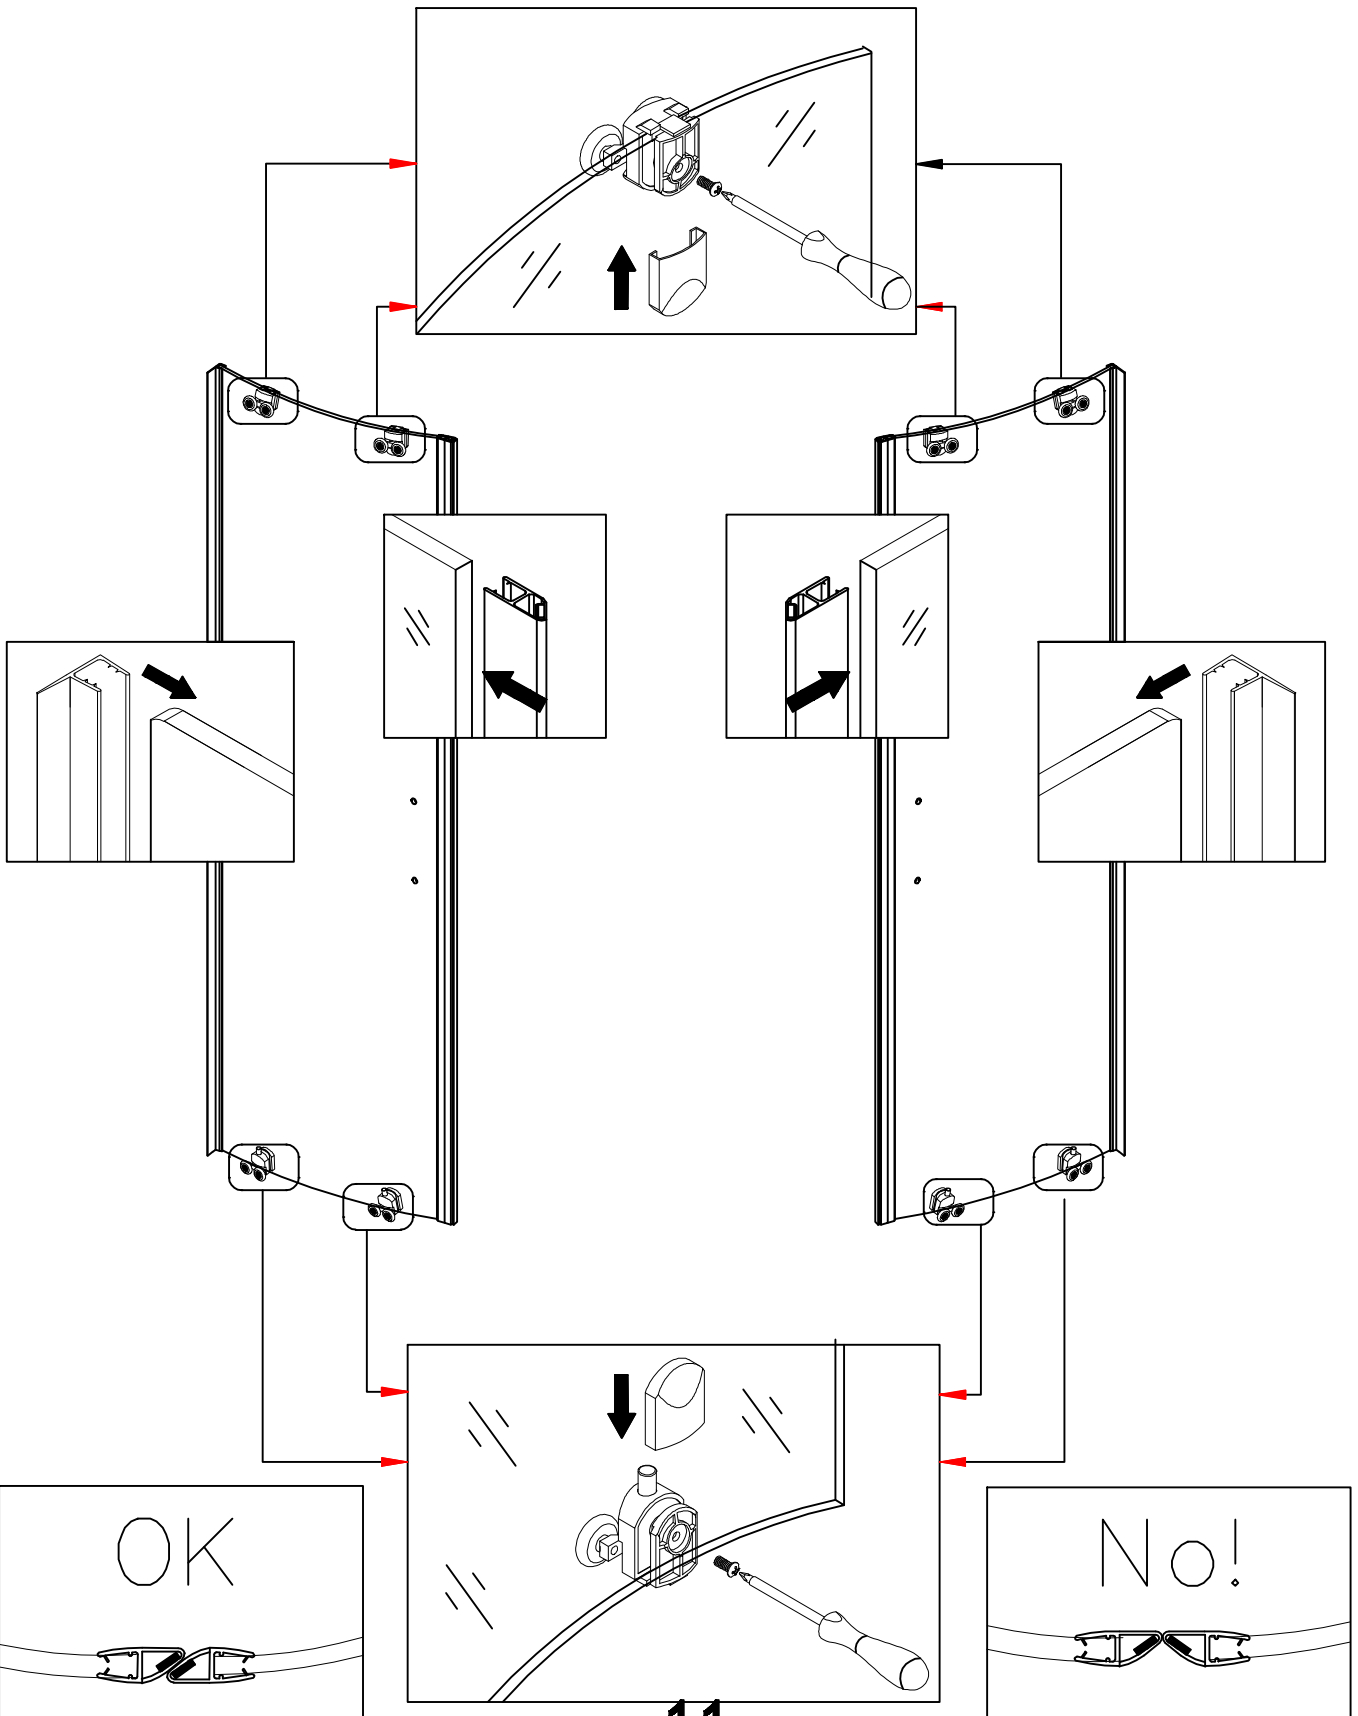


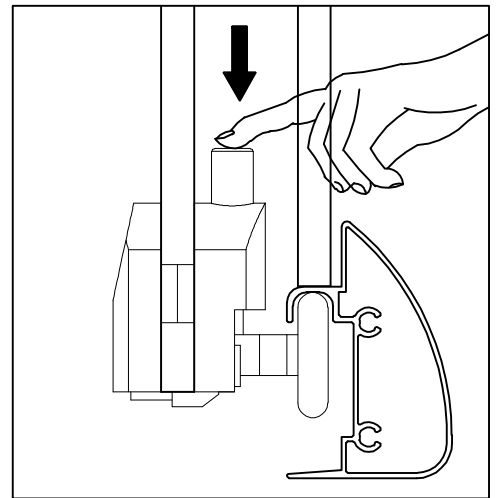
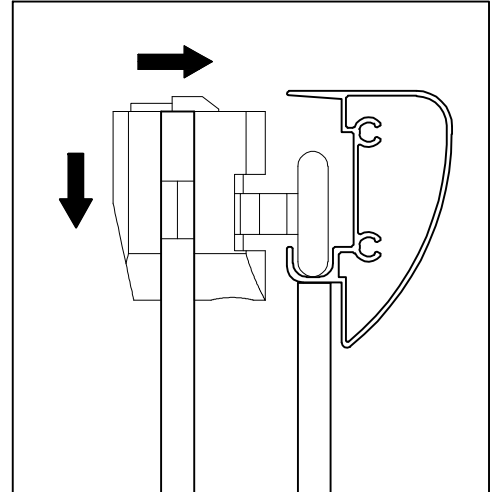
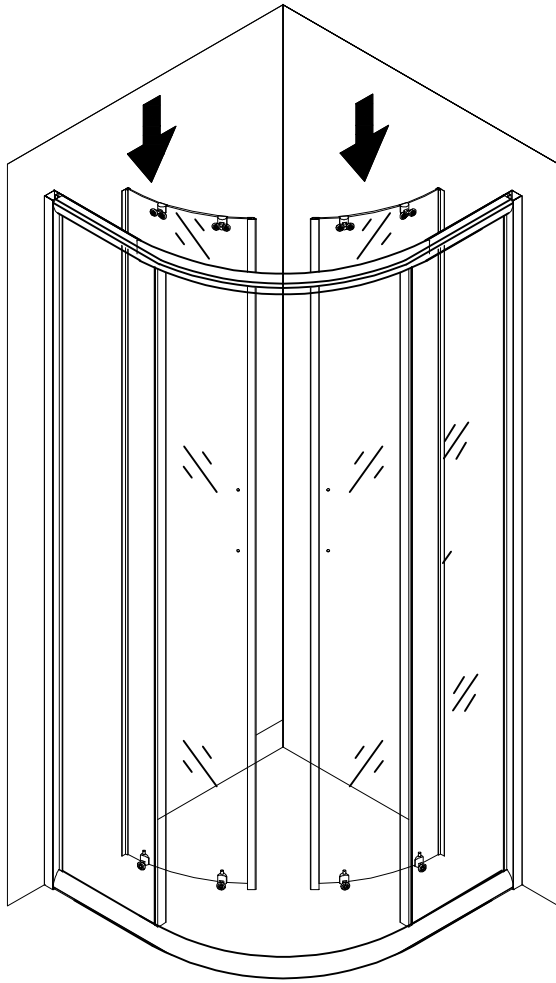


9

08




X2




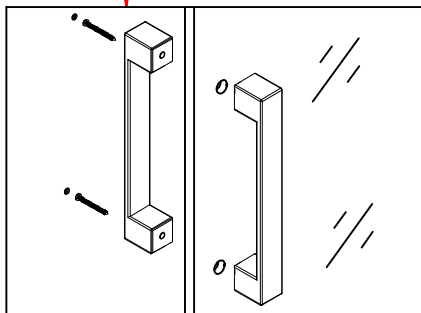
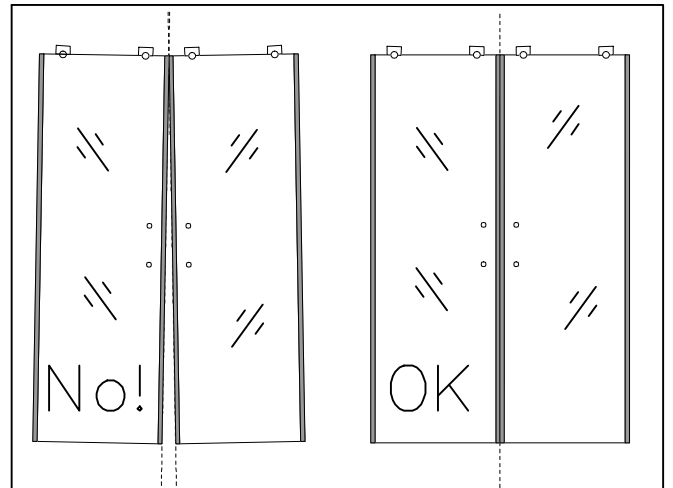
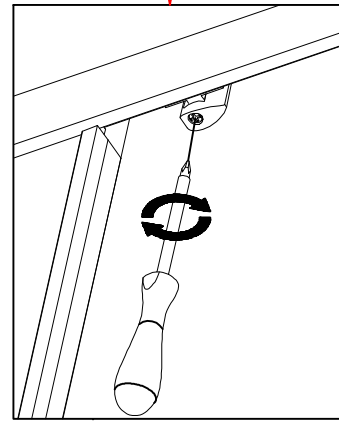
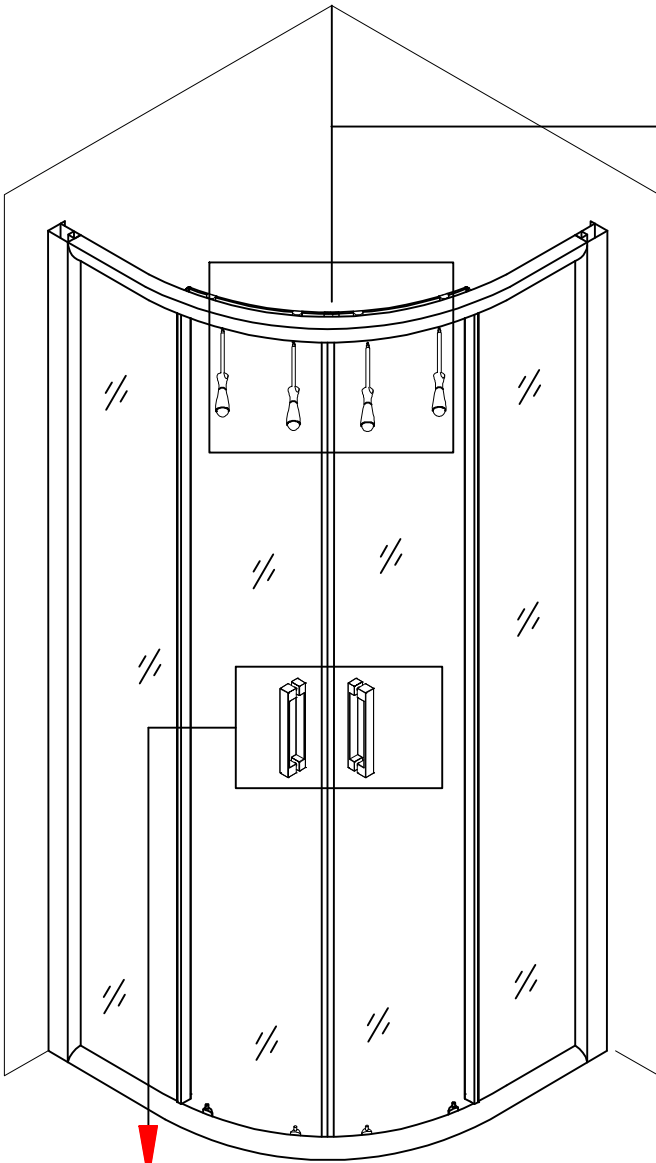


10

12

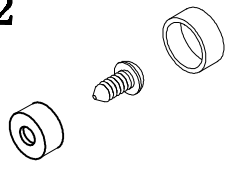

ST4X12 X8

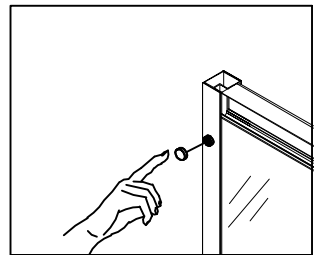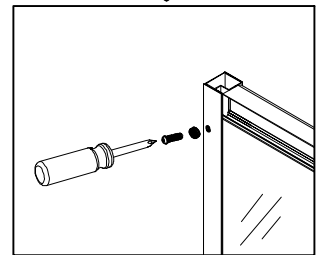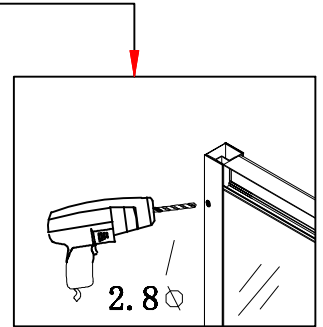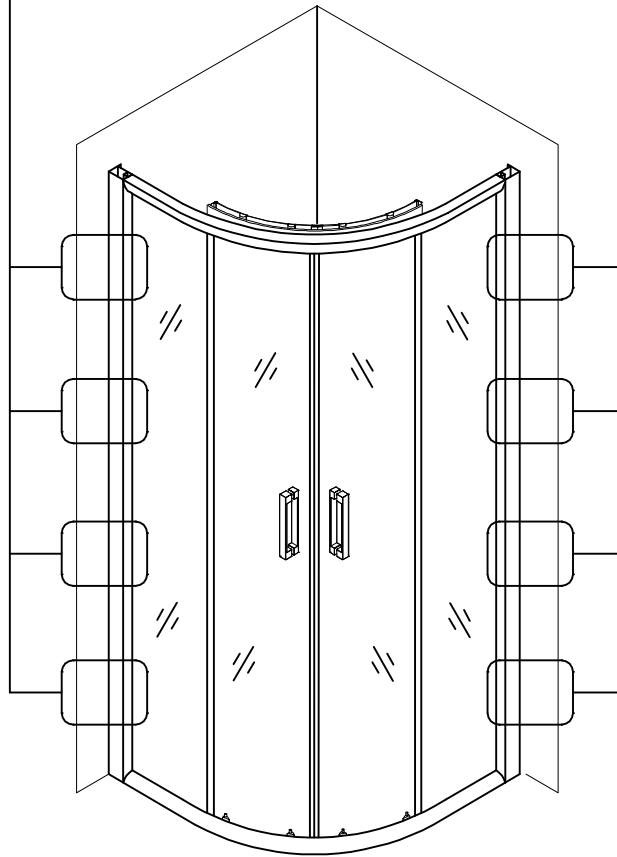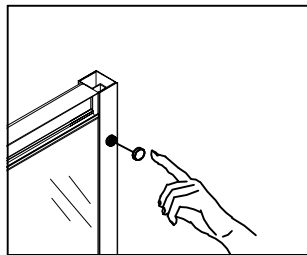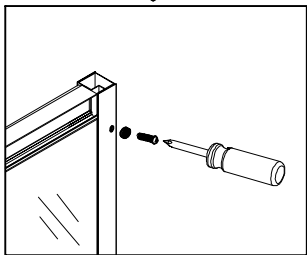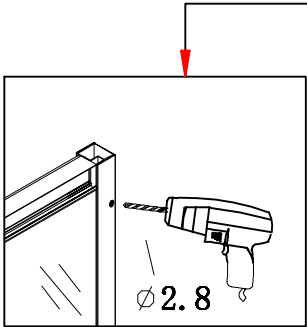

11

