


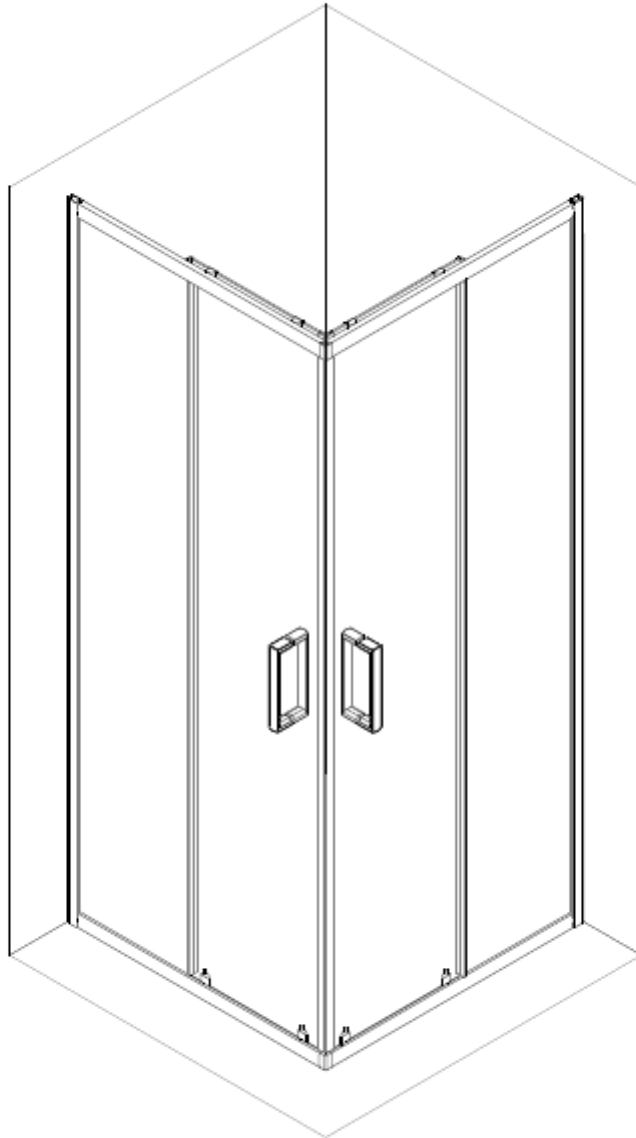
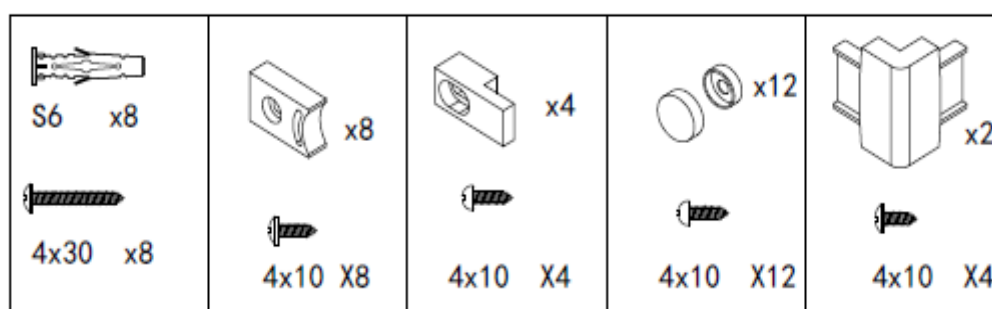
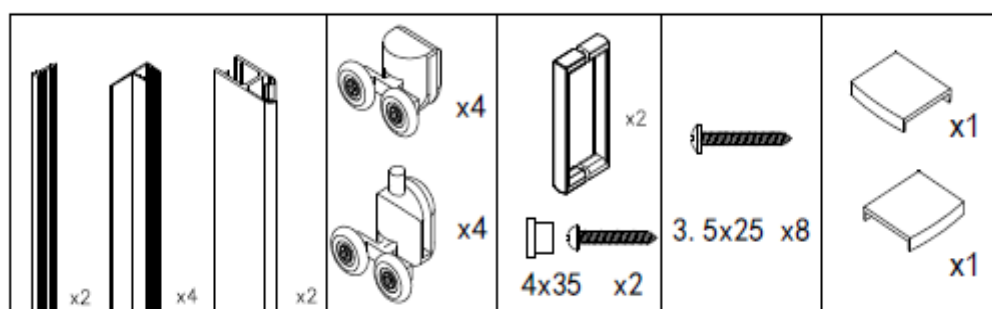


Návod k montáži sprchový kout HYD-SK93

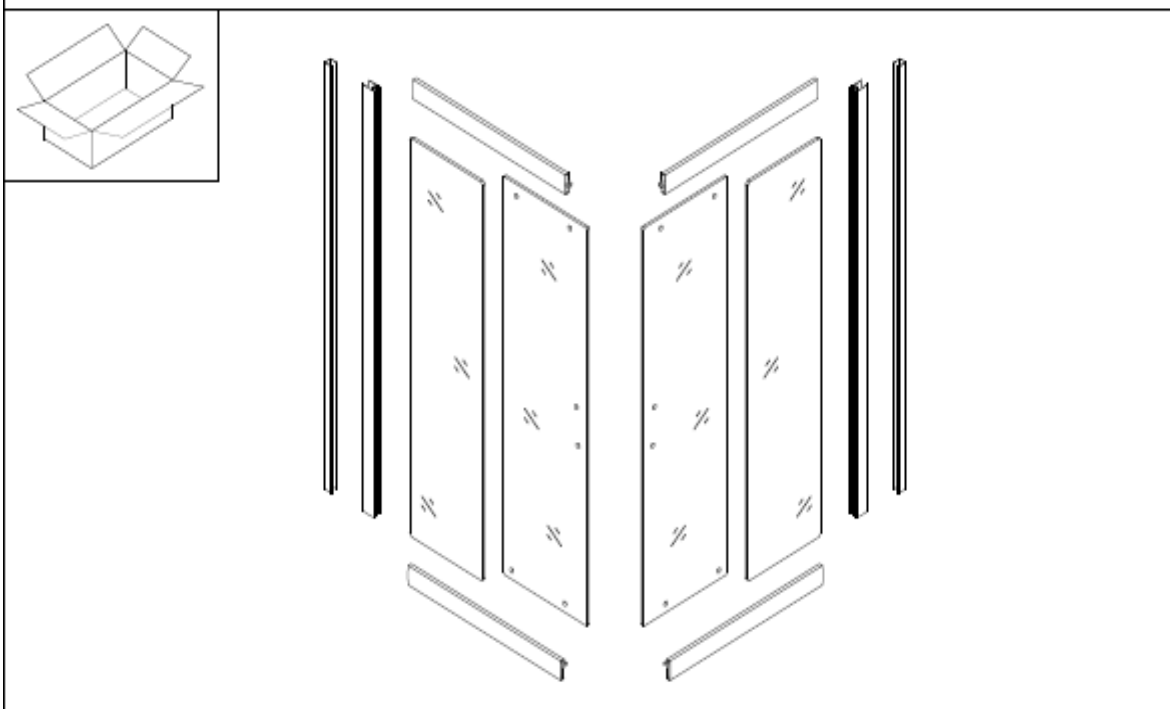

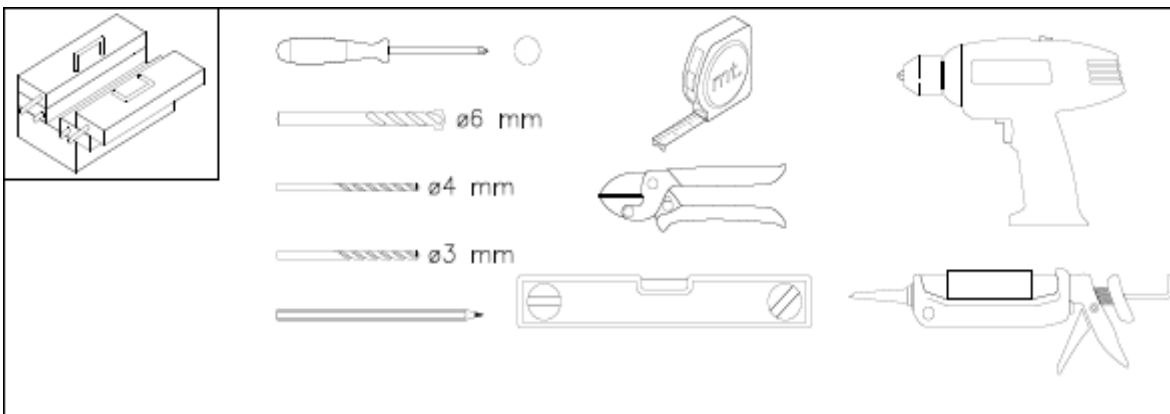


1

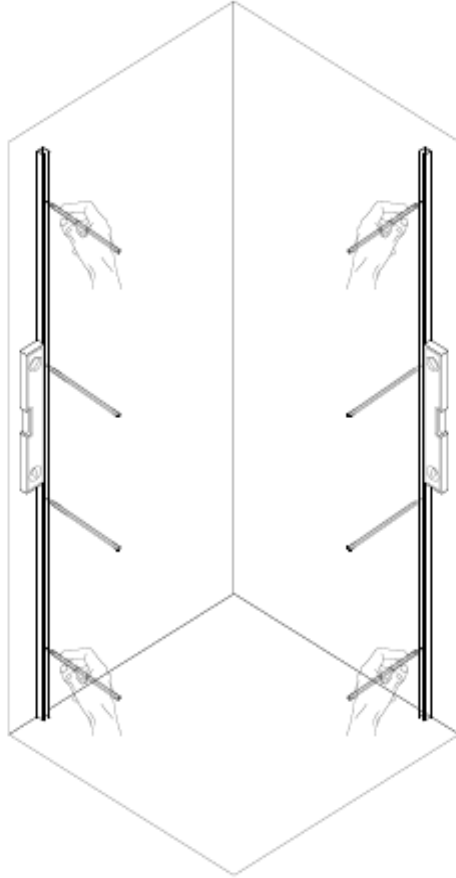


2

 ø6 mm

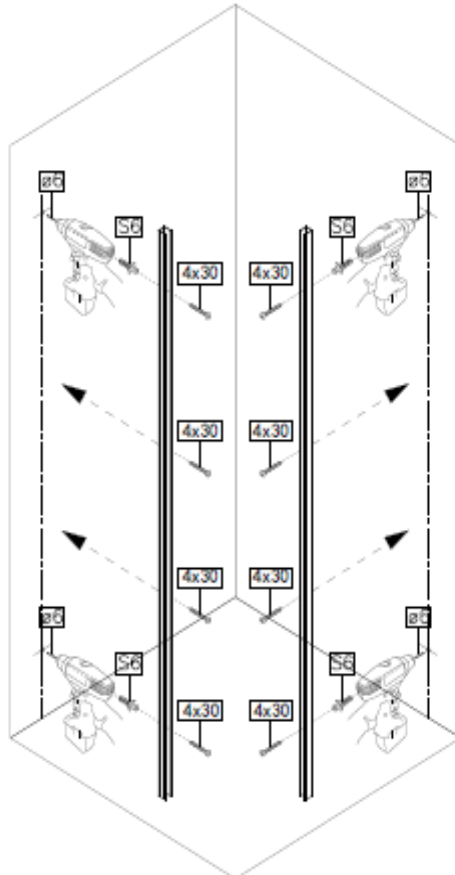




3

3





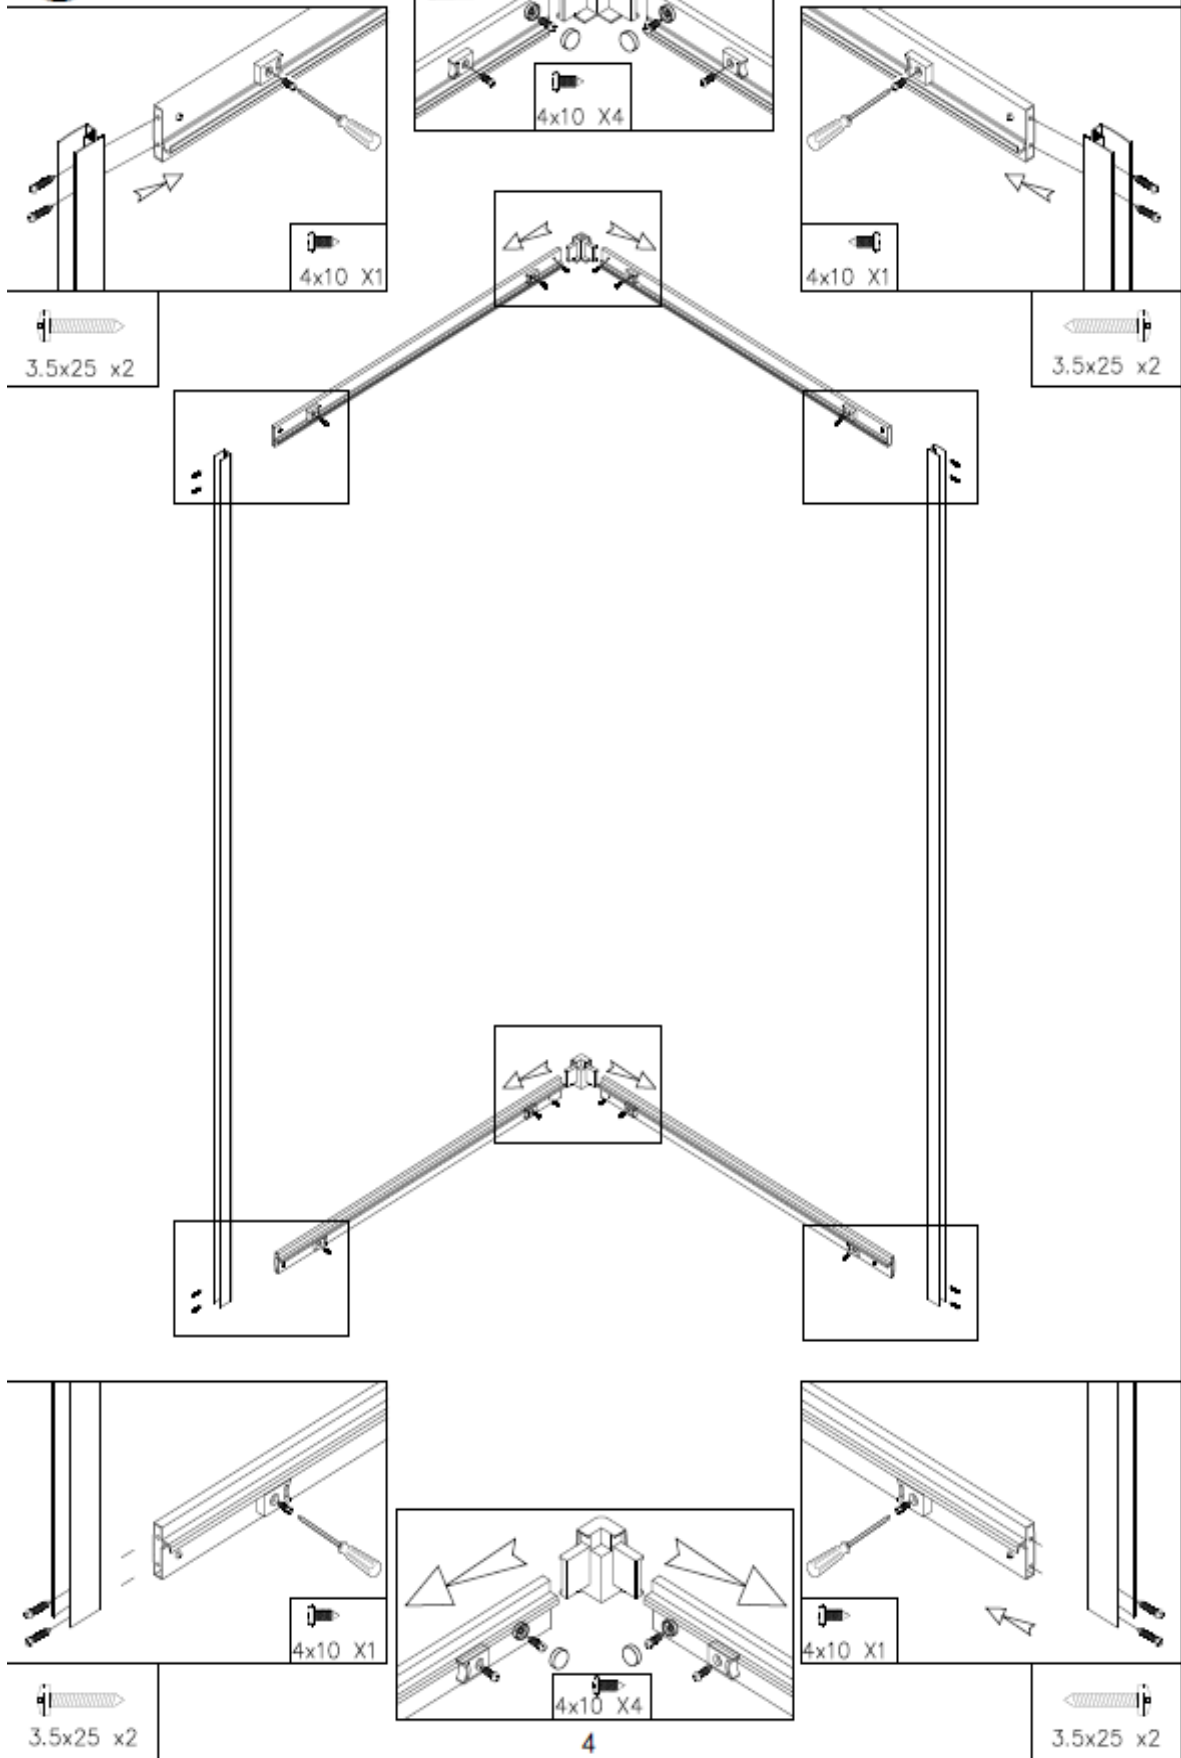


4

4



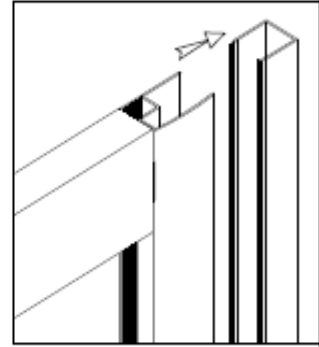
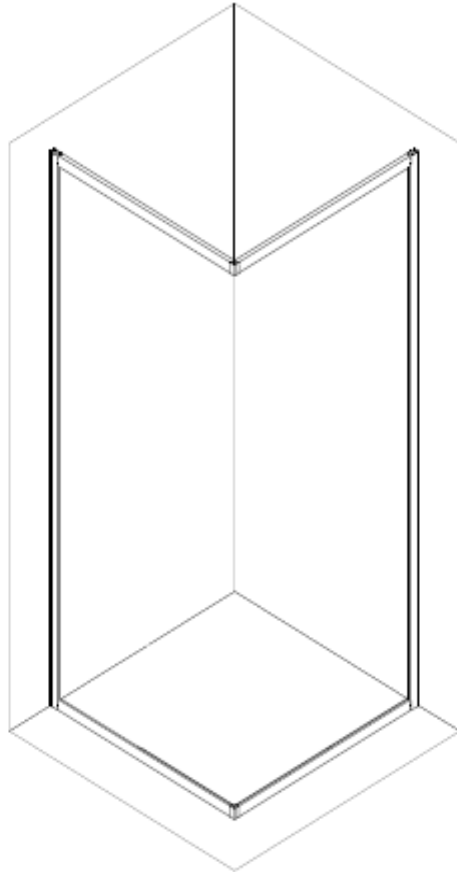
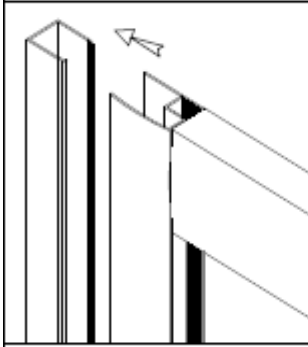


5


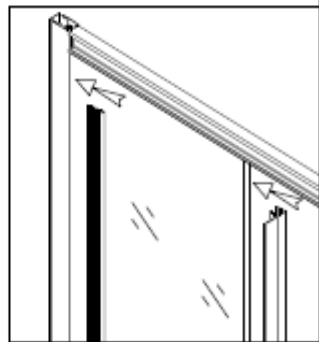
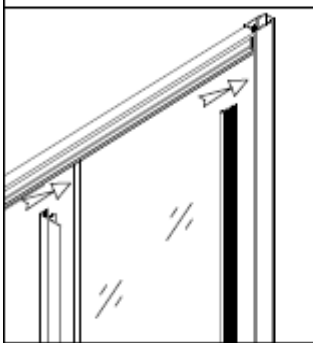
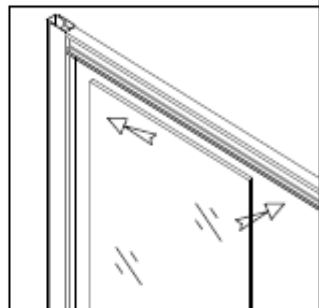
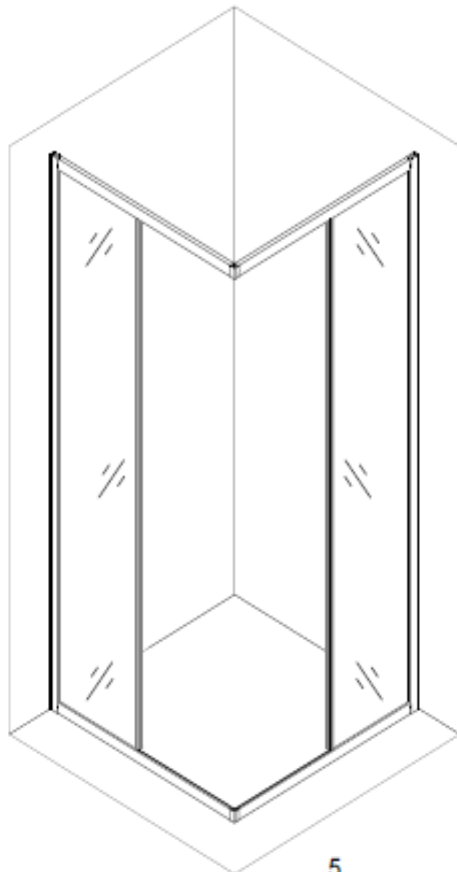
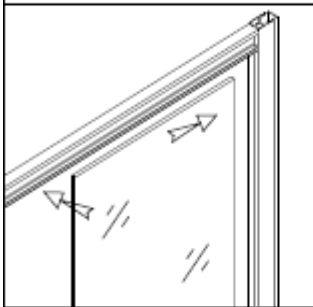


5




6

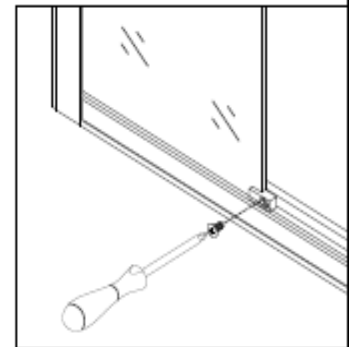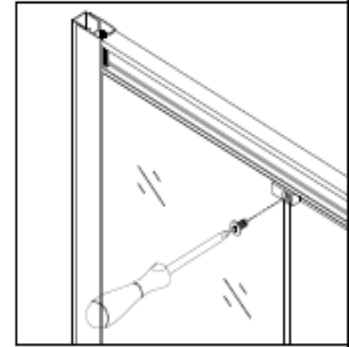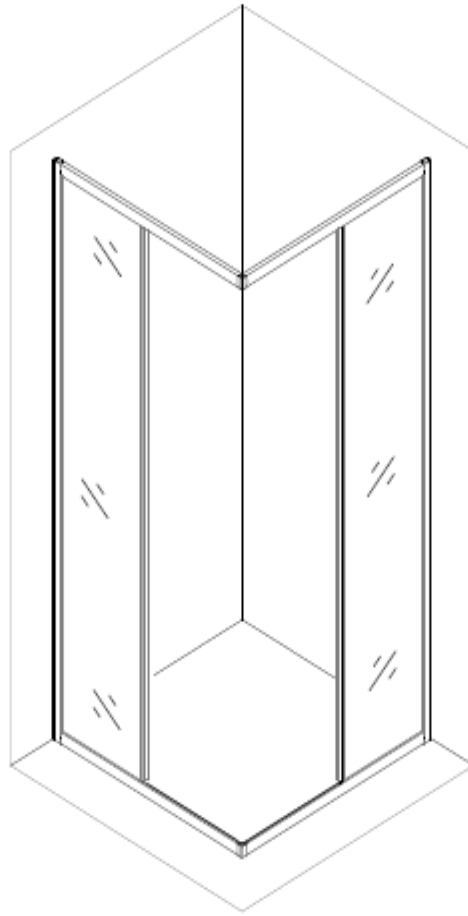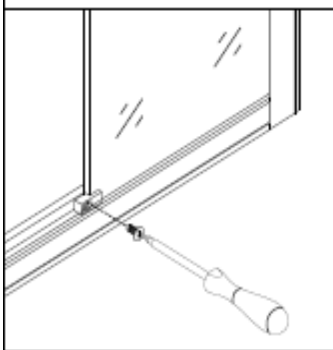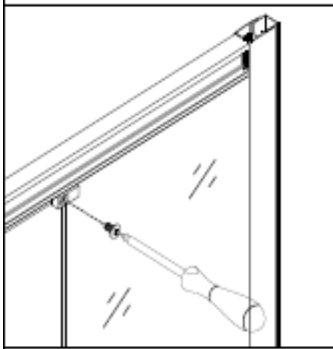




7

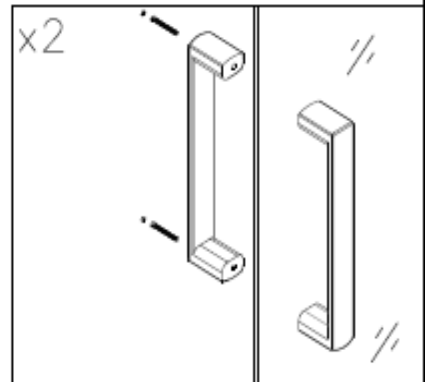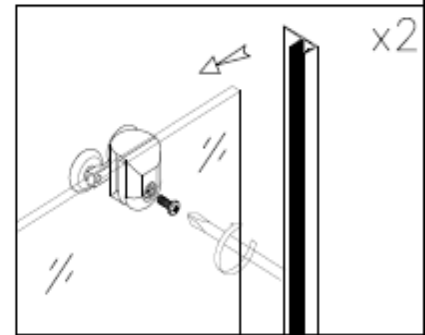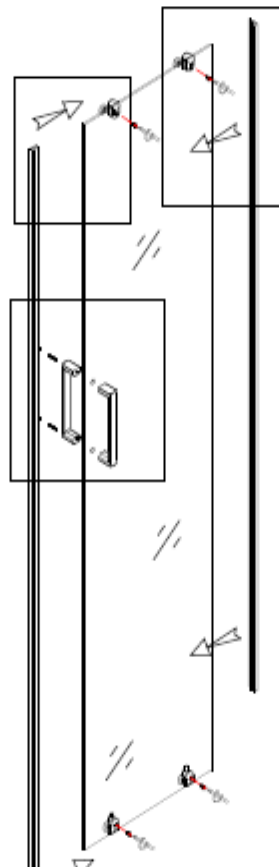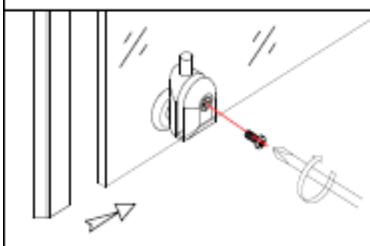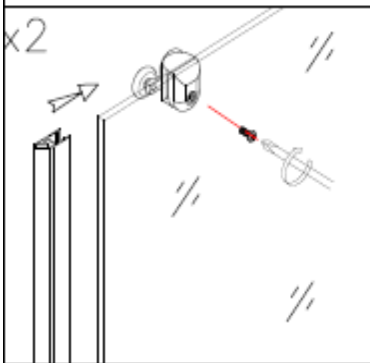






8

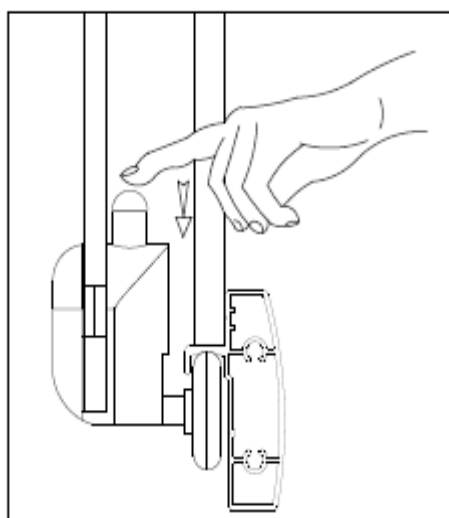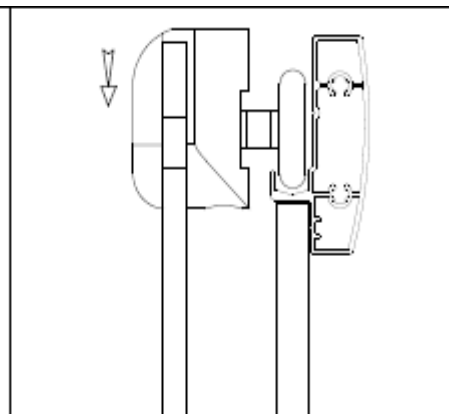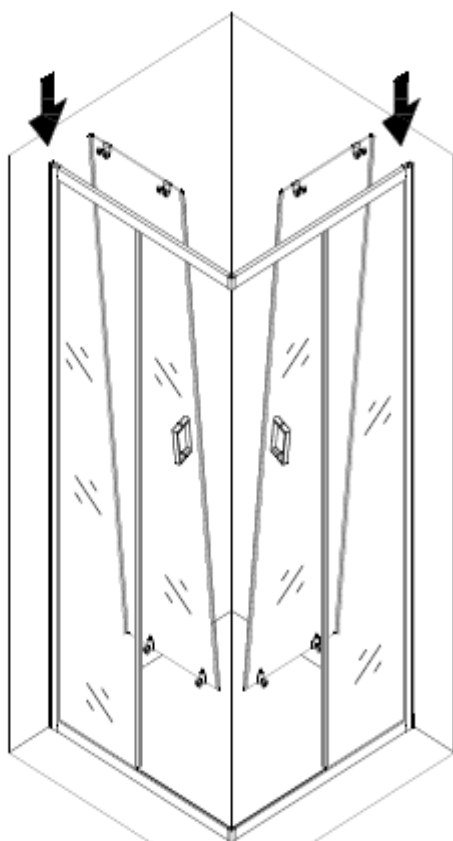

9

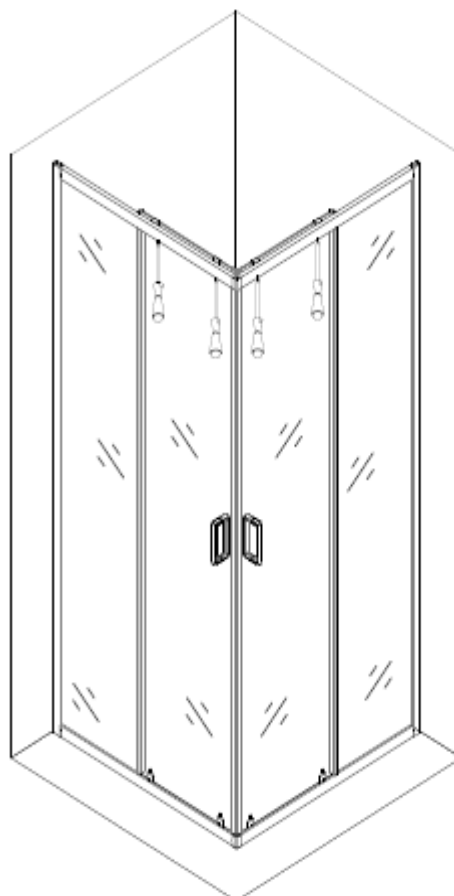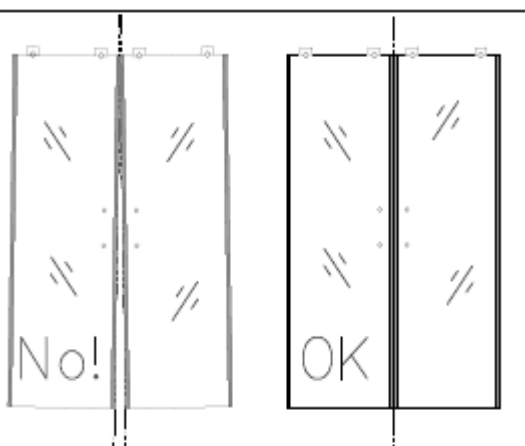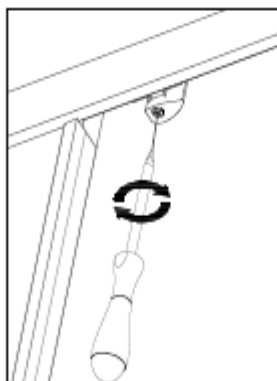

10

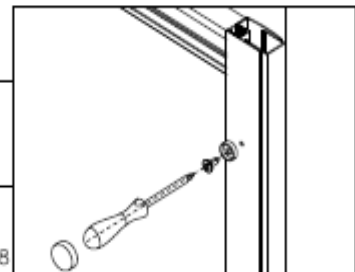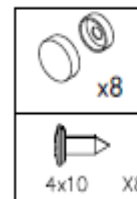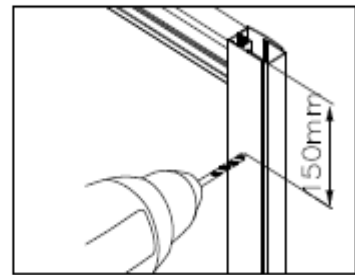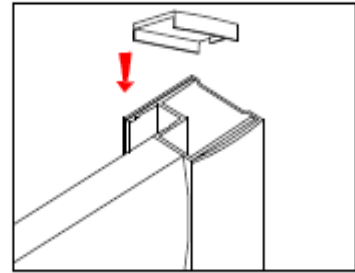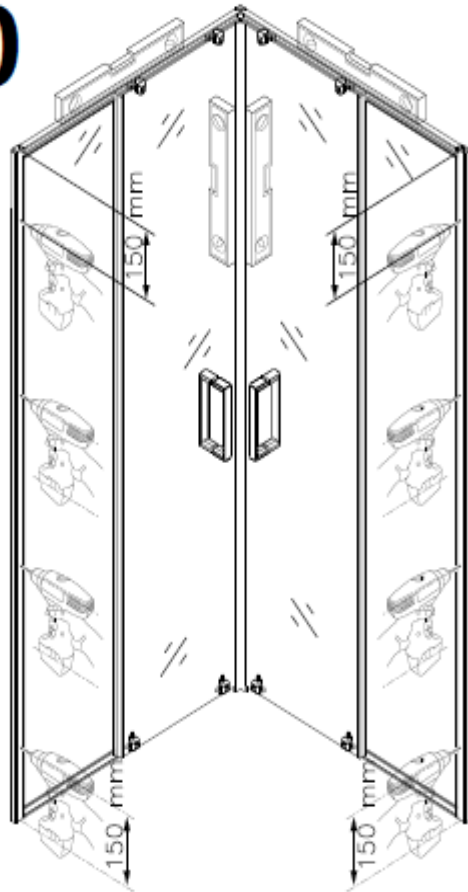

11

