


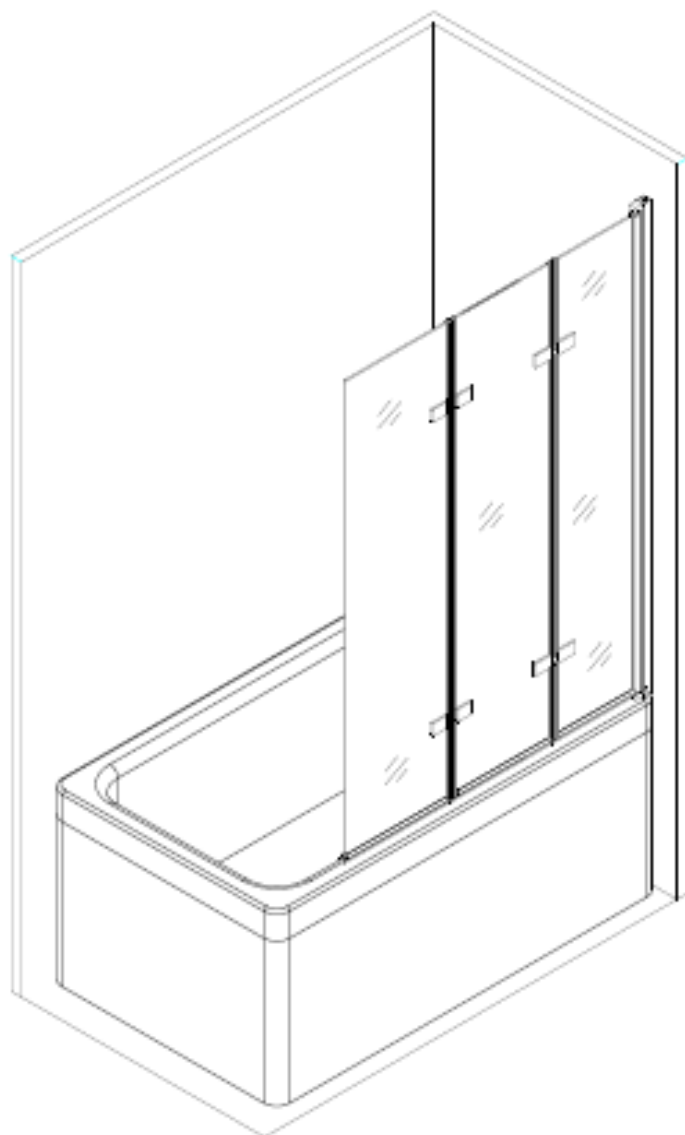
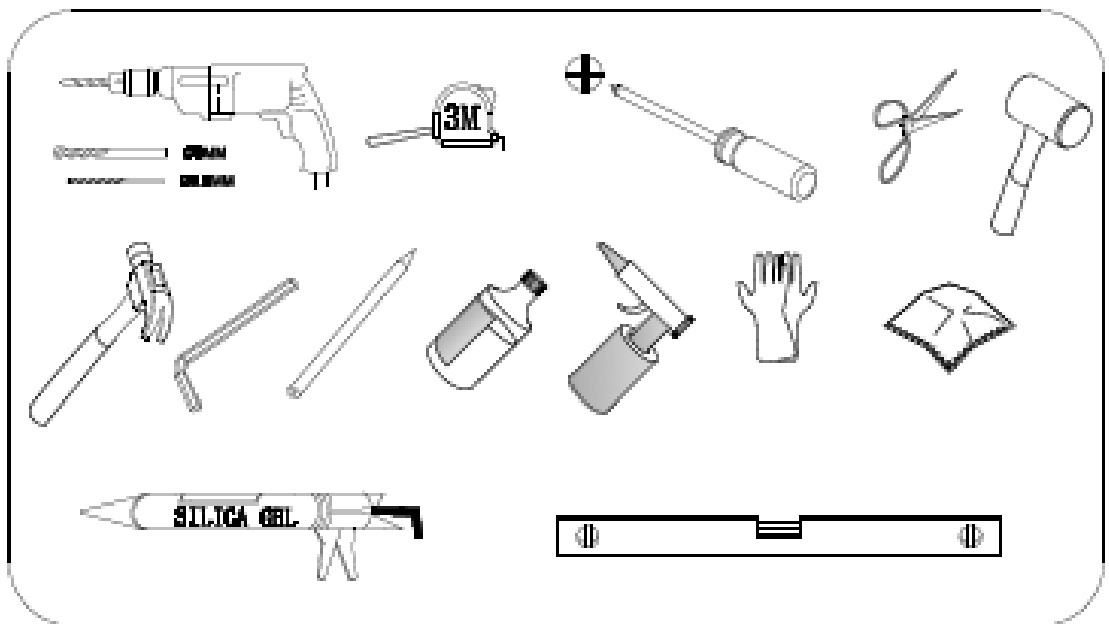
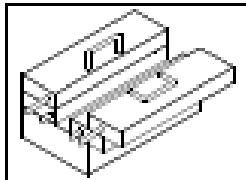
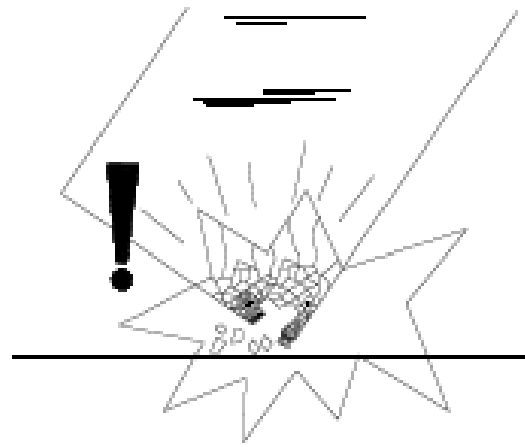














## Návod k montáži

### Trojdílná vanová zástěna HYD-KPE-1203 120x140



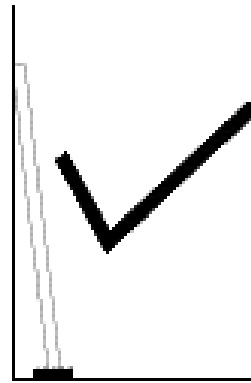


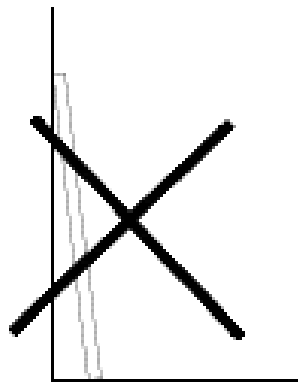


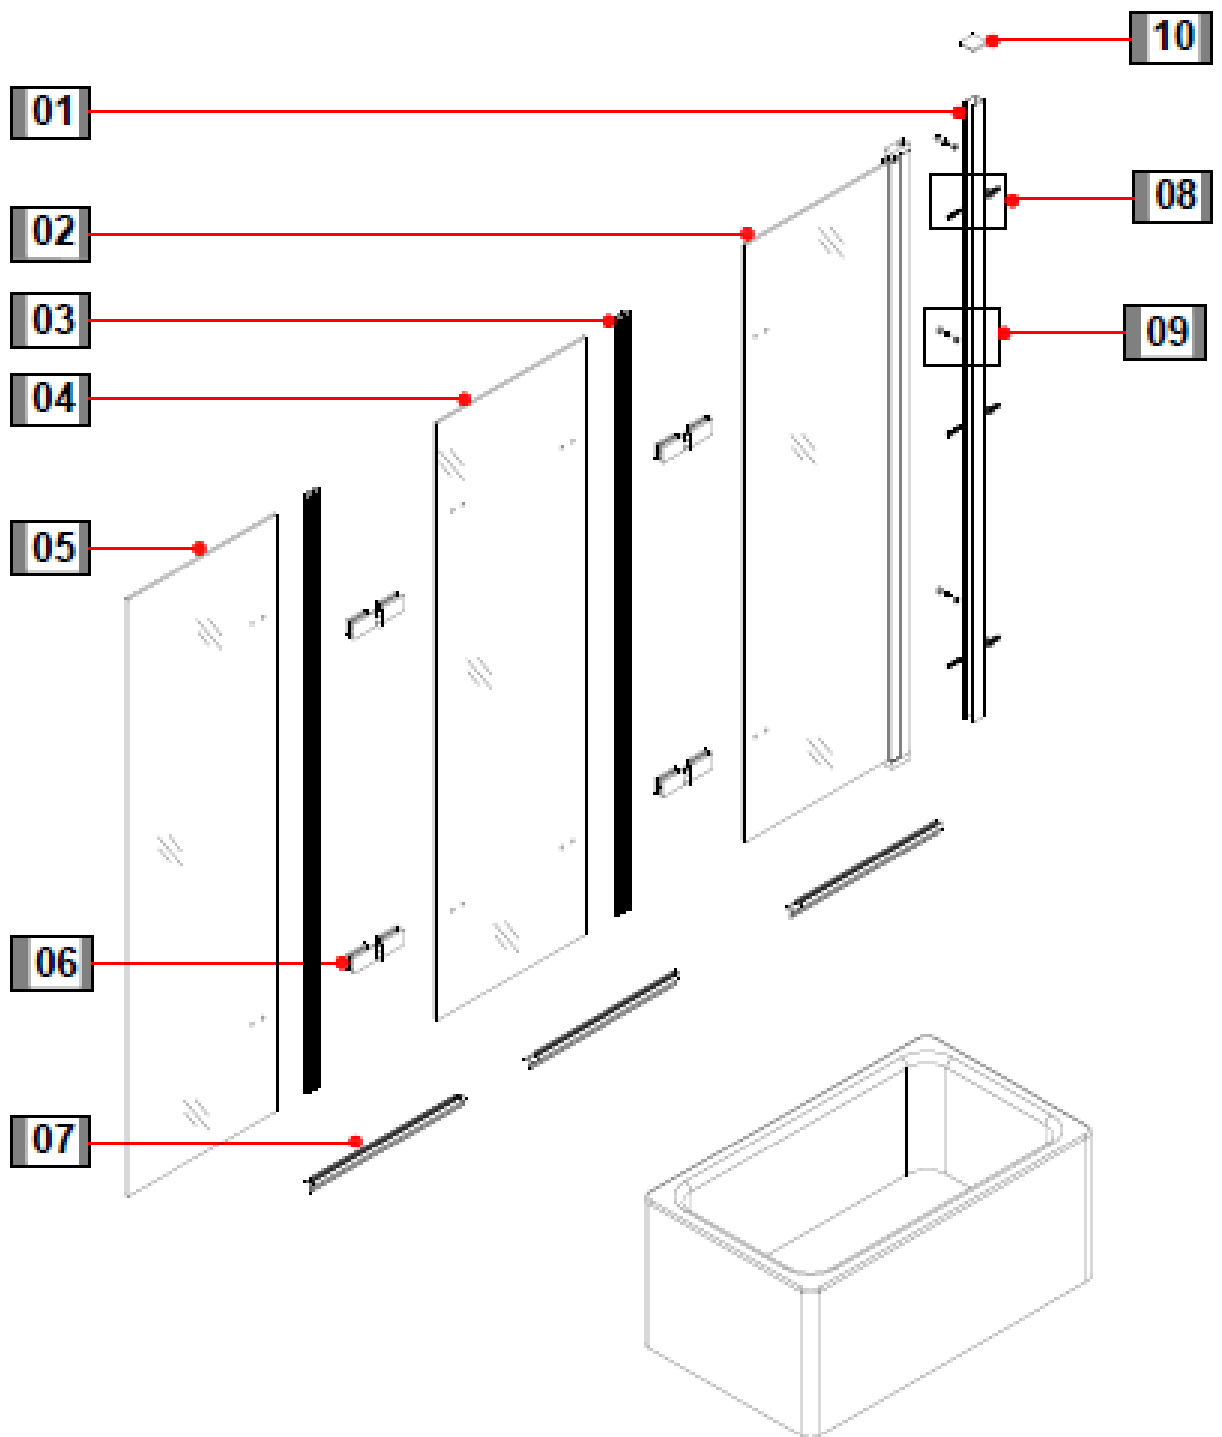


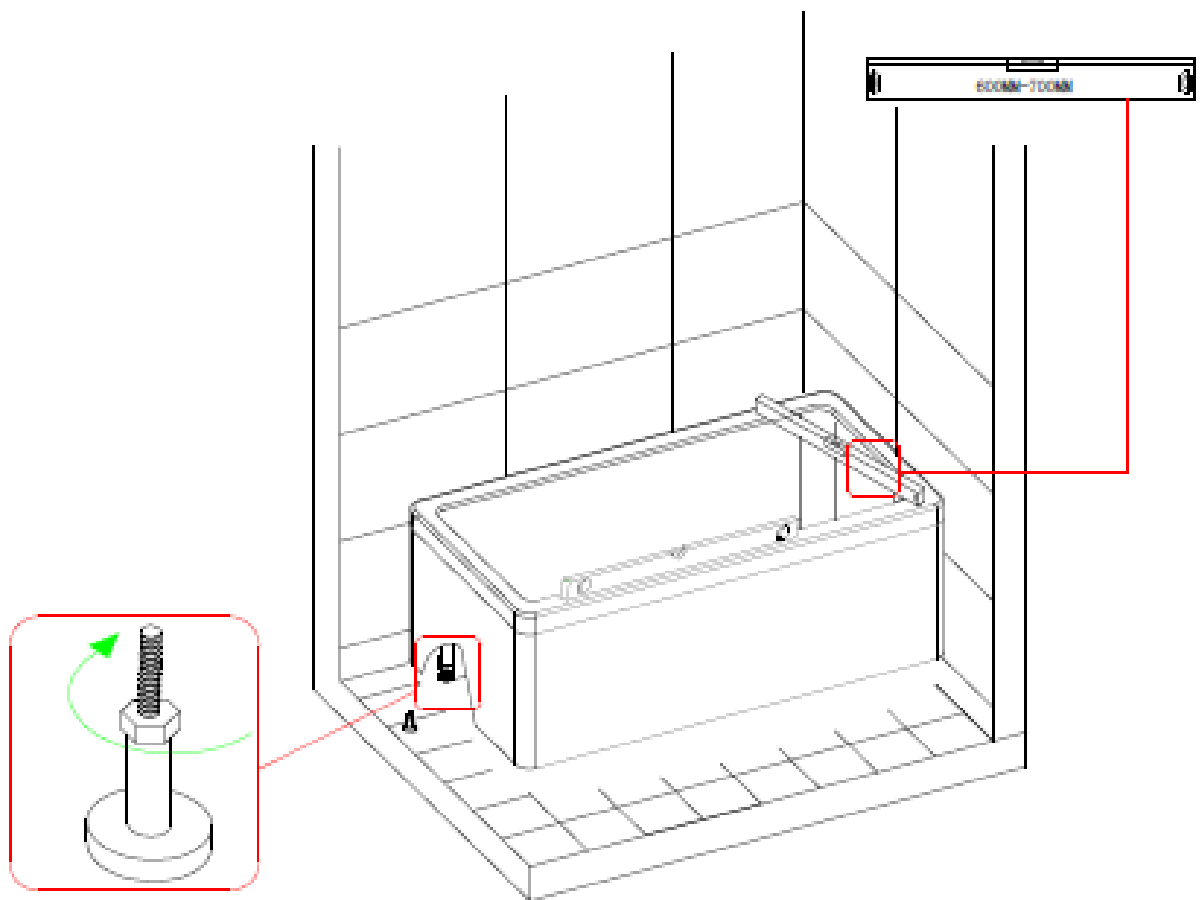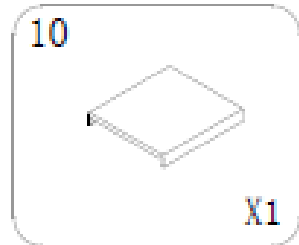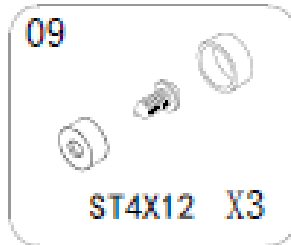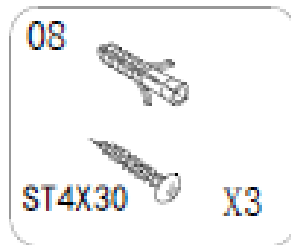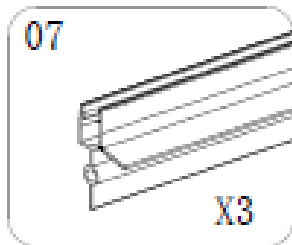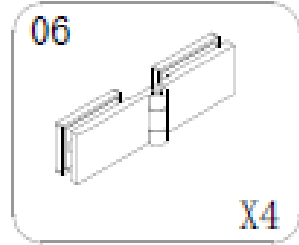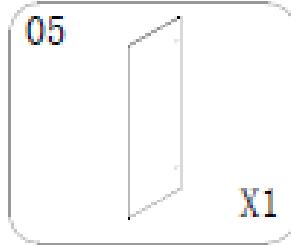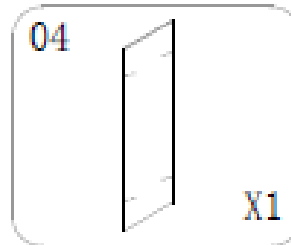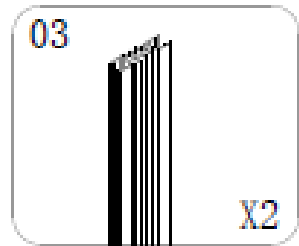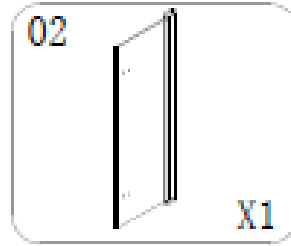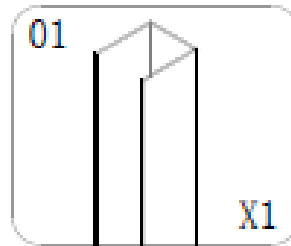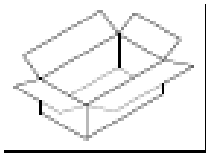







1

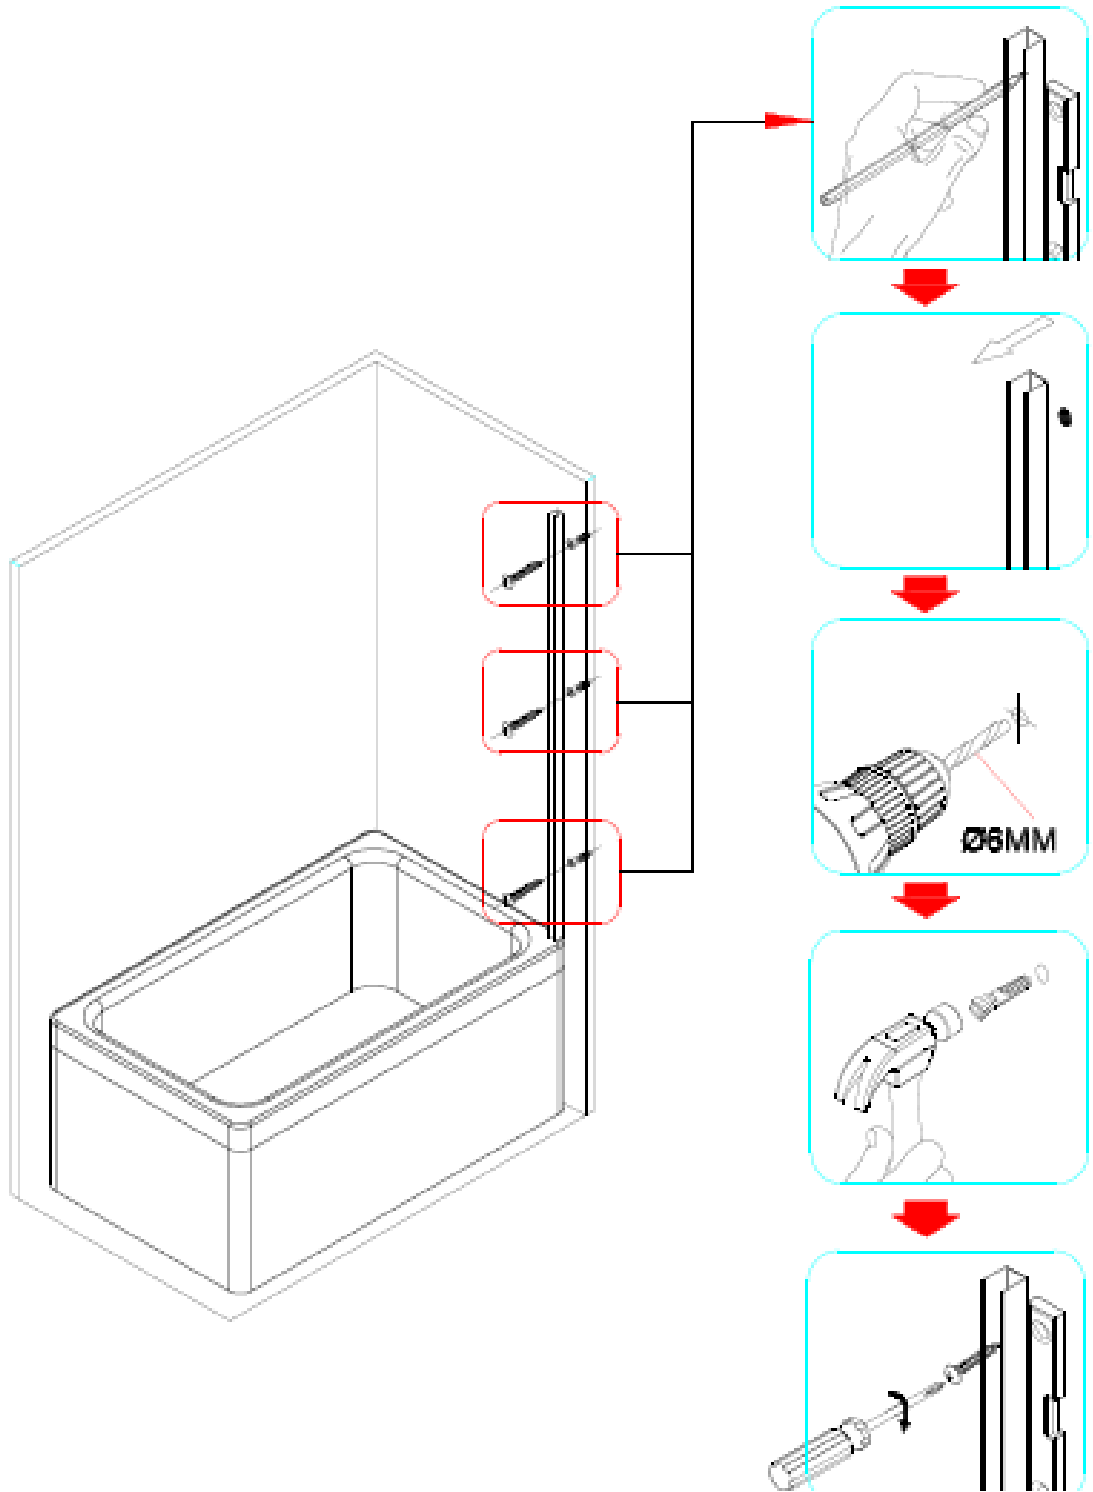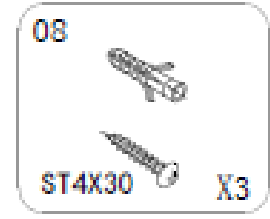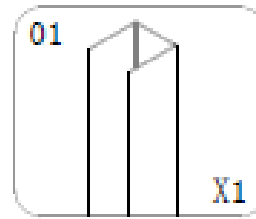




2

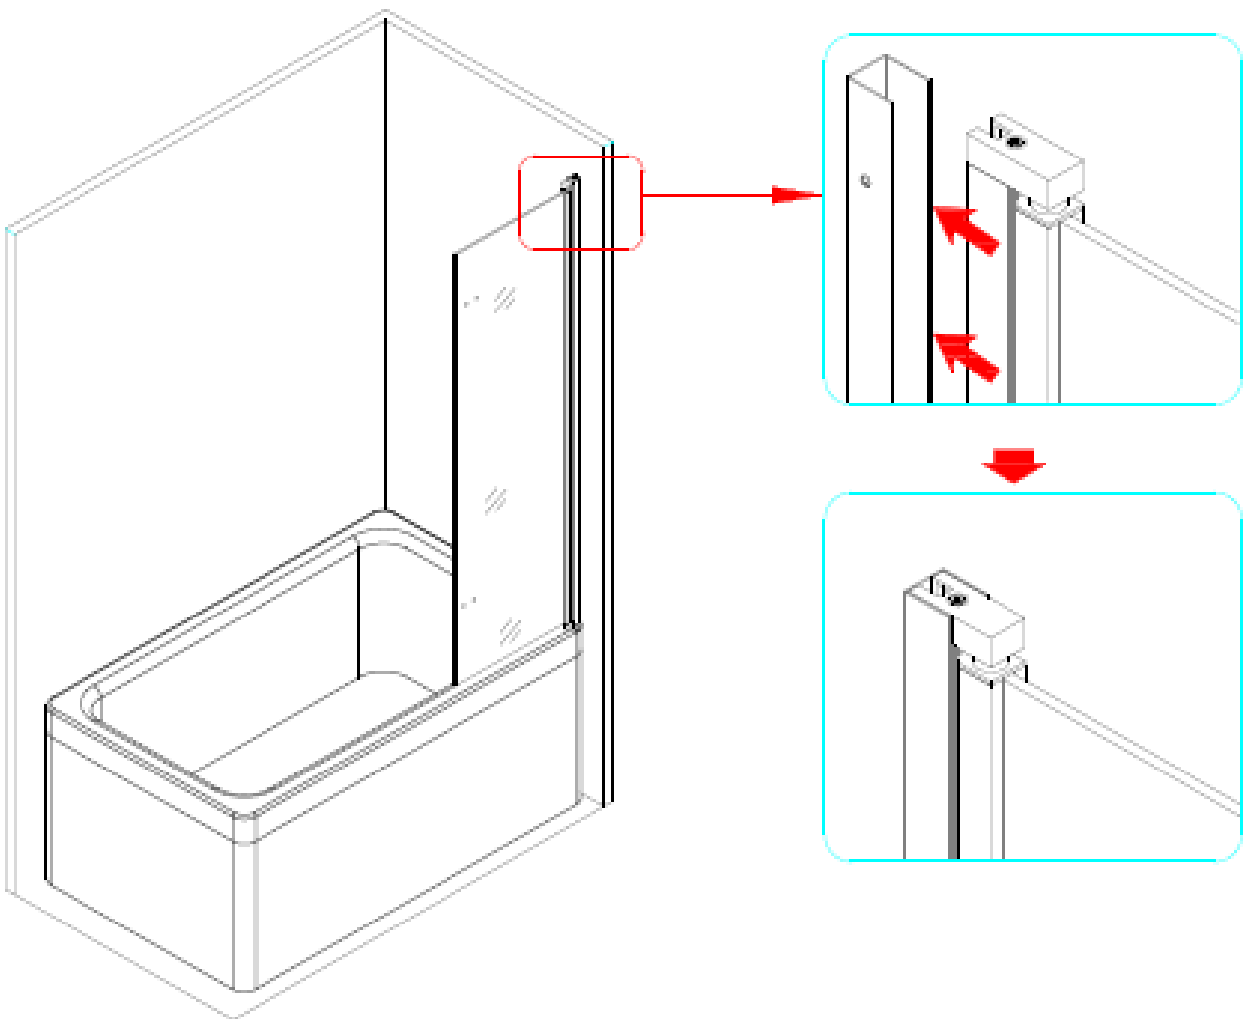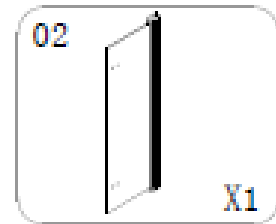

3

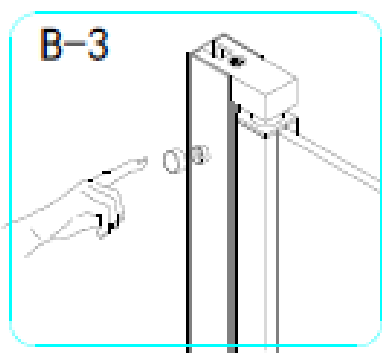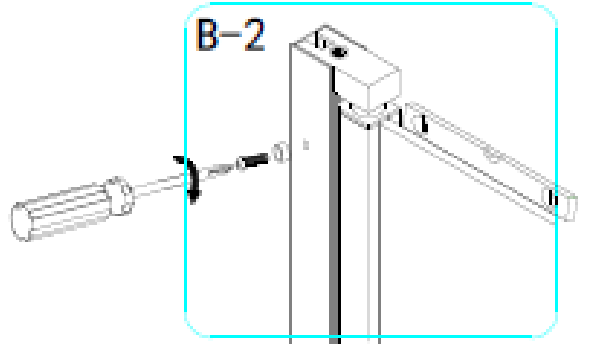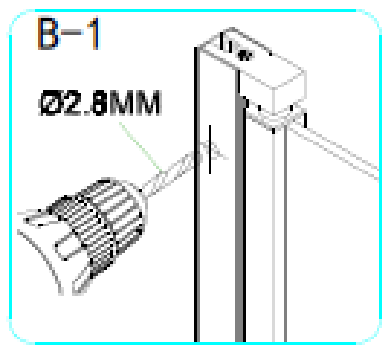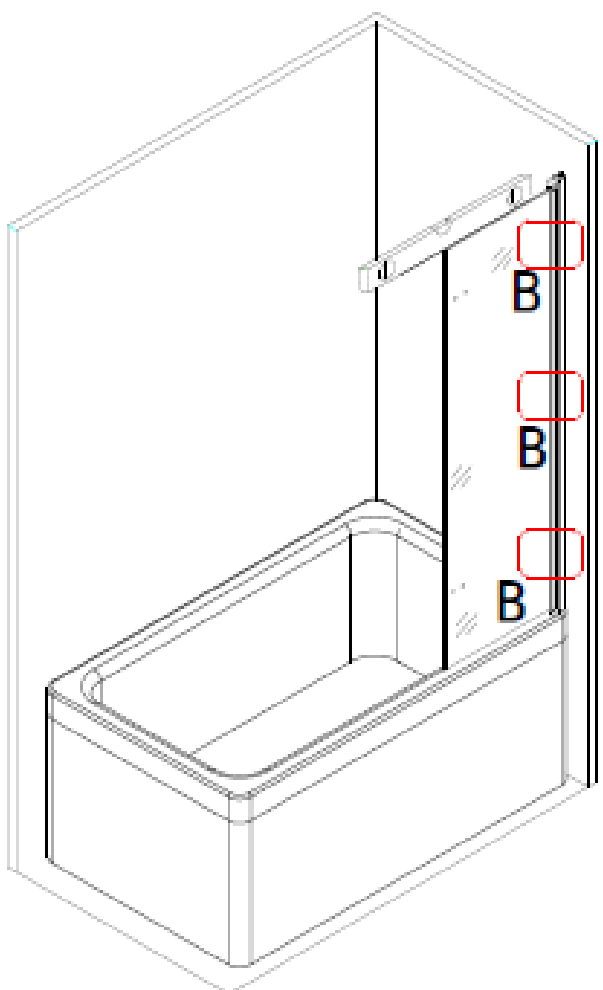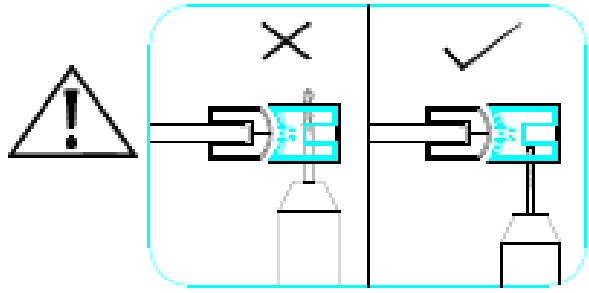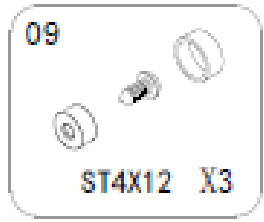

4

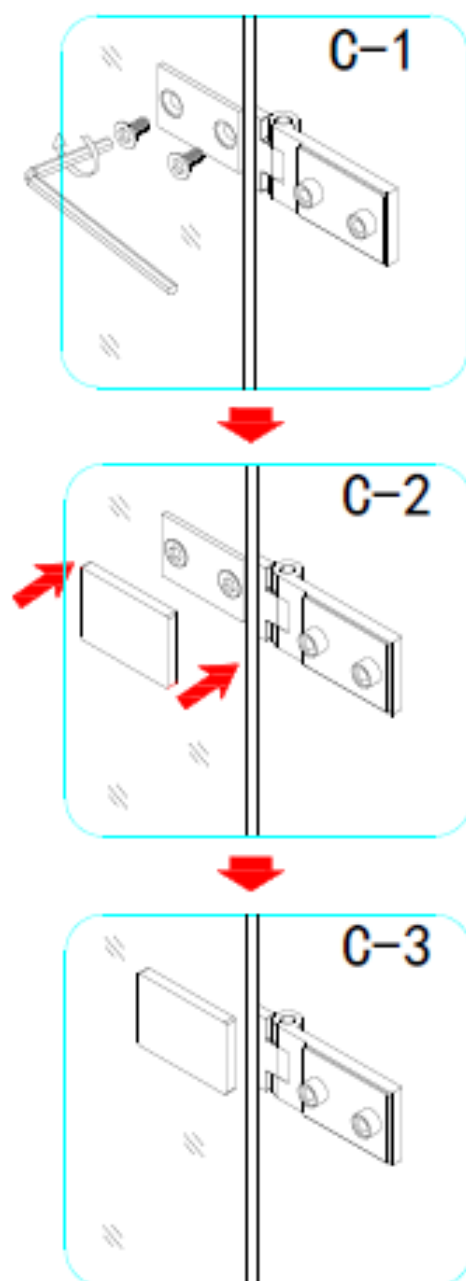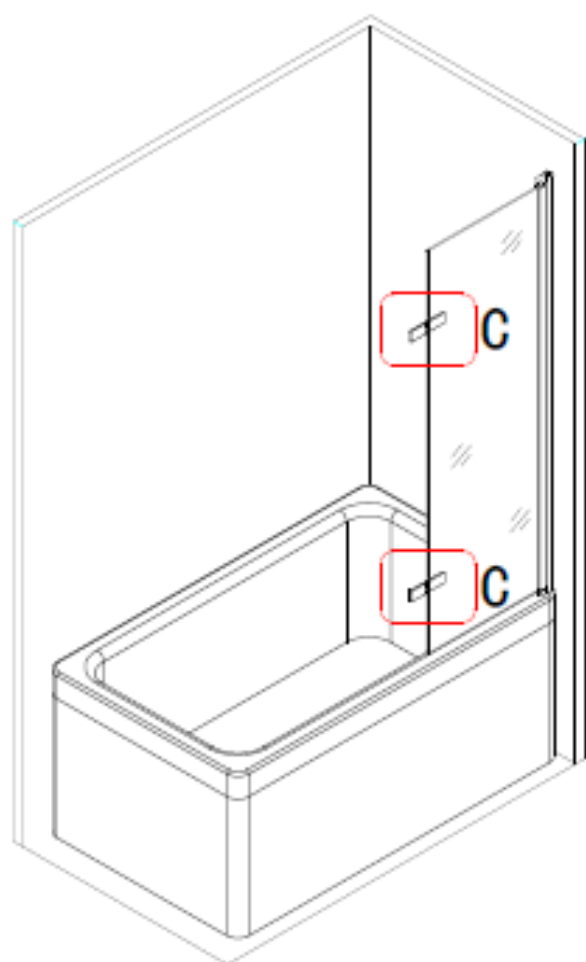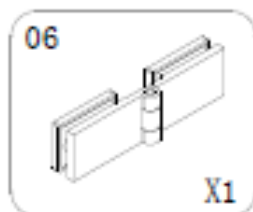







5






04



X1

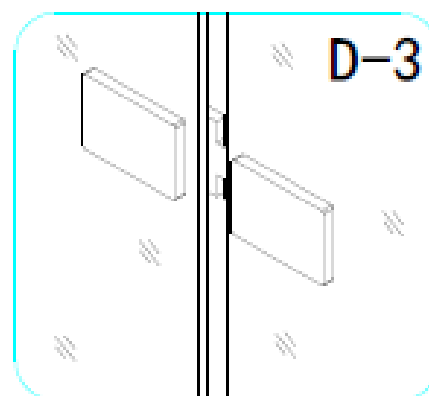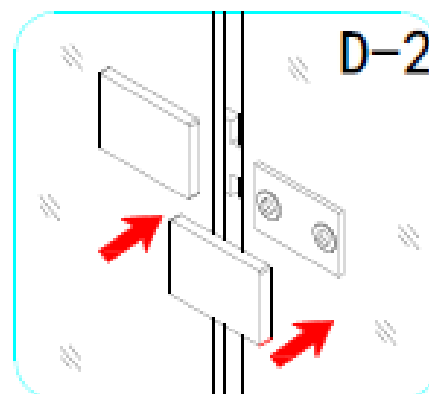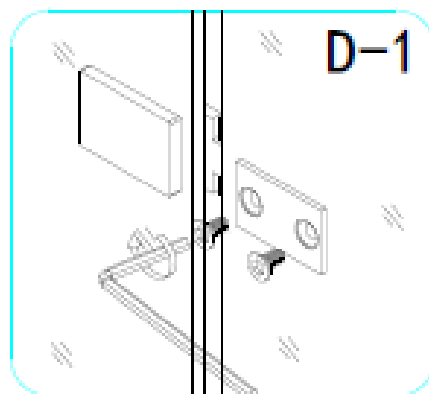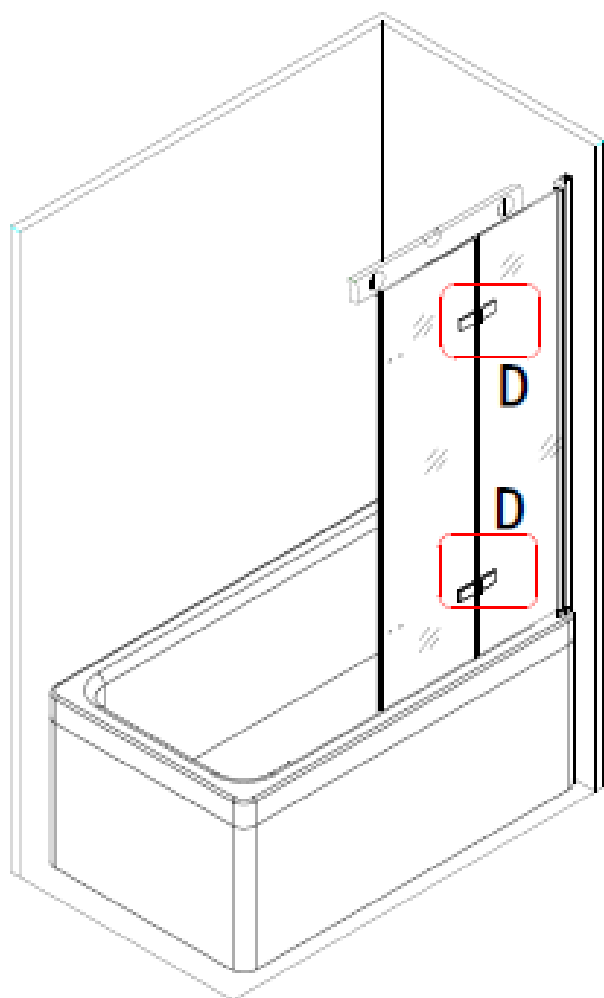

6

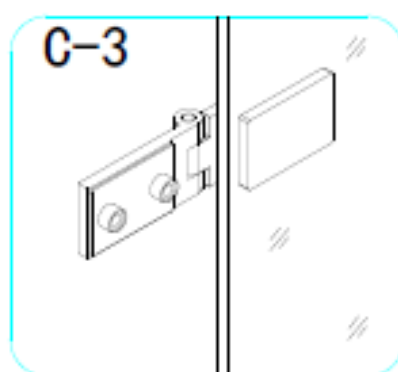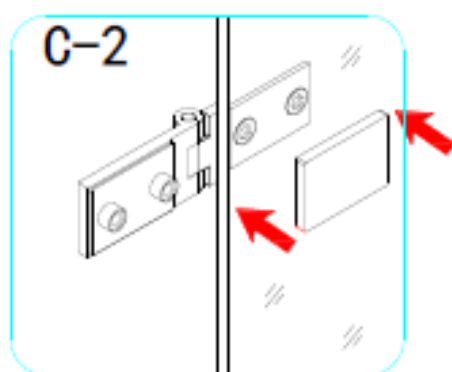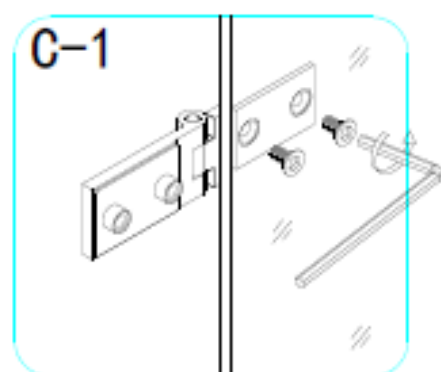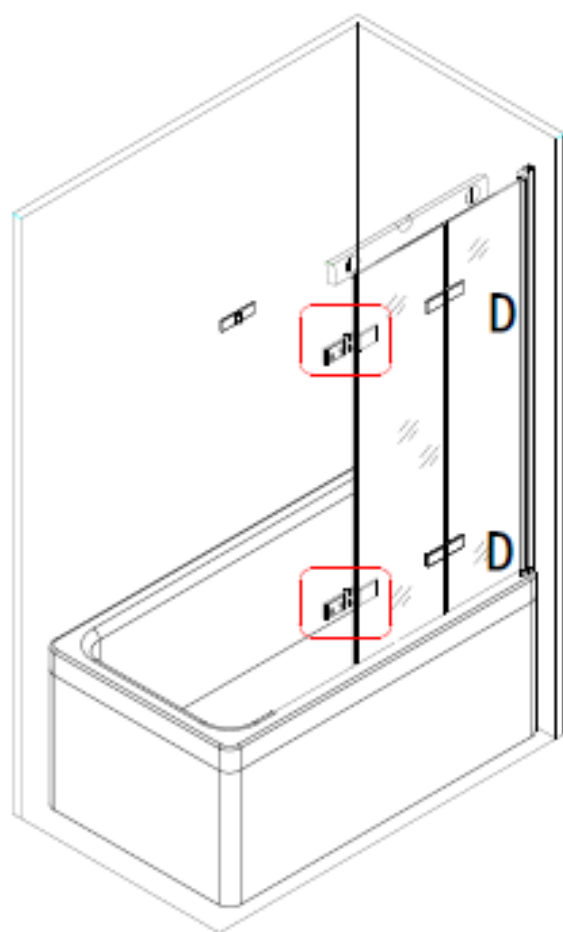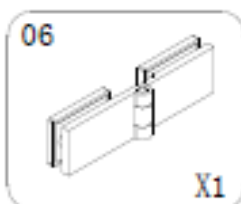


7


05




X1

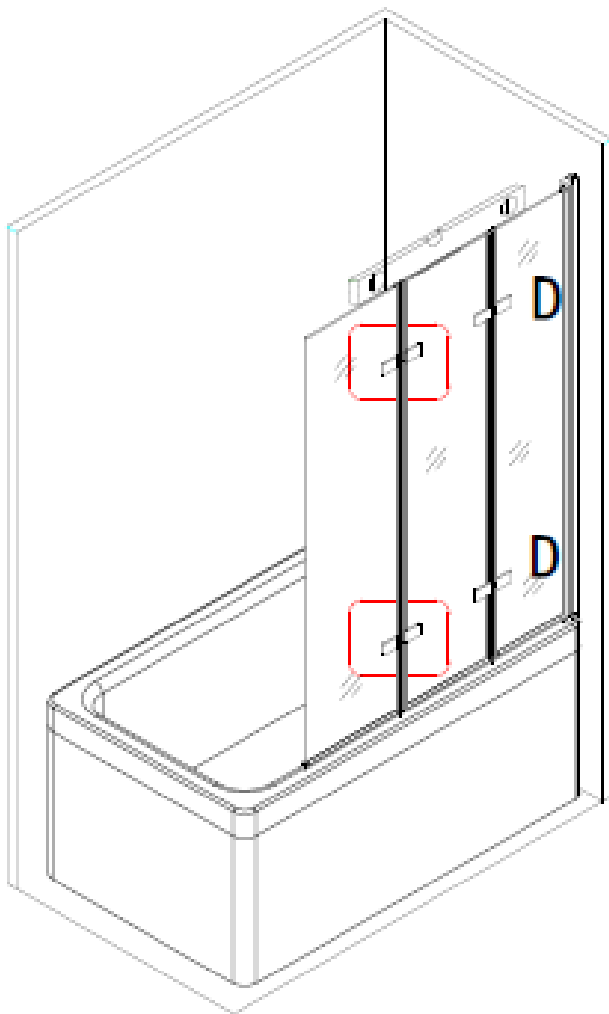

D-1

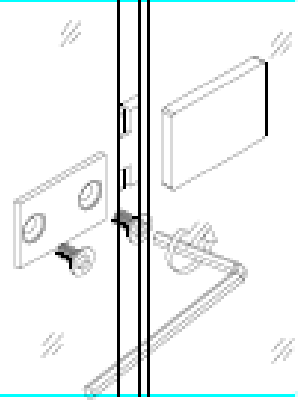

D-2

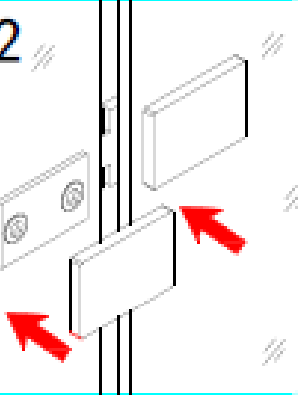

D-3

