





# Návod k montáži Čtvercový sprchový kout HYD-SK10

## Shower Cabin Installation Manual

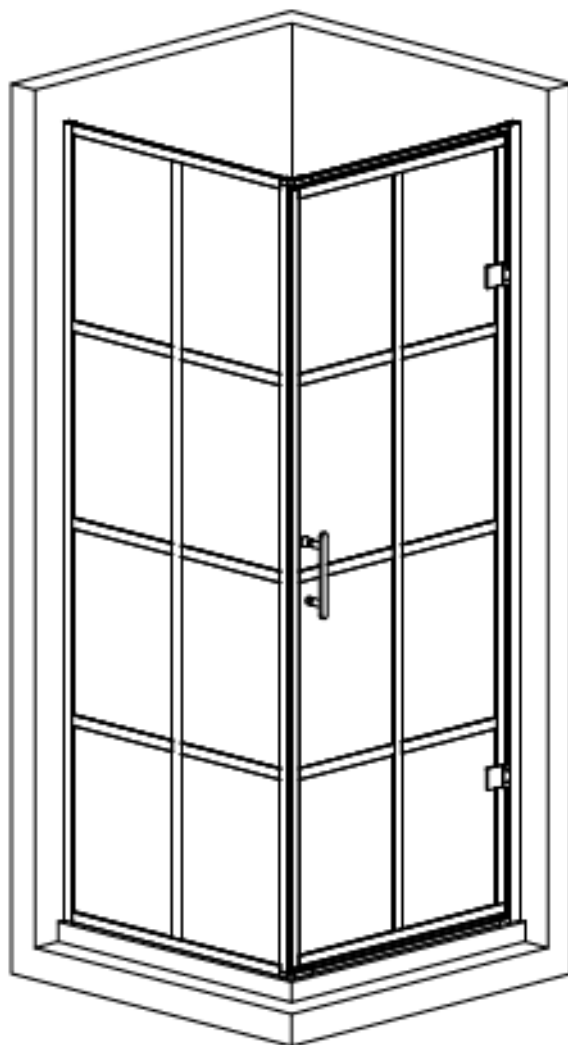

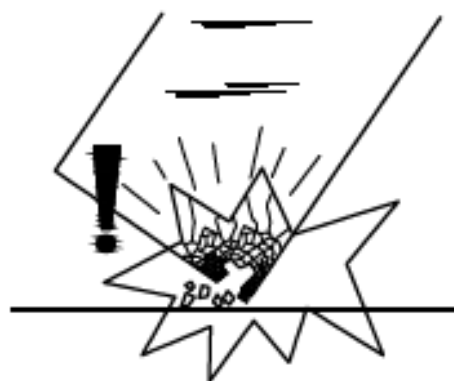

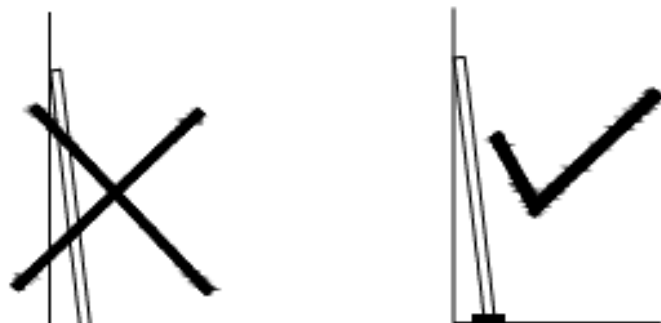

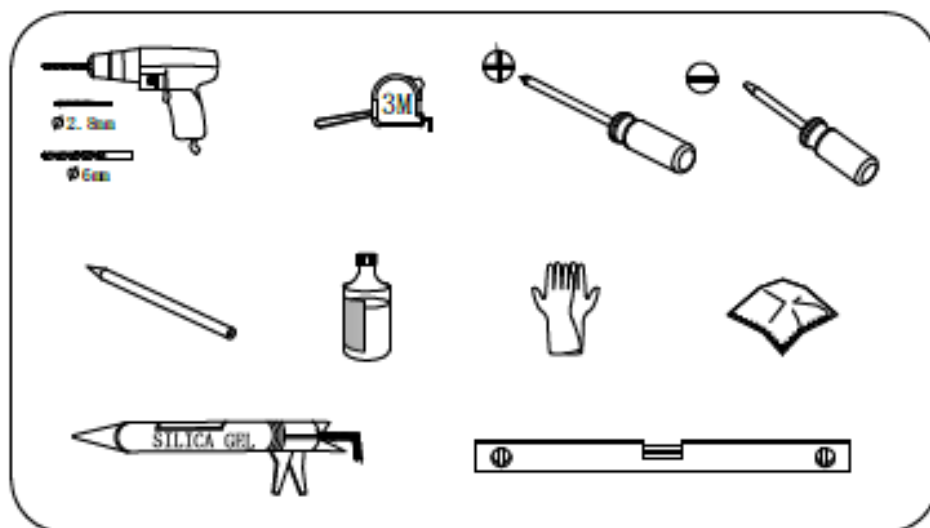




















Tool:




Configuration\ Tabl

|   |   |   |   |
|---|---|---|---|
| ①<br><br>X1          | ②<br><br>X1          | ③<br><br>X1          | ④<br><br>X2          |
| ⑤<br><br>X1          | ⑥<br><br>X1          | ⑦<br><br>X1          | ⑧<br><br>X1          |
| ⑨<br><br>X1         | ⑩<br><br>X2         | ⑪<br><br>X1         | ⑫<br><br>X1         |
| ⑬<br><br>X2        | ⑭<br><br>X6        | ⑮<br><br>X6        | ⑯<br><br>ST4X30\ X |
| ⑰<br><br>ST4X20\ X | ⑱<br><br>ST4X12\ X | ⑲<br><br>ST4X12\ X | ⑳<br><br>ST4X10\ X |
| ㉑<br><br>M5X5\ \   | ㉒<br><br>2.5\#\ \  |   |   |





1

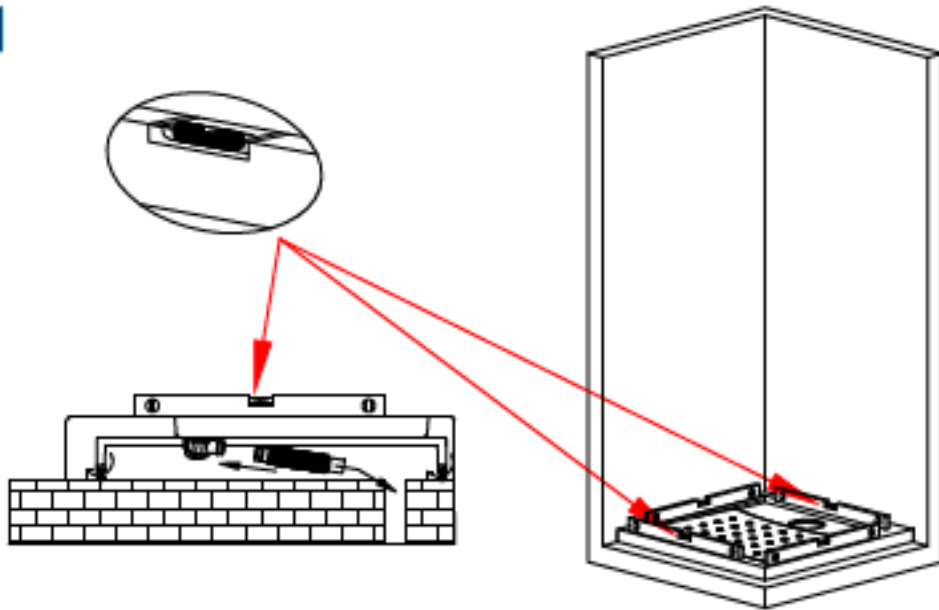






2

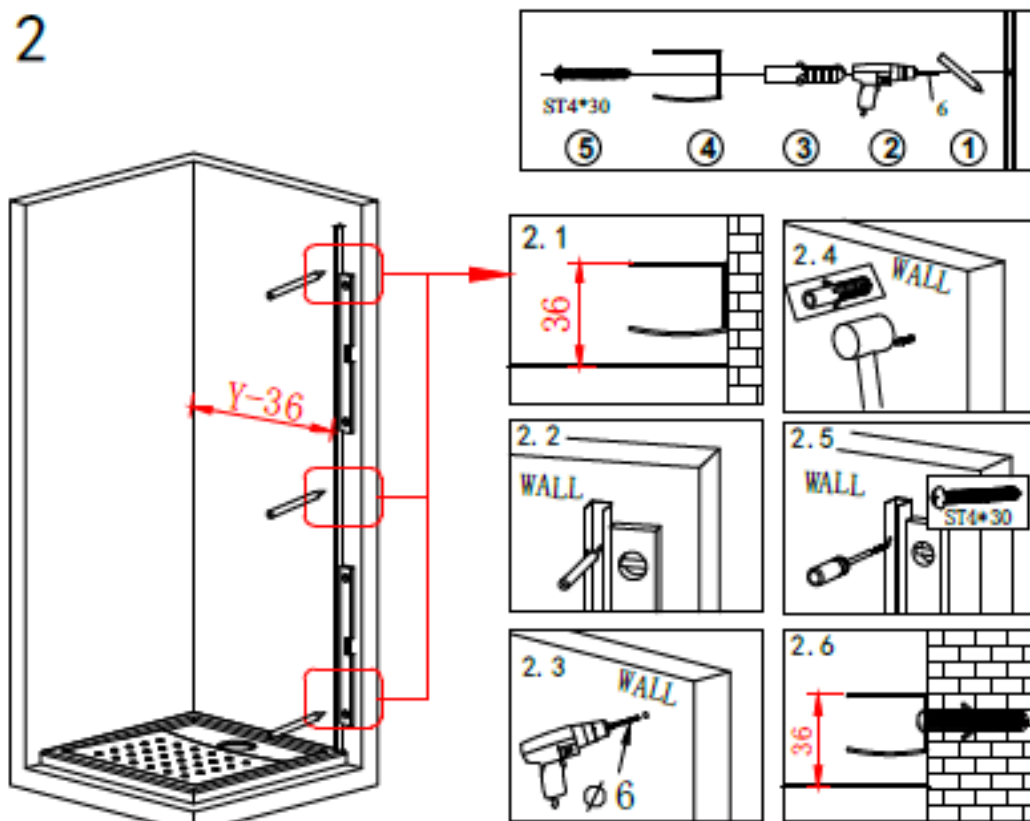






3

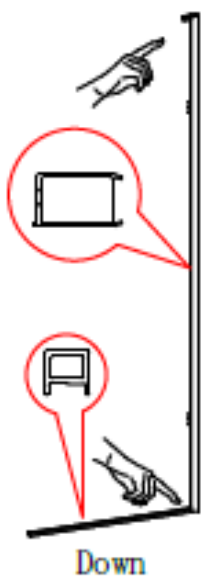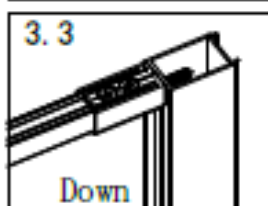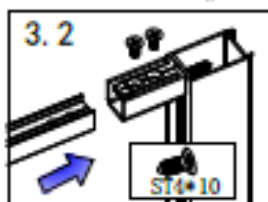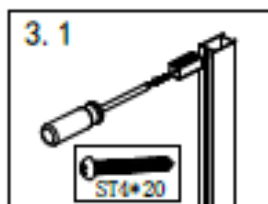


4

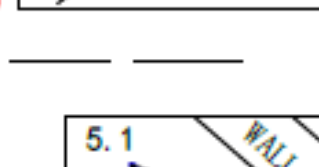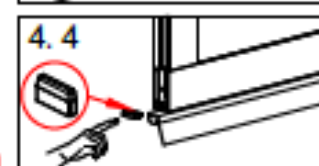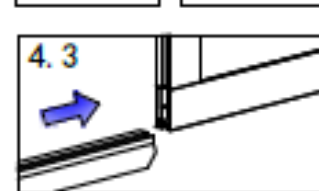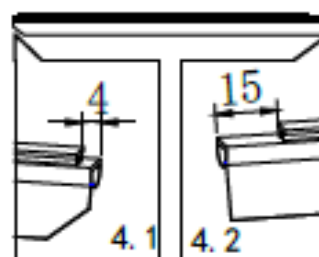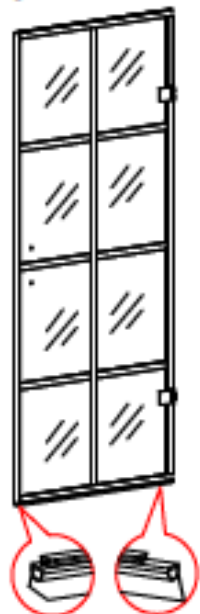


5

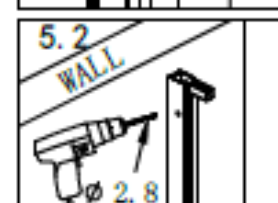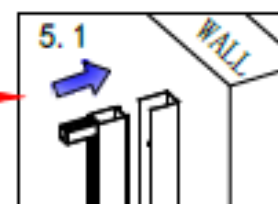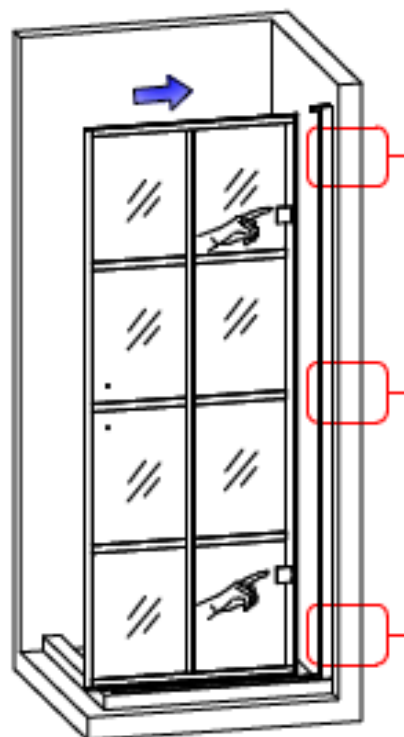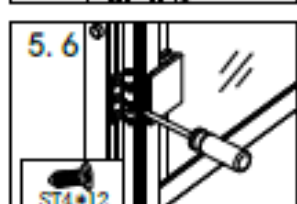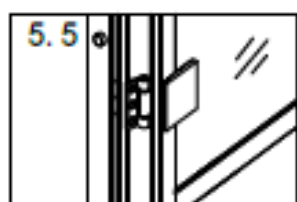







6

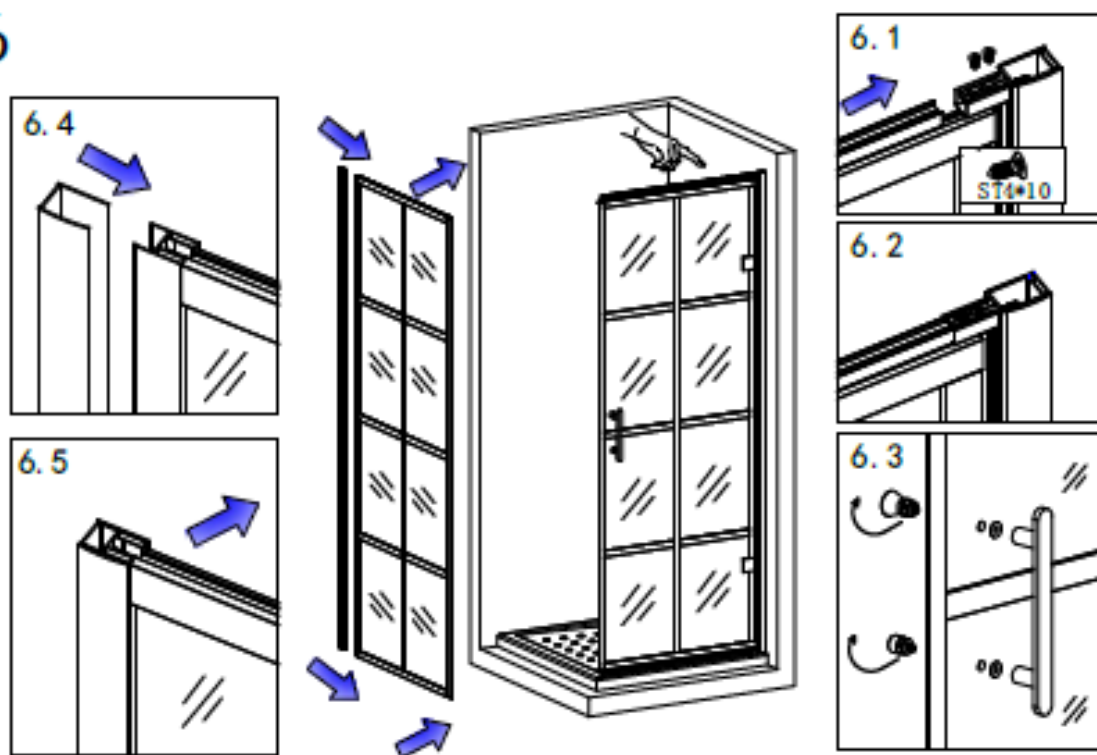








7

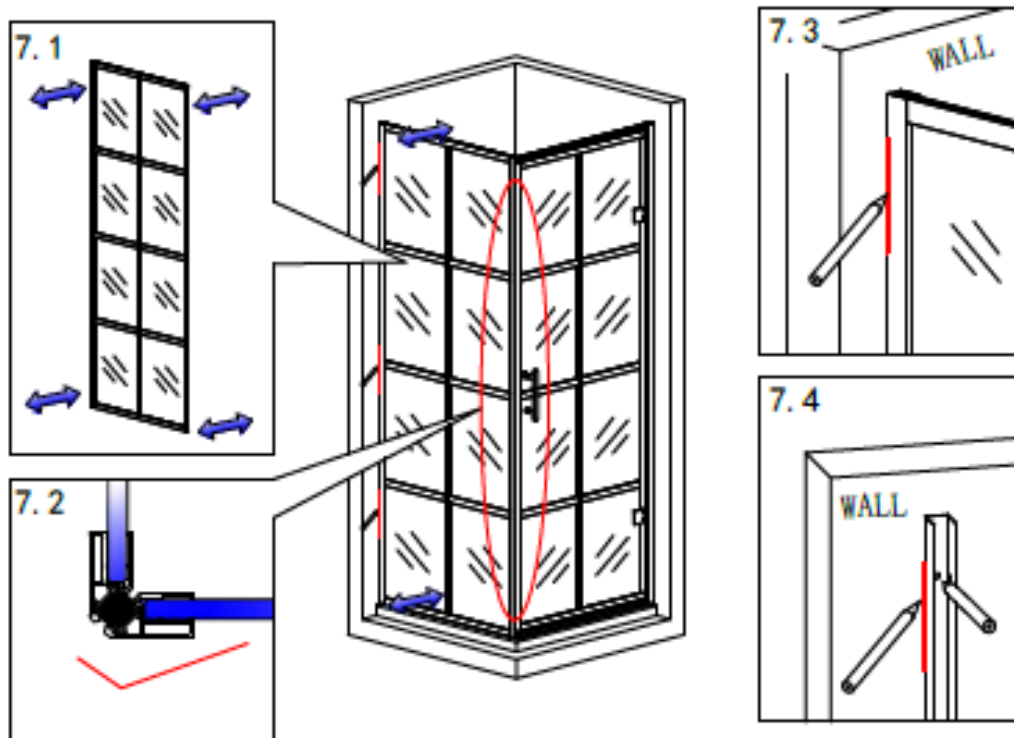






8

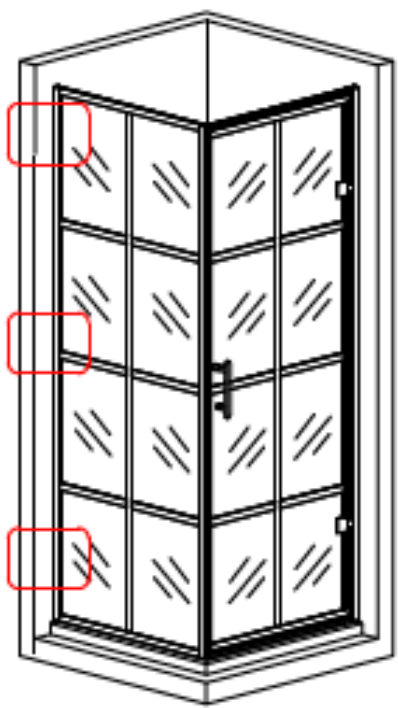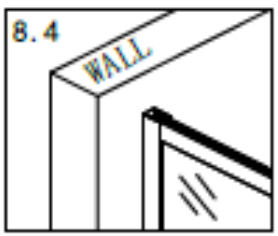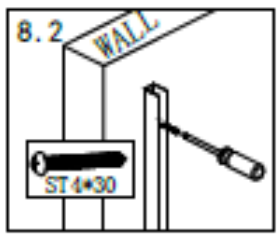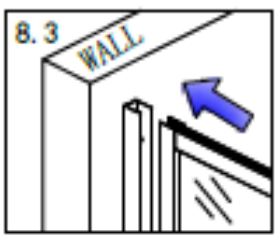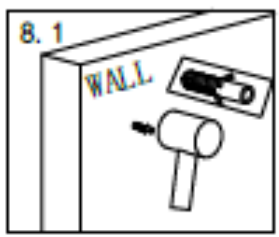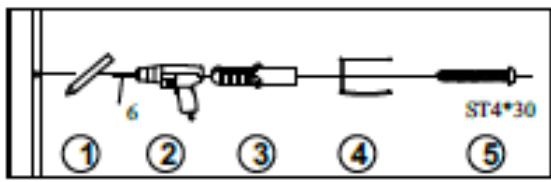

9

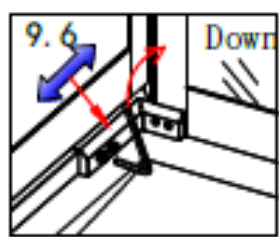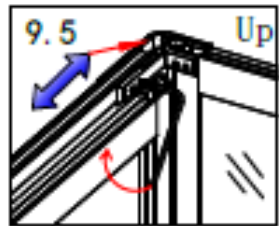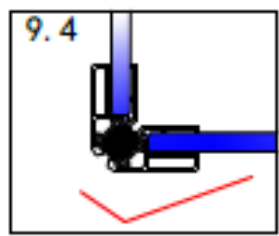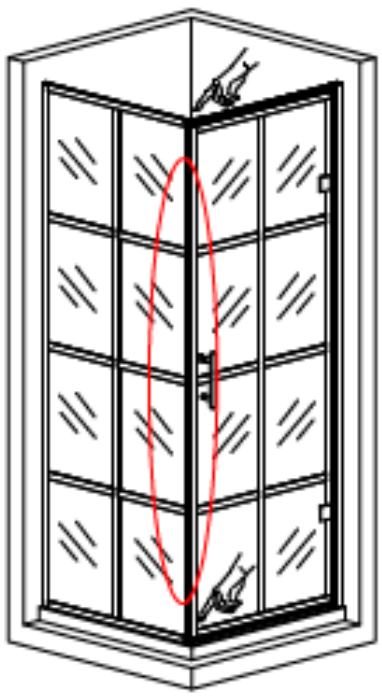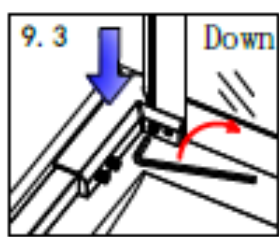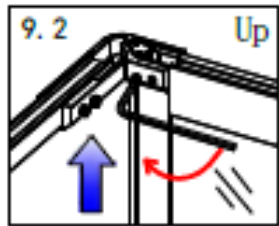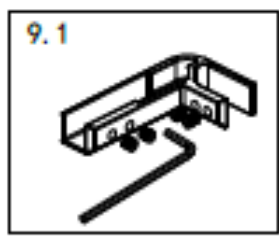

10

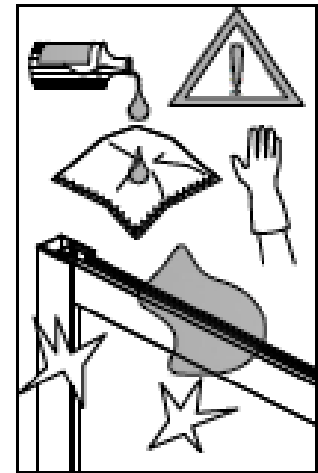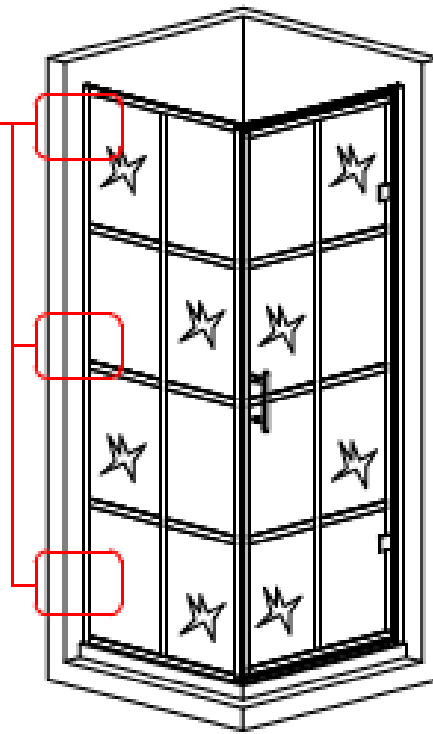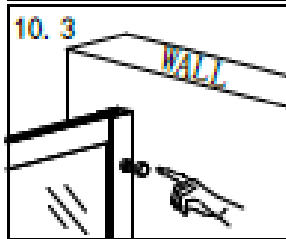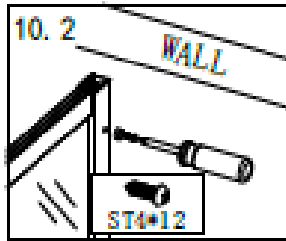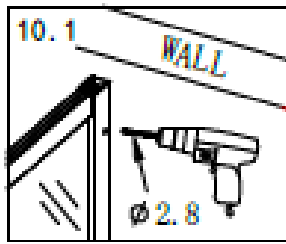

11

