


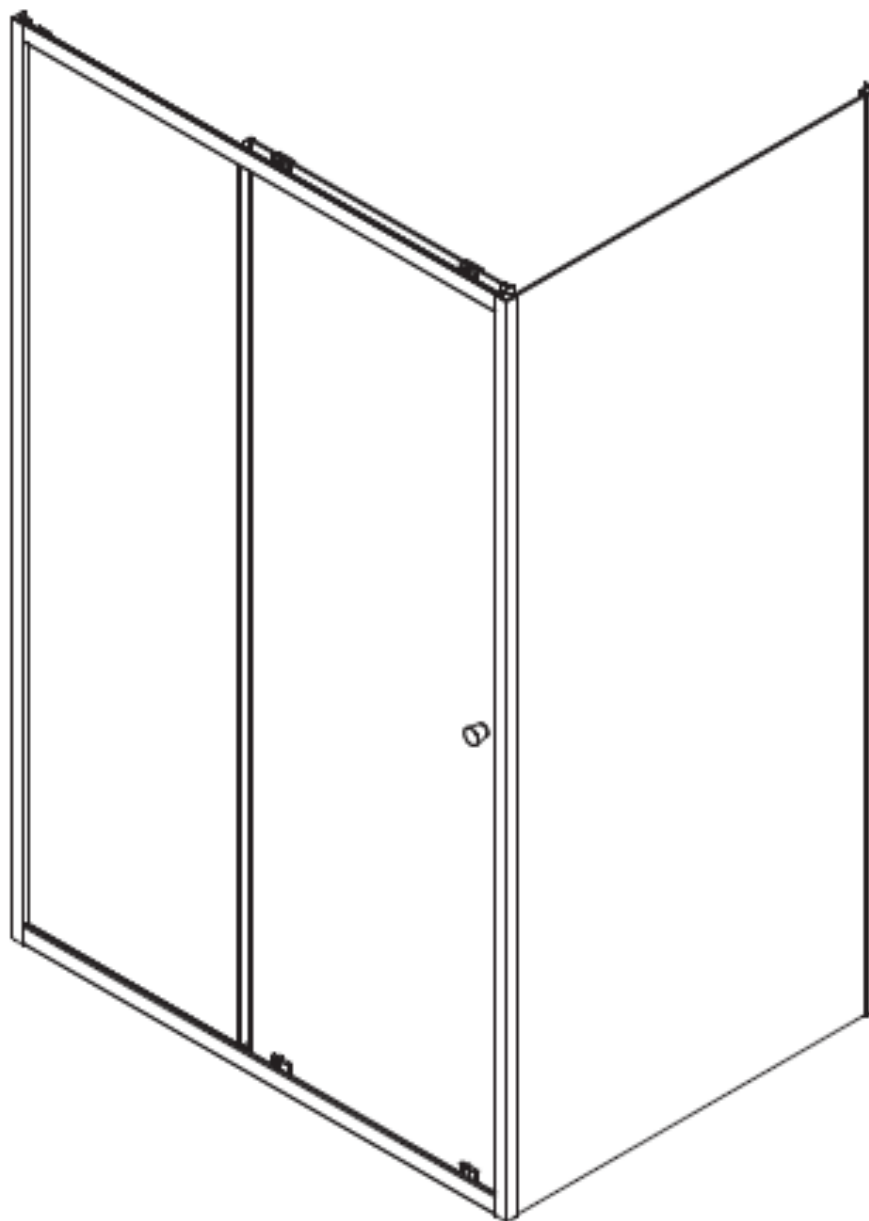


Návod k montáži


Sprchový kout REA PRIMO SLIDE

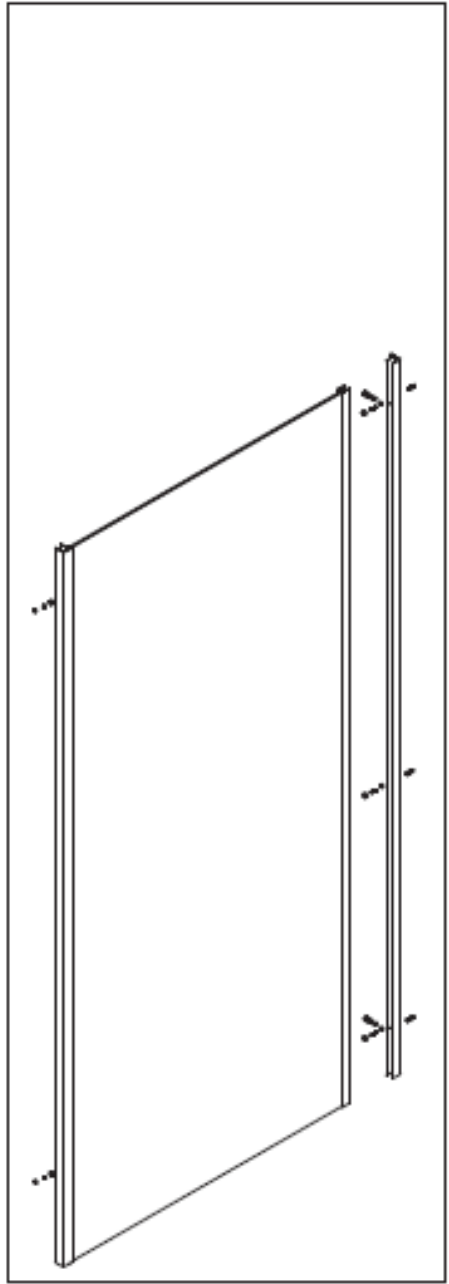

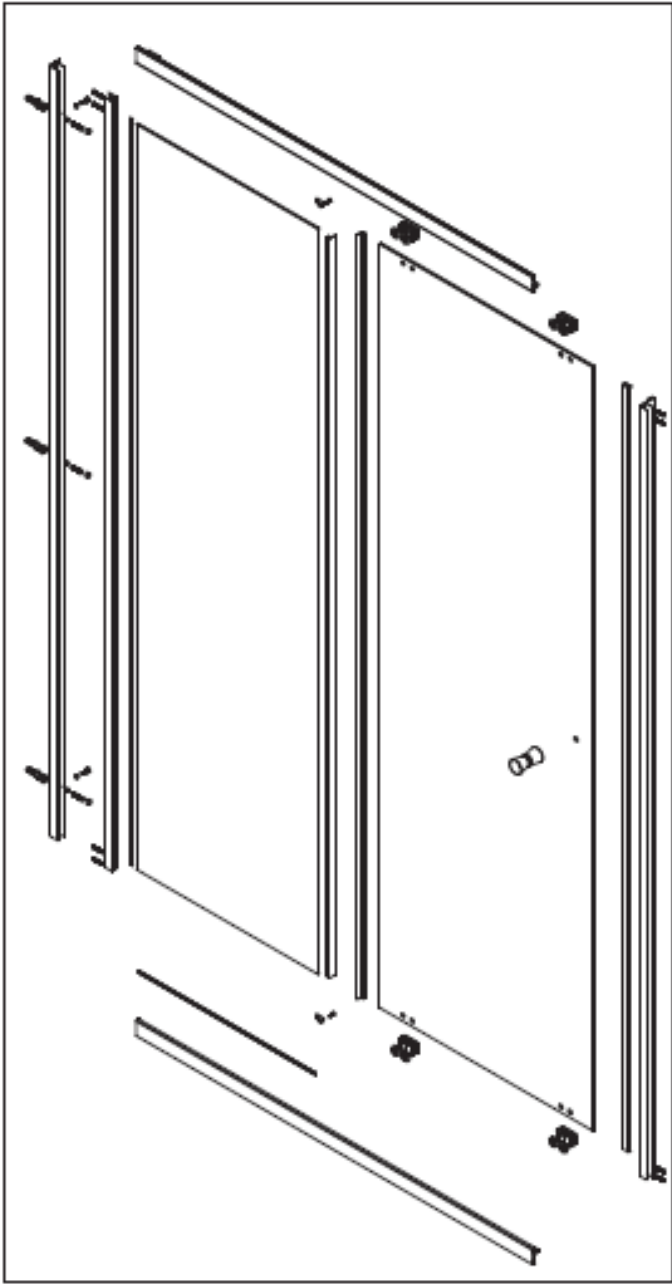


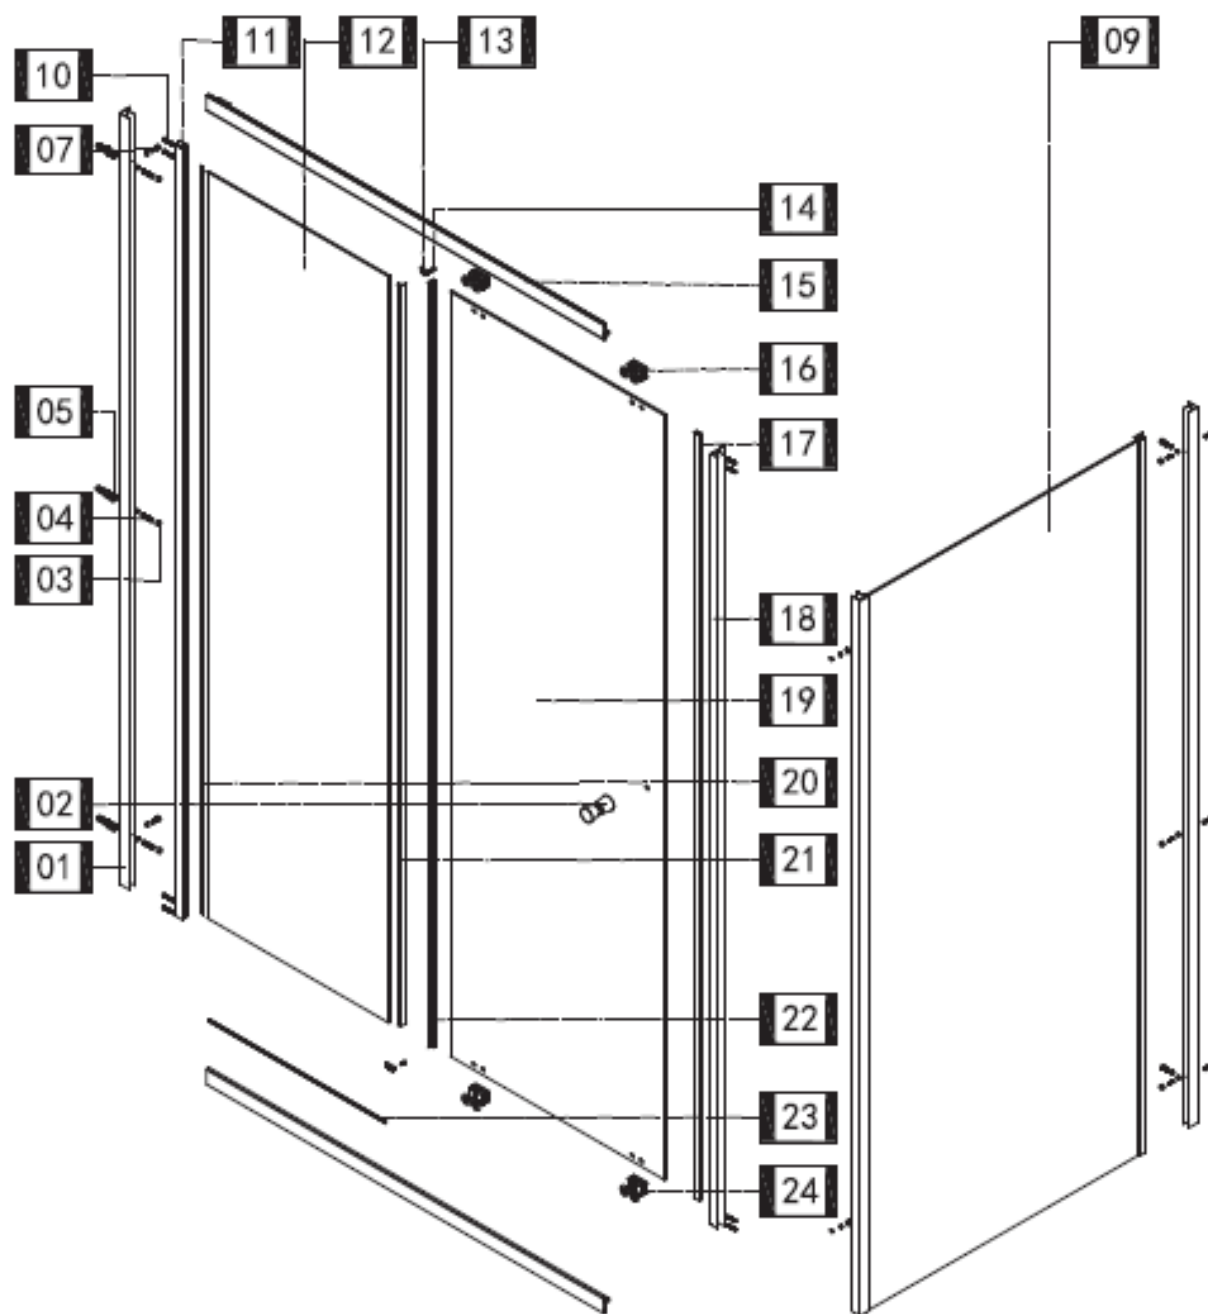


Required tools

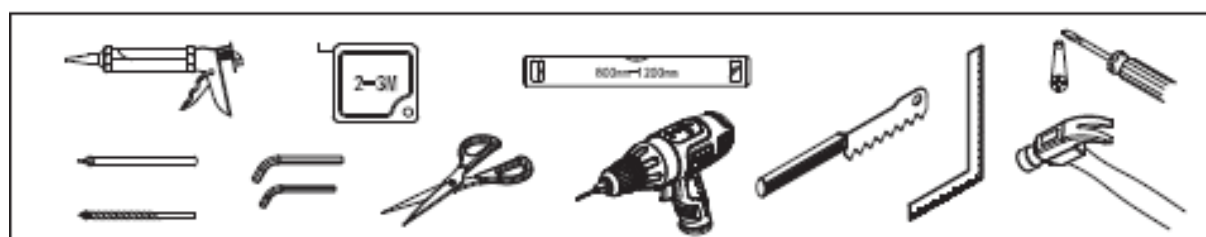

All accessories

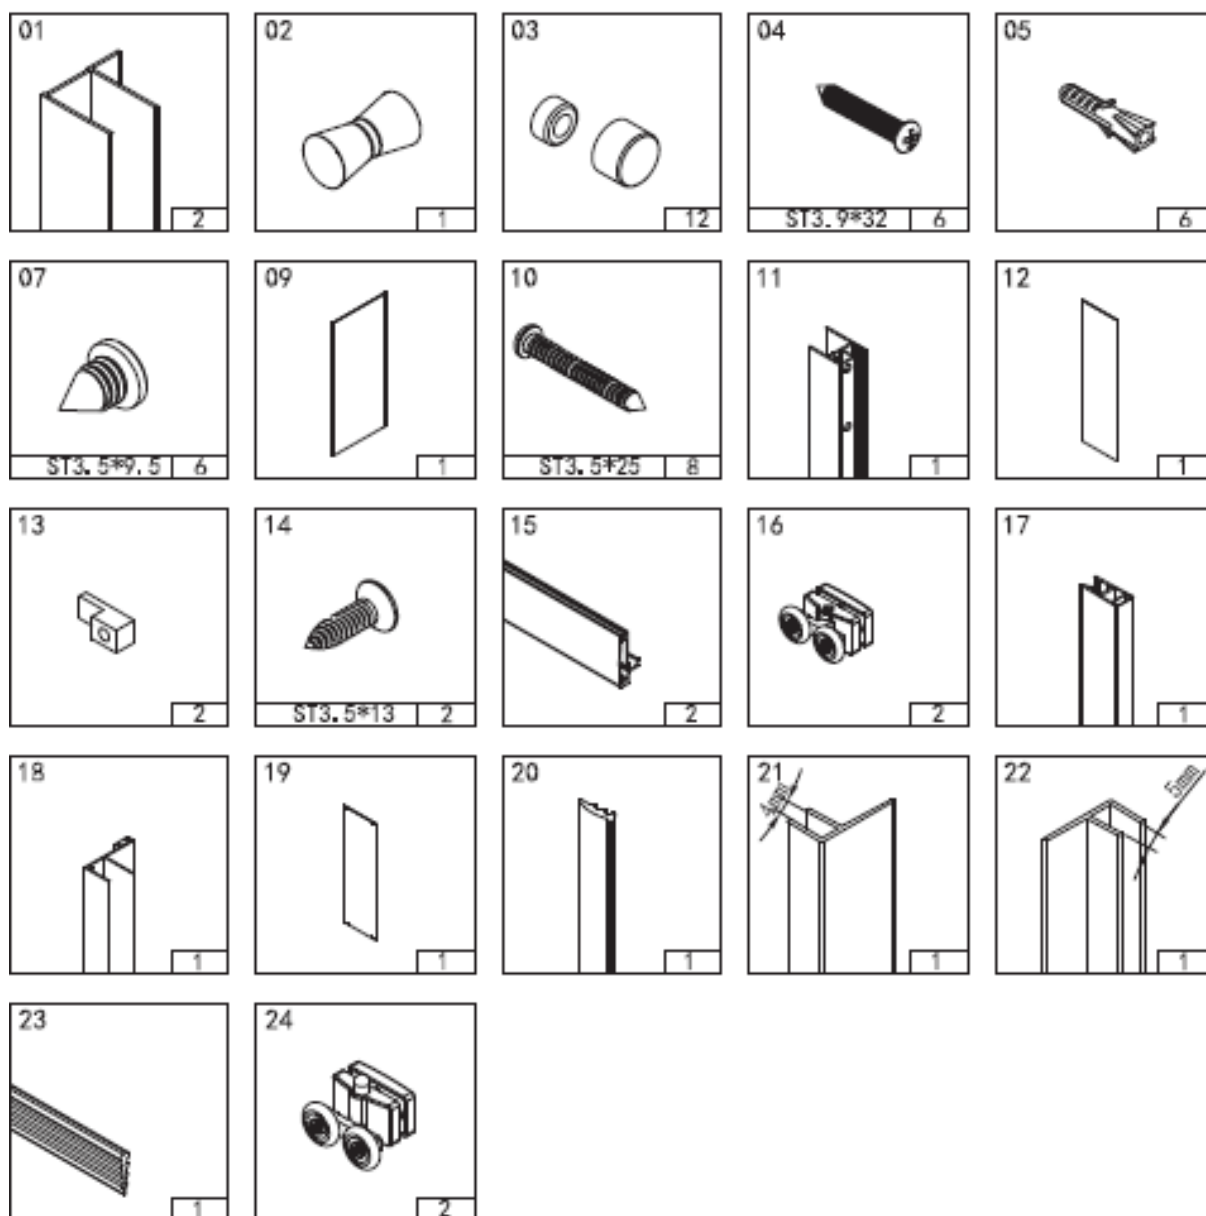

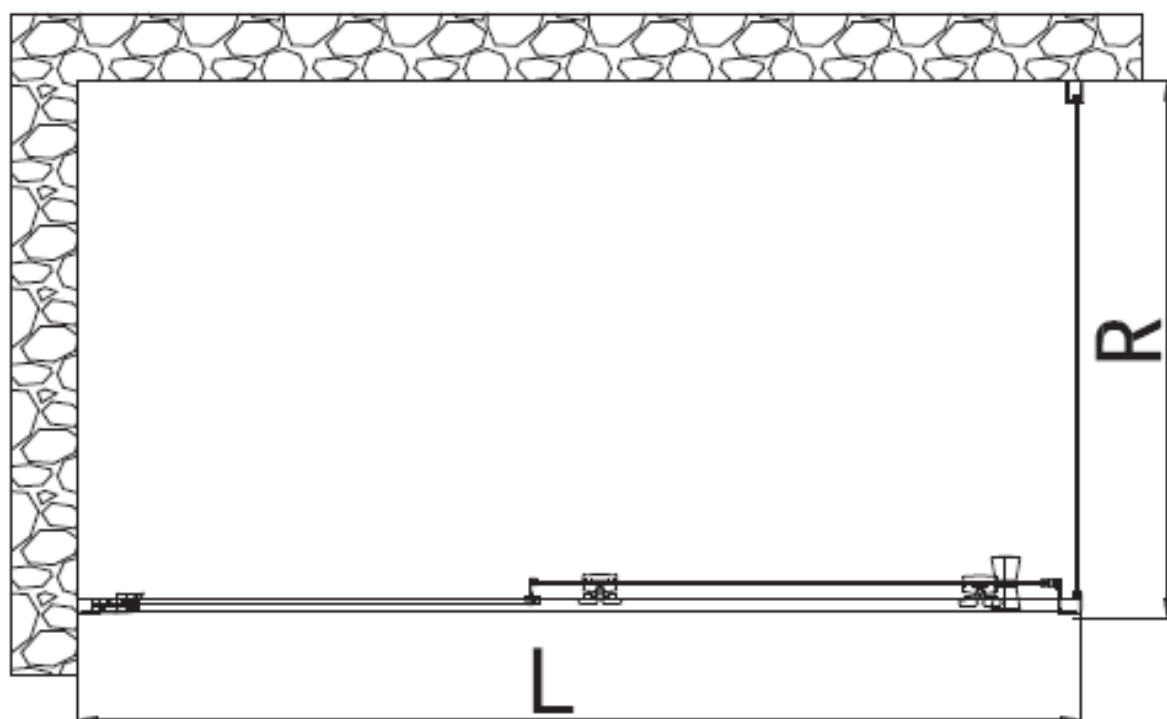

L	R
985-1015	685-700
1085-1115	785-800
1185-1215	885-900
1285-1315	985-1000
1385-1415	

